



WAGNER

Starter Small Parts



Wagner Alternators & Supplies, Inc.

Mailing Address: PO Box 2680 Chino Hills CA 91709
Corporate Office: 13352 Elliot Ave Chino CA 91710
Telephone: (800) 345-5927 (909) 465-1950 Fax: (909) 465-5032

Web Site: www.wagneralt.com

TERMS

CREDIT / PAYMENT TERMS

C.O.D. terms are cash or company check. Terms are C.O.D. until credit has been established by completing a credit application and being approved by WAGNER. An open account is Net 30 days from invoice date. Monthly statements will be mailed for your convenience.

Accounts exceeding 30 days are subject to 1.5% per month finance charge. Any account proceeding into 60 days past due status shall have all charge privileges suspended until account is paid in full, or at the discretion of management. Returned checks will be subject to a \$25.00 charge.

ORDER TERMS

Wagner Alternators & Supplies, Inc. reserves the right to accept any order or part thereof. **Orders under \$25 are subject to a \$2.50 special handling fee.**

SHIPPING TERMS

Merchandise is billed at the time of shipment. All prices are F.O.B., Chino, California, freight collect unless otherwise agreed in writing in advance by WAGNER. Orders are shipped via U.P.S., Federal Express, OnTrac or other common carriers unless otherwise specified at the time of order.

Shortages or incorrect merchandise must be reported within 10 days after receipt.

RETURNS

Any Return must be authorized in advance with a **RMA Number** and **must include** documentation of contents, original invoice number and reason for return. All boxes must have RMA number on outside of box. Returned merchandise may be subject to a 15% restocking charge and must be in the original box or package. **Unauthorized returns** are subject to 30% handling charge and/or return to customer.

LIMITED MANUFACTURER'S WARRANTY

Wagner's liability is limited to the repair, replacement or credit for the value of the product sold within one year of invoice date. If product is found to be defective, Wagner will not be responsible beyond the value of the defective piece, nor in any way be responsible for any damages or expenses caused by defective goods. Wagner is not responsible for any misuse of its products. Wagner will not be liable to replace any part which has been altered, defaced, modified, or treated in such a way the company finds unacceptable.

PRICING TERMS

Wagner Alternators & Supplies, Inc. will make every effort to keep its customers informed of any price changes. Wagner reserve the right to change prices without notice. From time to time, we may find it necessary to apply a surcharge occasionally to offset additional import costs. Any such charge will be noted on the invoice and we will do our best to inform the customer at the time the order is placed. All invoices reflect prices in effect at time of shipment.

Care is taken to ensure the accuracy of descriptions for each item, but Wagner assumes no responsibility for possible errors. **Permission to reproduce this catalog and/or contents is expressly denied.**

WAGNER NUMBERING SYSTEM

We have developed a simple yet efficient part numbering system that allows grouping of the foreign electrical components by application (Alternator, Generator, or Starter), type of part (Rectifier, Brush, Solenoid, Etc.) and Manufacturer (Bosch, Lucas, Etc.).

EXAMPLE: W080-00H

The first letter signifies type of part:

W-Wagner Import Line	C- Chrysler
D-Delco	F-Ford
L-Leece Neville	M-Motorola
N-Nikko	P-Prestolite

The first two numerical digits represent the component classification:

ALTERNATOR

01-Covers
02-Bearings, Ball & Needle
03-Brushes
04-Diodes, Diode Trios
05-Pulleys
06-Rectifiers
07-Rotors
08-Int. Voltage Regulators
09-Ext. Voltage Regulators
10-Stators
11-Alternator Small Parts
12-Alternator CE Frames
13-Alternator DE Frame
14-Wire Harness/Repair Plugs
15-Brush Holders
16-Slip Rings

18-Grease/Paint/Supplies
19-Tools/Test Equipment

GENERATOR

27-Brushes

STARTER

40-Armatures
41-Brushes
42-Bushings
45-Solenoids
46-Solenoid Caps
47-Starter Drives
48-Starter Small Parts
50-Brush Holders
51-Housings

If a third digit shows, it represents the original Manufacturer in our Import line:

0 - Bosch	3 - Fiat, Magneti Marelli	6 - Motorola
1 - Lucas, Cav, Butec	4 - SEV	7 - Ducellier
2 - Paris Rhone, Valeo	5 - All Japanese	8 - Iskra

The final two numerical digits designate the specific identification number within each category. If the part number is not immediately followed by a letter, then it is an aftermarket replacement part. Otherwise, one of the following may be used:

"N" Denotes Original OEM Part "H" Denotes Hybrid
"S" Denotes Sold in Set

Original Manufacturer names and numbers are used for reference purposes only.

BOSCH



W480-00

BOSCH SOLENOID CONTACT STUD

ALFA ROMEO	AUDI	BMW
BMW MARINE	CHRYSLER	DEUTZ-ALLIS
03922	66-91350	66-91352
16299 16401 16410 16417 16530 16531 16534 16538 16547 16548 16556 16595	0-001-107-004 0-001-107-007 0-001-107-031 0-001-107-032 0-001-107-070 0-001-108-003	0-001-107-008 0-001-107-049 0-001-108-005

8 x 23mm, 5.5mm HEAD THICKNESS

NEGATIVE, "303" SERIES CAPS, PAPER WASHER W480-11, METAL WASHER W480-83, FOR POSITIVE POST SEE W480-02

BOSCH



W480-03

BOSCH STARTER BRUSH SPRING

ACME	AGRIA	AIFO
ALFA ROMEO	AUDI	BEDFORD
14183 78GB-11059-AA	2-004-618-004	69-91703
16293 16294 16752 16949 16445 16562 16957 16999	0-001-362-020 0-001-362-034 0-001-362-036 0-001-362-037 0-001-362-039 0-001-362-040	16564 16715 17075 17077 0-001-362-035 0-001-362-038 0-001-362-041

10.4mm OD, 24mm LONG

BOSCH



W480-06

BOSCH STARTER SHIFT LEVER FORK

ACME	AGRIA	AIFO
ALFA ROMEO	ATLAS	AUDI
14105 2-001-933-174	2-001-933-148 2-001-933-175	2-001-933-149 355-24000
16293 16294 16562 16563	16445 16558 16564 16565	16559 16560 16567 16715
0-001-358-048 0-001-358-051 0-001-359-043	0-001-358-049 0-001-358-201 0-001-359-055	0-001-358-050 0-001-358-202 0-001-359-071

47mm FROM END OF FORK TO CENTER OF PIVOT

BOSCH



W480-01

BOSCH SOLENOID CONTACT STUD

ACME	AGRIA	ALFA ROMEO
ATLAS	AUDI	BEDFORD
03923	66-91351	66-91355
16293 16445 16957 16999	16558 17045 17075	16564 17076 17077 16715 17077
0-001-230-006 0-001-359-084 0-001-360-037	0-001-230-012 0-001-359-111 0-001-360-056	0-001-359-043 0-001-360-022 0-001-362-005

10 x 30mm, 5.7mm HEAD THICKNESS

POSITIVE, "402" SERIES CAPS, FOR NEGATIVE SEE W480-111

BOSCH



W480-04N

BOSCH STARTER REAR C CLIP RETAINER

ALFA ROMEO	AUDI	BMW
CHRYSLER	FARYMANN	FIAT
1-000-116-005	1-000-116-006	
16299 16334 16336	16318 16354 16355	16320 16330 16362 16396
0-001-121-423 0-001-207-003 0-001-207-016	0-001-207-001 0-001-207-008 0-001-207-020	0-001-207-002 0-001-207-014 0-001-208-009

9.4 ID x 19.3 OD x 1.5mm W

BOSCH



W480-07

BOSCH SOLENOID STRIKER PLATE

ALFA ROMEO	BMW	BOMAG
BUKH	DAF	DUCATI
16299 16304 16334 16336	16318 16339 16346	16320 16330 16353 16354
0-001-154-007 0-001-207-005 0-001-207-017	0-001-207-001 0-001-207-014 0-001-207-018	0-001-207-003 0-001-207-016 0-001-207-019

30mm x 15mm x 2mm THICK , 8.1mm ID

"302" SERIES SOLENOIDS, ALTERNATE W480-86

BOSCH



W480-02

BOSCH SOLENOID CONTACT STUD

ALFA ROMEO	AUDI	BMW
BMW MARINE	CHRYSLER	DEUTZ-ALLIS
03922	66-91353	
16299 16401 16534 16538	16410 16547 16548	16530 16531 16556 16595
0-001-107-004 0-001-107-031 0-001-107-070	0-001-107-007 0-001-107-032 0-001-108-003	0-001-107-008 0-001-107-049 0-001-108-005

8 x 30mm, 5.5mm HEAD THICKNESS

POSITIVE, "303" SERIES CAPS, PAPER WASHER W480-11, METAL WASHER W480-83, FOR NEGATIVE POST SEE W480-01

BOSCH



W480-05

BOSCH STARTER DRIVE END SEAL

MERCEDES	PORSCHE	VOLKSWAGEN
1-000-221-000	1-007-010-002	
16300 17065 16426 17122	16544 16609	16951 16958
0-001-212-005 0-001-212-209 0-001-212-213	0-001-212-006 0-001-212-211 0-001-212-214	0-001-212-208 0-001-212-212 0-001-212-400

24.5mm ID x 36.5mm OD

WITH TENSION SPRING

BOSCH



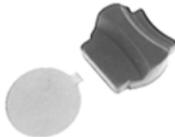
W480-08

BOSCH SOLENOID MOBILE CONTACT CLIP

ACME	AGRIA	ALFA ROMEO
ATLAS	AUDI	BEDFORD
66-91752		
16215 16223 16224	16218 16230 16238	16220 16221 16242 16245
0-001-107-004 0-001-107-010 0-001-107-049	0-001-107-007 0-001-107-031 0-001-107-070	0-001-107-008 0-001-107-032 0-001-108-003

3.5mm ID x 7mm OD x 1.1mm THICK

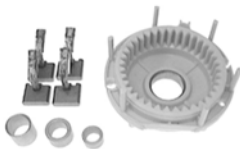
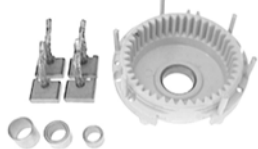
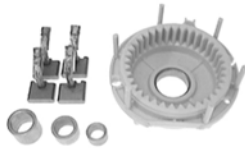
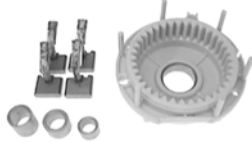
CLIP FOR REPLACING MOBILE CONTACTS ON COMMON "302", "303", "402" SERIES, ALSO CAN BE USED ON MANY JAPANESE APPL.

BOSCH  W480-09 BOSCH SOLENOID MOUNTING SCREW ACME AVIA ALFA ROMEO BAKER AUDI BAUDOIN MARINE 1-003-421-007 1-003-421-011 16294 16299 16531 16548 0-001-106-011 0-001-106-019 0-001-106-409 5mm x 8mm x 32.2mm L 1-003-421-008 1-003-421-013 16408 16445 16556 16557 0-001-106-015 0-001-106-403 0-001-107-003 1-003-421-010 1-003-421-014 16450 16530 16616 16617 0-001-106-018 0-001-106-405 0-001-107-004 "303", "402" SERIES SOLENOIDS	BOSCH  W480-101 BOSCH END PLAY SHIM ALFA ROMEO DAF AUDI FARYMANN BPM FERRARI 1-000-101-017 5268063 16299 16300 16332 16334 0-001-205-001 0-001-207-003 0-001-207-014 12.9 x 19.3 x 0.2mm THICK 16318 16319 16336 16339 0-001-207-001 0-001-207-005 0-001-207-016 16320 16330 16346 16354 0-001-207-002 0-001-207-008 0-001-207-017 STEEL	BOSCH  W480-104 BOSCH PMGR TRAIN ASSEMBLY CHRYSLER DODGE PLYMOUTH 1-006-200-007 1-006-200-032 16963 16976 17210 0-001-108-013 0-001-108-046 0-001-108-105 CW 98mm SHAFT x 11mm OD 0-001-108-032 0-001-108-066 0-001-108-045 0-001-108-070
BOSCH  W480-10 BOSCH STARTER PARTS SET DODGE PLYMOUTH 1-007-010-020 16418 0-001-208-403 SHIFT LEVER SEAL	BOSCH  W480-102 BOSCH CE CAP SEAL-DD ALFA ROMEO BOMAG AUDI BPM BMW BUCH 1-000-206-000 16296 16299 16327 16330 0-001-107-044 0-001-108-149 0-001-110-041 20 x 26 x 1.3mm 1-007-010-004 16300 16318 16332 16334 0-001-108-003 0-001-110-016 0-001-110-052 16319 16320 16336 16339 0-001-108-120 0-001-110-039 0-001-110-053 RUBBER, CE CAP SEAL	BOSCH  W480-105 BOSCH PMGR TRAIN ASSEMBLY AUDI VOLKSWAGEN 1-006-200-055 17231 17417 0-001-110-062 0-001-110-086 CCW 115mm SHAFT x 12mm OD 0-001-110-084 0-001-110-087 0-001-110-085 0-001-110-118
BOSCH  W480-100 BOSCH FIELD COIL GROMMET BMW MERCEDES BMW MARINE VOLKSWAGEN HATZ 1-002-380-007 16299 16543 16544 16617 17043 18234 0-001-312-101 0-001-314-005 0-001-314-027 10.2 x 10.2 x 14.5mm L, 5mm HOLE FOR 4mm HOLE USE W480-99 0-001-312-103 0-001-314-018 0-001-314-028 0-001-314-002 0-001-314-025 0-001-314-029	BOSCH  W480-103 BOSCH PMGR TRAIN ASSEMBLY CHRYSLER DODGE PLYMOUTH 1-006-200-031 16963 0-001-108-068 0-001-108-104 CW 95mm SHAFT x 11mm/10mm STEP 0-001-108-069 0-001-108-103	BOSCH  W480-106 BOSCH PMGR TRAIN ASSEMBLY CITROEN TALBOT PEUGEOT VOLVO RENAULT 1-006-200-019 1-006-200-904 0-001-110-017 0-001-110-026 CW 98mm SHAFT x 12mm OD 0-001-110-089

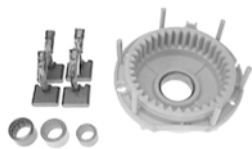
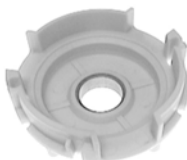
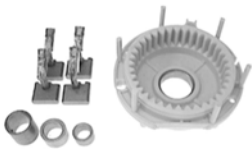
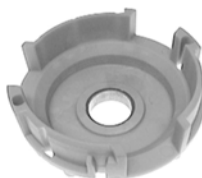
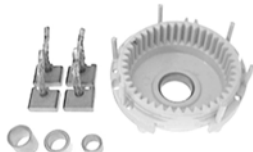
BOSCH  W480-107 BOSCH PMGR TRAIN ASSEMBLY CHRYSLER DODGE FERRARI LOMBARDINI MOSA PLYMOUTH 1-006-200-015 17047 18365 0-001-109-009 0-001-110-003 0-001-110-024 0-001-110-042 CW 98mm SHAFT x 12mm OD	BOSCH  W480-11 BOSCH SOLENOID CONTACT PAPER WASHER ALFA ROMEO BOMAG CHRYSLER DEUTZ-ALLIS DODGE DUCATI 16299 16318 16320 16332 16334 16336 16346 16354 16396 16426 16450 16551 0-001-107-031 0-001-107-032 0-001-107-049 0-001-107-070 0-001-109-302 0-001-110-009 0-001-110-091 0-001-205-001 0-001-207-003 8mm ID x 12mm OD x 0.3mm THICK SPACER/SEAL FOR UNDER 8mm CONTACT BOLTS, ALTERNATE W485-21	BOSCH  W480-112 BOSCH ARMATURE FELT WASHER ACME ALFA ROMEO AUDI BERTOLINI BMW CADILLAC 1-000-108-001 85-7501 16956 16963 16976 16980 17011 17013 17023 17047 17124 17135 17140 17148 0-001-106-011 0-001-107-003 0-001-107-004 0-001-107-007 0-001-107-008 0-001-107-010 0-001-107-020 0-001-107-021 0-001-107-023 11 x 18mm x 3mm THICK FELT TO ABSORB THE EXTRA OILS FROM CE BUSHING
BOSCH  W480-108 BOSCH PMGR TRAIN ASSEMBLY BMW CITROEN PEUGEOT RENAULT 9-001-337-057 17016 17183 30131 31102 0-001-218-101 0-001-218-134 0-001-218-135 0-001-218-157 CW 103mm SHAFT x 12mm OD, 6 GEAR STYLE	BOSCH  W480-110 BOSCH PMGR TRAIN ASSEMBLY AUDI SEAT VOLKSWAGEN 1-006-200-088 1-006-200-117 17724 17725 17750 17755 17819 0-001-124-001 0-001-124-002 0-001-124-003 0-001-124-004 0-001-124-005 0-001-124-006 0-001-125-001 0-001-125-002 0-001-125-005 CCW 81mm SHAFT 14mm, 11mm OD SELF SUPPORT, INCLUDED W480-58, W480-59, W480-66, W420-21, W480-117	BOSCH  W480-113 BOSCH CE CAP SEAL-PMGR ACME ALFA ROMEO AUDI BERTOLINI BMW CADILLAC 1-000-207-006 71-91103 16956 16963 17013 17023 17030 17068 17124 17135 17140 17210 17222 17223 0-001-107-004 0-001-107-007 0-001-107-008 0-001-107-010 0-001-107-020 0-001-107-021 0-001-107-022 0-001-107-023 0-001-107-024 18.5 x 24mm x 1mm THICK PAPER CE CAP SEAL
BOSCH  W480-109 BOSCH PMGR TRAIN ASSEMBLY CITROEN FIAT FORD LANCIA LANDROVER LOMBARDINI 9-001-337-059 17009 17042 18952 19723 19725 30663 33091 33221 0-001-218-013 0-001-218-014 0-001-218-025 0-001-218-105 0-001-218-107 0-001-218-111 0-001-218-113 0-001-218-142 0-001-218-152 CW 103mm SHAFT x 12mm OD 3 GEAR STYLE	BOSCH  W480-111 BOSCH SOLENOID CONTACT STUD ACME AGRIA ALFA ROMEO ATLAS AUDI BEDFORD 66-91354 16293 16445 16558 16562 16564 16715 16957 16999 17045 17075 17076 17077 0-001-230-006 0-001-230-012 0-001-359-043 0-001-359-084 0-001-359-111 0-001-360-022 0-001-360-037 0-001-360-056 0-001-362-005 10 x 27mm, 5.7mm HEAD THICKNESS NEGATIVE, FITS "402" SERIES CAPS, FOR POSITIVE SEE W480-01	BOSCH  W480-114 BOSCH PLANETARY GEAR HOUSING AUDI BMW CADILLAC CHRYSLER DODGE EAGLE 19145 76-91822 17508 17560 17563 17702 17720 17730 17736 17751 17760 17780 17781 17853 0-001-107-031 0-001-107-032 0-001-107-037 0-001-107-048 0-001-107-049 0-001-107-054 0-001-107-067 0-001-107-068 0-001-107-073 70mm OD, 25mm HIGH FOR RUBBER SHOCK INSERT USE W480-47, W480-67 SHIELD, W480-125 PLASTIC

BOSCH  W480-115 BOSCH PMGR GEAR TRACK RING BMW EAGLE CHRYSLER MERCEDES DODGE MITSUBISHI MOTOR 17560175631770217730177361785317923 0-001-107-0310-001-107-0320-001-107-037 0-001-107-0480-001-107-0490-001-108-157 0-001-108-1690-001-108-1900-001-108-196 36TH, 57.7mm OD, 10mm WIDE "107", "108" SERIES, USED WITH W480-114	BOSCH  W480-118 BOSCH STARTER PARTS KIT AUDI SKODA PORSCHE VOLKSWAGEN SEAT 1-007-010-079 17678177241772517758177591778117804178191792517926 0-001-121-0010-001-121-0030-001-121-006 0-001-121-0070-001-121-0280-001-121-030 0-001-123-0010-001-123-0020-001-123-003 25.8mm ID 9TH PMGR KIT FOR SELF SUPPORTED STARTERS THAT USE DRIVES W470-119, W470-120, W470-121 W470-134, TOOL	BOSCH  W480-121 BOSCH SOLENOID BOOT AIFO DAF CASE DEUTZ-FAHR CATERPILLAR DODGE 1-330-503-7021-330-503-703 1655816560169571709317232173071730818025180261803518927 0-001-359-0890-001-359-0970-001-359-098 0-001-360-0250-001-360-0360-001-360-040 0-001-360-0490-001-362-0390-001-362-321 40mm OD 27mm L PLUNGER BOOT
BOSCH  W480-116 BOSCH TERMINAL BLOCK EXTENDER CHRYSLER MITSUBISHI MOTOR DODGE PLYMOUTH EAGLE 039951-004-483-00576-91550 1756017563 0-001-107-0310-001-107-0320-001-107-049 0-001-108-1239-007-045-009W450-56 W450-63W460-27 6mm MOUNT, 1/4" SPADE "S" TERMINAL	BOSCH  W480-119 BOSCH STARTER DRIVE KIT AUDI PORSCHE BAKER SEAT LINDE SKODA 1-007-010-079 177241775017755177801782017919179671796817969179701797117972 0-001-120-4060-001-120-4080-001-121-008 0-001-121-0090-001-121-0220-001-121-026 0-001-121-4020-001-121-4030-001-121-408 28mm ID 10TH PMGR KIT FOR SELF SUPPORT STARTERS THAT USE DRIVES W470-118 AND W470-132	BOSCH  W480-122 BOSCH SHIFT LEVER SUPPORT AUDI OPEL CHEVROLET TENNANT MERCEDES VOLKSWAGEN 25160 17134172221722317224174151741619003190043032530410 0-001-107-0030-001-107-0040-001-107-007 0-001-107-0080-001-107-0200-001-107-021 0-001-107-0220-001-107-0230-001-107-044 19mm LENGTH
BOSCH  W480-117 BOSCH PLASTIC PLANETARY GEAR HOUSING ALFA ROMEO HATZ BMW JOHN DEERE FIAT LANCIA 176981772417725177501775917925183691894918954196653117232792 0-001-109-0250-001-109-0290-001-109-030 0-001-109-0330-001-109-0350-001-109-041 0-001-109-0430-001-109-0450-001-109-200 74mm OD x 27mm WIDE "109", "124" AND "125" SERIES PMGR STARTERS, RUBBER SHOCK W480-48	BOSCH  W480-120 BOSCH STARTER OIL SEAL-DE AUDI SKODA PORSCHE VOLKSWAGEN SEAT 1-000-500-0781-000-500-0921-000-500-084251651-000-500-091 1772417725177501775517758177591778017781178041781917925 0-001-121-0010-001-121-0030-001-121-006 0-001-121-0070-001-121-0080-001-121-009 0-001-121-0280-001-121-0300-001-123-001 28mm ID X 38mm OD X 2.6mm W DE SEAL FOR SELF SUPPORT PMGR STARTERS, UPDATED DESIGN AND MATERIAL TO WITHSTAND TRANSMISSION FLUID, BROWN	BOSCH  W480-123 BOSCH PLASTIC PLANETARY GEAR MITSUBISHI MOTOR PORSCHE NISSAN TOYOTA OPEL VAUXHALL 1-005-821-32112786 177311775833102 0-001-107-0100-001-107-0300-001-107-038 0-001-107-0770-001-121-0031-006-200-062 1-006-200-0631-006-200-0729-000-061-018 16.5mm WIDE, 36TH "107" SERIES

BOSCH  W480-124 BOSCH STARTER DRIVE SEAL AUDI SEAT LANCIA VOLKSWAGEN PORSCHE 1-000-221-002 17030 17067 17134 17222 17223 17224 17231 17280 17415 17416 17417 33033 0-001-107-003 0-001-107-004 0-001-107-005 0-001-107-007 0-001-107-008 0-001-107-020 0-001-107-021 0-001-107-022 0-001-107-023 28mm ID X 59mm X 4mm RUBBER, FITS DRIVES W470-76, W470-78, W470-85, W470-92, W470-98, W470-101, W470-102	BOSCH  W480-127N BOSCH STARTER PARTS KIT-223 DEUTZ-ALLIS VERMEER IVECO KHD 6-033-AD0-064 18230 18951 32471 0-001-223-002 0-001-223-003 0-001-223-016 0-001-223-021 12.5mm ID STOP COLLAR AND CLIP, 10mm ID SPACERS 1.0-1.4mm THICK, PIVOT 25mm OAL KIT COMES WITH PLASTIC REAR COVER, SPACERS AND CLIPS FOR THE CE FRAME, AND PIVOT SUPPORT AND DRIVE/SHAFT STOP, GROMMET	BOSCH  W480-13 BOSCH SOLENOID MOBILE CONTACT ALFA ROMEO BMW MARINE AUDI CHRYSLER BMW DEUTZ-ALLIS 03904 66-91700 16299 16401 16410 16417 16530 16531 16534 16538 16543 16547 16548 16556 0-001-107-004 0-001-107-007 0-001-107-008 0-001-107-020 0-001-107-021 0-001-107-022 0-001-107-023 0-001-107-031 0-001-107-032 32mm CONTACT HEIGHT "303" SERIES (CRIMP STYLE), FOR CLIP USE W480-08. CONTACT STRIKER PLATE W480-86
BOSCH  W480-125 BOSCH PLANETARY GEAR TRACK SUPPORT AUDI CHRYSLER BMW DODGE CADILLAC EAGLE 17508 17560 17563 17702 17720 17730 17736 17751 17853 17923 17974 18948 0-001-107-031 0-001-107-032 0-001-107-037 0-001-107-048 0-001-107-049 0-001-107-054 0-001-107-067 0-001-107-068 0-001-107-073 70mm OD, 12mm W "107" AND "108" SERIES, FOR GEAR TRACK W480-114, SIMILAR TO W480-55	BOSCH  W480-128N BOSCH STARTER PARTS KIT-223 CITROEN FIAT DODGE FREIGHTLINER DUCATI IVECO 6-033-AD0-047 6-033-AD0-107 6-033-AD2-021 18360 18526 32680 32705 0-001-223-001 0-001-223-004 0-001-223-005 0-001-223-006 0-001-223-008 0-001-223-022 0-001-223-501 0-001-223-502 0-001-223-506 12.5mm ID STOP COLLAR AND CLIP, 10mm ID SPACERS 1.0-1.4mm THICK, PIVOT 25mm OAL KIT COMES WITH PLASTIC REAR COVER, SPACERS AND CLIPS FOR THE CE FRAME, AND PIVOT SUPPORT AND DRIVE/SHAFT STOP, GROMMET	BOSCH  W480-14 BOSCH SOLENOID MOBILE CONTACT AGRIA BERTOLINI ALFA ROMEO BMW AUDI BOMAG 03906 1-330-030-703 66-91701 16445 16562 16564 16957 16999 17093 17127 17229 17258 17307 17318 18236 0-001-362-017 0-001-362-019 0-001-362-020 0-001-362-021 0-001-362-027 0-001-362-028 0-001-362-029 0-001-362-030 0-001-362-032 "402" SERIES (CRIMP STYLE),. FOR CLIP USE W480-08
BOSCH  W480-126 BOSCH PLASTIC PLANETARY GEAR TRACK AUDI MERCEDES CHRYSLER DODGE 17730 17822 17920 17975 0-001-107-403 0-001-107-406 0-001-107-427 0-001-107-431 0-001-107-432 36TH, 66mm OD, 12mm W LATE, BLACK STYLE 107 SERIES	BOSCH  W480-129 BOSCH PLASTIC PLANETARY GEAR TRACK DEUTZ-ALLIS LOMBARDINI 1-005-821-314 0-001-107-033 0-001-107-061 1-006-200-074 69.6mm OD, 37TH SHALLOW "107" SERIES, SIMILAR TO W480-68	BOSCH  W480-15 BOSCH PLASTIC PLANETARY GEAR TRACK ALFA ROMEO CHRYSLER AUDI CITROEN CADILLAC DODGE 1-005-821-300 222-24004 1-005-821-307 5227114 14129 76-91809 16956 16963 16976 16980 17011 17013 17039 17124 17135 17163 17164 17210 0-001-108-001 0-001-108-002 0-001-108-004 0-001-108-005 0-001-108-009 0-001-108-010 0-001-108-011 0-001-108-012 0-001-108-013 37 TEETH - 69.8mm OD "108" SERIES

BOSCH  W480-16 BOSCH PLASTIC PLANETARY GEAR TRACK <table> <tr> <td>ACME DODGE</td> <td>AUDI FERRARI</td> <td>CHRYSLER FORD</td> </tr> <tr> <td>1-005-821-303 76-91810</td> <td>14144 S-3281</td> <td>222-24003</td> </tr> <tr> <td>17030 17047 17690 17705</td> <td>17068 17128 17977 18365</td> <td>17227 17231 18368 19665</td> </tr> <tr> <td>0-001-109-003 0-001-109-012 0-001-110-004</td> <td>0-001-109-008 0-001-110-001 0-001-110-007</td> <td>0-001-109-009 0-001-110-002 0-001-110-008</td> </tr> </table> 42 TEETH - 73.4mm OD "110" SERIES	ACME DODGE	AUDI FERRARI	CHRYSLER FORD	1-005-821-303 76-91810	14144 S-3281	222-24003	17030 17047 17690 17705	17068 17128 17977 18365	17227 17231 18368 19665	0-001-109-003 0-001-109-012 0-001-110-004	0-001-109-008 0-001-110-001 0-001-110-007	0-001-109-009 0-001-110-002 0-001-110-008	BOSCH  W480-19 BOSCH PERMA-MAGNET STARTER REPAIR KIT <table> <tr> <td>ALFA ROMEO FIAT</td> <td>AUDI FORD</td> <td>EAGLE JEEP</td> </tr> <tr> <td>16956 16980 17135 17163</td> <td>17011 17013 17164 17222</td> <td>17039 17124 17223 17225</td> </tr> <tr> <td>0-001-108-001 0-001-108-009 0-001-108-012</td> <td>0-001-108-002 0-001-108-010 0-001-108-020</td> <td>0-001-108-004 0-001-108-011 0-001-108-022</td> </tr> </table> KIT INCLUDES: W480-15 GEAR TRACK, W410-14 BRUSH SET, W420-20 CE BUSHING, W420-05 DE BUSHING, W420-21 GI BUSHING	ALFA ROMEO FIAT	AUDI FORD	EAGLE JEEP	16956 16980 17135 17163	17011 17013 17164 17222	17039 17124 17223 17225	0-001-108-001 0-001-108-009 0-001-108-012	0-001-108-002 0-001-108-010 0-001-108-020	0-001-108-004 0-001-108-011 0-001-108-022	BOSCH  W480-22 BOSCH PERMA-MAGNET STARTER REPAIR KIT <table> <tr> <td>ACME FERRARI</td> <td>CHRYSLER FORD</td> <td>DODGE GOLDONI</td> </tr> <tr> <td>17047 17149</td> <td>18368</td> <td></td> </tr> <tr> <td>0-001-110-007 0-001-110-012 0-001-110-024</td> <td>0-001-110-008 0-001-110-013 0-001-110-031</td> <td>0-001-110-011 0-001-110-019 0-001-110-033</td> </tr> </table> KIT INCLUDES: W480-16 GEAR TRACK, W410-15 BRUSH SET, W420-20 CE BUSHING, W420-05 DE BUSHING, W420-21 GI BUSHING	ACME FERRARI	CHRYSLER FORD	DODGE GOLDONI	17047 17149	18368		0-001-110-007 0-001-110-012 0-001-110-024	0-001-110-008 0-001-110-013 0-001-110-031	0-001-110-011 0-001-110-019 0-001-110-033			
ACME DODGE	AUDI FERRARI	CHRYSLER FORD																																	
1-005-821-303 76-91810	14144 S-3281	222-24003																																	
17030 17047 17690 17705	17068 17128 17977 18365	17227 17231 18368 19665																																	
0-001-109-003 0-001-109-012 0-001-110-004	0-001-109-008 0-001-110-001 0-001-110-007	0-001-109-009 0-001-110-002 0-001-110-008																																	
ALFA ROMEO FIAT	AUDI FORD	EAGLE JEEP																																	
16956 16980 17135 17163	17011 17013 17164 17222	17039 17124 17223 17225																																	
0-001-108-001 0-001-108-009 0-001-108-012	0-001-108-002 0-001-108-010 0-001-108-020	0-001-108-004 0-001-108-011 0-001-108-022																																	
ACME FERRARI	CHRYSLER FORD	DODGE GOLDONI																																	
17047 17149	18368																																		
0-001-110-007 0-001-110-012 0-001-110-024	0-001-110-008 0-001-110-013 0-001-110-031	0-001-110-011 0-001-110-019 0-001-110-033																																	
BOSCH  W480-17 BOSCH SOLENOID STRIKER PLATE <table> <tr> <td>BUKH MERCEDES</td> <td>CLAAS THERMO KING</td> <td>HANOMAG</td> </tr> <tr> <td>03918</td> <td></td> <td></td> </tr> <tr> <td>16363 16566</td> <td>18464</td> <td></td> </tr> <tr> <td>0-001-354-016 0-001-354-080</td> <td>0-001-354-018 0-001-354-085</td> <td>0-001-354-031</td> </tr> </table> 34.8mm x 18mm x 4mm THICK COUNTER SUNK HOLE, "400", "401" SERIES SOLENOIDS	BUKH MERCEDES	CLAAS THERMO KING	HANOMAG	03918			16363 16566	18464		0-001-354-016 0-001-354-080	0-001-354-018 0-001-354-085	0-001-354-031	BOSCH  W480-20 BOSCH PERMA-MAGNET STARTER REPAIR KIT <table> <tr> <td>AUDI VOLKSWAGEN</td> <td>FORD VOLVO</td> <td>LANDROVER</td> </tr> <tr> <td>16956 17406</td> <td>17407 17663</td> <td></td> </tr> <tr> <td>0-001-108-026 0-001-108-033 0-001-108-072</td> <td>0-001-108-027 0-001-108-040 0-001-108-113</td> <td>0-001-108-028 0-001-108-061 0-001-108-131</td> </tr> </table> KIT INCLUDES: W480-15 GEAR TRACK, W410-14 BRUSH SET, W420-20 CE BUSHING, W420-09 DE BUSHING, W420-21 GI BUSHING	AUDI VOLKSWAGEN	FORD VOLVO	LANDROVER	16956 17406	17407 17663		0-001-108-026 0-001-108-033 0-001-108-072	0-001-108-027 0-001-108-040 0-001-108-113	0-001-108-028 0-001-108-061 0-001-108-131	BOSCH  W480-23 BOSCH PLASTIC PLANETARY GEAR TRACK <table> <tr> <td>AUDI FIAT</td> <td>BMW FORD</td> <td>CITROEN MERCEDES</td> </tr> <tr> <td>14135P 9-001-140-322</td> <td>222-24006 9-003-336-321</td> <td>76-91812 S-3283</td> </tr> <tr> <td>17009 17016 30651 30663</td> <td>17040 17042 30676 32239</td> <td>17183 19721 32895</td> </tr> <tr> <td>0-001-218-003 0-001-218-009 0-001-218-014</td> <td>0-001-218-004 0-001-218-012 0-001-218-017</td> <td>0-001-218-006 0-001-218-013 0-001-218-018</td> </tr> </table> 42 TEETH - 86.2mm OD "218" SERIES STARTERS, FOR METAL VERSION USE W480-50	AUDI FIAT	BMW FORD	CITROEN MERCEDES	14135P 9-001-140-322	222-24006 9-003-336-321	76-91812 S-3283	17009 17016 30651 30663	17040 17042 30676 32239	17183 19721 32895	0-001-218-003 0-001-218-009 0-001-218-014	0-001-218-004 0-001-218-012 0-001-218-017	0-001-218-006 0-001-218-013 0-001-218-018
BUKH MERCEDES	CLAAS THERMO KING	HANOMAG																																	
03918																																			
16363 16566	18464																																		
0-001-354-016 0-001-354-080	0-001-354-018 0-001-354-085	0-001-354-031																																	
AUDI VOLKSWAGEN	FORD VOLVO	LANDROVER																																	
16956 17406	17407 17663																																		
0-001-108-026 0-001-108-033 0-001-108-072	0-001-108-027 0-001-108-040 0-001-108-113	0-001-108-028 0-001-108-061 0-001-108-131																																	
AUDI FIAT	BMW FORD	CITROEN MERCEDES																																	
14135P 9-001-140-322	222-24006 9-003-336-321	76-91812 S-3283																																	
17009 17016 30651 30663	17040 17042 30676 32239	17183 19721 32895																																	
0-001-218-003 0-001-218-009 0-001-218-014	0-001-218-004 0-001-218-012 0-001-218-017	0-001-218-006 0-001-218-013 0-001-218-018																																	
BOSCH  W480-18 BOSCH PLASTIC SHIFT LEVER FORK <table> <tr> <td>ACME BAKER</td> <td>ALFA ROMEO BERTOLINI</td> <td>AUDI BMW</td> </tr> <tr> <td>1-001-933-106 55-9103</td> <td>1-001-933-111 84AB-11067-AB</td> <td>14149 S-3282</td> </tr> <tr> <td>16956 16963 17023 17030</td> <td>16976 16980 17038 17039</td> <td>17011 17013 17047 17067</td> </tr> <tr> <td>0-001-106-011 0-001-106-019 0-001-107-005</td> <td>0-001-106-015 0-001-107-003 0-001-107-007</td> <td>0-001-106-018 0-001-107-004 0-001-107-008</td> </tr> </table> 87mm L FITS MOST "108" & "110" SERIES PMGR STARTERS	ACME BAKER	ALFA ROMEO BERTOLINI	AUDI BMW	1-001-933-106 55-9103	1-001-933-111 84AB-11067-AB	14149 S-3282	16956 16963 17023 17030	16976 16980 17038 17039	17011 17013 17047 17067	0-001-106-011 0-001-106-019 0-001-107-005	0-001-106-015 0-001-107-003 0-001-107-007	0-001-106-018 0-001-107-004 0-001-107-008	BOSCH  W480-21 BOSCH PERMA-MAGNET STARTER REPAIR KIT <table> <tr> <td>CHRYSLER VOLKSWAGEN</td> <td>DODGE</td> <td>PLYMOUTH</td> </tr> <tr> <td>16963 16976</td> <td>17210 17222</td> <td></td> </tr> <tr> <td>0-001-108-005 0-001-108-045 0-001-108-070</td> <td>0-001-108-013 0-001-108-046 0-001-108-094</td> <td>0-001-108-032 0-001-108-066 0-001-108-105</td> </tr> </table> KIT INCLUDES: W480-15 GEAR TRACK, W410-14 BRUSH SET, W420-20 CE BUSHING, W420-08 DE BUSHING, W420-21 GI BUSHING	CHRYSLER VOLKSWAGEN	DODGE	PLYMOUTH	16963 16976	17210 17222		0-001-108-005 0-001-108-045 0-001-108-070	0-001-108-013 0-001-108-046 0-001-108-094	0-001-108-032 0-001-108-066 0-001-108-105	BOSCH  W480-24 BOSCH GEAR TRAIN ASSEMBLY REPAIR KIT <table> <tr> <td>ALFA ROMEO CITROEN</td> <td>AUDI FORD</td> <td>BMW MERCEDES</td> </tr> <tr> <td>14136</td> <td></td> <td></td> </tr> <tr> <td>17009 17016 30646 30651</td> <td>17040 17042 30676 31102</td> <td>17183 30131 32160</td> </tr> <tr> <td>0-001-218-003 0-001-218-009 0-001-218-018</td> <td>0-001-218-004 0-001-218-013 0-001-218-019</td> <td>0-001-218-007 0-001-218-017 0-001-218-020</td> </tr> </table> "218" SERIES 3 GEAR TRAIN ASSEMBLIES, CENTER BUSHING W420-16, GI BUSHING W420-25	ALFA ROMEO CITROEN	AUDI FORD	BMW MERCEDES	14136			17009 17016 30646 30651	17040 17042 30676 31102	17183 30131 32160	0-001-218-003 0-001-218-009 0-001-218-018	0-001-218-004 0-001-218-013 0-001-218-019	0-001-218-007 0-001-218-017 0-001-218-020
ACME BAKER	ALFA ROMEO BERTOLINI	AUDI BMW																																	
1-001-933-106 55-9103	1-001-933-111 84AB-11067-AB	14149 S-3282																																	
16956 16963 17023 17030	16976 16980 17038 17039	17011 17013 17047 17067																																	
0-001-106-011 0-001-106-019 0-001-107-005	0-001-106-015 0-001-107-003 0-001-107-007	0-001-106-018 0-001-107-004 0-001-107-008																																	
CHRYSLER VOLKSWAGEN	DODGE	PLYMOUTH																																	
16963 16976	17210 17222																																		
0-001-108-005 0-001-108-045 0-001-108-070	0-001-108-013 0-001-108-046 0-001-108-094	0-001-108-032 0-001-108-066 0-001-108-105																																	
ALFA ROMEO CITROEN	AUDI FORD	BMW MERCEDES																																	
14136																																			
17009 17016 30646 30651	17040 17042 30676 31102	17183 30131 32160																																	
0-001-218-003 0-001-218-009 0-001-218-018	0-001-218-004 0-001-218-013 0-001-218-019	0-001-218-007 0-001-218-017 0-001-218-020																																	

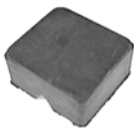
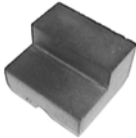
BOSCH  W480-25 BOSCH PLANETARY GEAR CLOSURE CAP <table><tr><td>ALFA ROMEO CITROEN</td><td>AUDI DODGE</td><td>CHRYSLER EAGLE</td></tr></table><table><tr><td>1-000-520-035 S-3343</td><td>1-005-200-035</td><td>14171</td></tr></table><table><tr><td>16956 16963 17039 17124</td><td>16976 16980 17135 17163</td><td>17011 17013 17164 17210</td></tr><tr><td>0-001-108-001</td><td>0-001-108-002</td><td>0-001-108-004</td></tr><tr><td>0-001-108-005</td><td>0-001-108-009</td><td>0-001-108-010</td></tr><tr><td>0-001-108-011</td><td>0-001-108-012</td><td>0-001-108-013</td></tr></table> "107" & "108" SERIES, PMGR STARTERS WITH PLASTIC GEAR TRACK W480-15. <td> BOSCH  W480-28 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>ALFA ROMEO EAGLE</td><td>AUDI FORD</td><td>CITROEN JEEP</td></tr></table><table><tr><td>1-006-200-018</td><td>87GB-11K190-AA</td></tr></table><table><tr><td>16956 16980 17124 17135</td><td>17011 17013 17163 17164</td><td>17023 17039 17225 17276</td></tr><tr><td>0-001-108-021</td><td>0-001-108-022</td><td>0-001-108-023</td></tr><tr><td>0-001-108-026</td><td>0-001-108-027</td><td>0-001-108-028</td></tr><tr><td>0-001-108-030</td><td>0-001-108-031</td><td>0-001-108-033</td></tr></table> CW 98mm SHAFT x 12mm OD W480-15 GEAR TRACK, W480-56 PINION GEAR, W480-61 GEAR PIN, W480-25 CLOSURE CAP, W420-21 GI BUSHING, W480-80 TRAIN SHAFT <td> BOSCH  W480-31 BOSCH PLANETARY GEAR TRAIN ASSEMBLY MERCEDES <table><tr><td>01-7664 S-3291</td><td>1-006-200-050</td><td>BS-3291</td></tr></table> 17040 <table><tr><td>0-001-218-006</td><td>0-001-218-021</td></tr></table> CW 115mm SHAFT x 12mm OD FITS "218" SERIES STARTERS, REPAIR KIT W480-24. PLASTIC GEAR TRACK W480-23, PINION GEAR W480-81, PINION GEAR PIN W480-92, GI BUSHING W420-25. </td></td>	ALFA ROMEO CITROEN	AUDI DODGE	CHRYSLER EAGLE	1-000-520-035 S-3343	1-005-200-035	14171	16956 16963 17039 17124	16976 16980 17135 17163	17011 17013 17164 17210	0-001-108-001	0-001-108-002	0-001-108-004	0-001-108-005	0-001-108-009	0-001-108-010	0-001-108-011	0-001-108-012	0-001-108-013	BOSCH  W480-28 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>ALFA ROMEO EAGLE</td><td>AUDI FORD</td><td>CITROEN JEEP</td></tr></table><table><tr><td>1-006-200-018</td><td>87GB-11K190-AA</td></tr></table><table><tr><td>16956 16980 17124 17135</td><td>17011 17013 17163 17164</td><td>17023 17039 17225 17276</td></tr><tr><td>0-001-108-021</td><td>0-001-108-022</td><td>0-001-108-023</td></tr><tr><td>0-001-108-026</td><td>0-001-108-027</td><td>0-001-108-028</td></tr><tr><td>0-001-108-030</td><td>0-001-108-031</td><td>0-001-108-033</td></tr></table> CW 98mm SHAFT x 12mm OD W480-15 GEAR TRACK, W480-56 PINION GEAR, W480-61 GEAR PIN, W480-25 CLOSURE CAP, W420-21 GI BUSHING, W480-80 TRAIN SHAFT <td> BOSCH  W480-31 BOSCH PLANETARY GEAR TRAIN ASSEMBLY MERCEDES <table><tr><td>01-7664 S-3291</td><td>1-006-200-050</td><td>BS-3291</td></tr></table> 17040 <table><tr><td>0-001-218-006</td><td>0-001-218-021</td></tr></table> CW 115mm SHAFT x 12mm OD FITS "218" SERIES STARTERS, REPAIR KIT W480-24. PLASTIC GEAR TRACK W480-23, PINION GEAR W480-81, PINION GEAR PIN W480-92, GI BUSHING W420-25. </td>	ALFA ROMEO EAGLE	AUDI FORD	CITROEN JEEP	1-006-200-018	87GB-11K190-AA	16956 16980 17124 17135	17011 17013 17163 17164	17023 17039 17225 17276	0-001-108-021	0-001-108-022	0-001-108-023	0-001-108-026	0-001-108-027	0-001-108-028	0-001-108-030	0-001-108-031	0-001-108-033	BOSCH  W480-31 BOSCH PLANETARY GEAR TRAIN ASSEMBLY MERCEDES <table><tr><td>01-7664 S-3291</td><td>1-006-200-050</td><td>BS-3291</td></tr></table> 17040 <table><tr><td>0-001-218-006</td><td>0-001-218-021</td></tr></table> CW 115mm SHAFT x 12mm OD FITS "218" SERIES STARTERS, REPAIR KIT W480-24. PLASTIC GEAR TRACK W480-23, PINION GEAR W480-81, PINION GEAR PIN W480-92, GI BUSHING W420-25.	01-7664 S-3291	1-006-200-050	BS-3291	0-001-218-006	0-001-218-021				
ALFA ROMEO CITROEN	AUDI DODGE	CHRYSLER EAGLE																																												
1-000-520-035 S-3343	1-005-200-035	14171																																												
16956 16963 17039 17124	16976 16980 17135 17163	17011 17013 17164 17210																																												
0-001-108-001	0-001-108-002	0-001-108-004																																												
0-001-108-005	0-001-108-009	0-001-108-010																																												
0-001-108-011	0-001-108-012	0-001-108-013																																												
ALFA ROMEO EAGLE	AUDI FORD	CITROEN JEEP																																												
1-006-200-018	87GB-11K190-AA																																													
16956 16980 17124 17135	17011 17013 17163 17164	17023 17039 17225 17276																																												
0-001-108-021	0-001-108-022	0-001-108-023																																												
0-001-108-026	0-001-108-027	0-001-108-028																																												
0-001-108-030	0-001-108-031	0-001-108-033																																												
01-7664 S-3291	1-006-200-050	BS-3291																																												
0-001-218-006	0-001-218-021																																													
BOSCH  W480-26 BOSCH PLANETARY GEAR CLOSURE CAP <table><tr><td>AUDI FERRARI</td><td>CHRYSLER FORD</td><td>DODGE JAGUAR</td></tr></table> 14172 <table><tr><td>17030 17047 17690 17705</td><td>17068 17128 17977 18365</td><td>17227 17231</td></tr><tr><td>0-001-109-009</td><td>0-001-110-001</td><td>0-001-110-002</td></tr><tr><td>0-001-110-004</td><td>0-001-110-007</td><td>0-001-110-008</td></tr><tr><td>0-001-110-009</td><td>0-001-110-013</td><td>0-001-110-014</td></tr></table> FITS "109" & "110" SERIES PMGR STARTERS, USED WITH PLASTIC TRACK W480-16, W480-69. <td> BOSCH  W480-29 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>AUDI VOLVO</td><td>BMW</td><td>VOLKSWAGEN</td></tr></table><table><tr><td>290-24000 S-3290</td><td>76-91813</td><td>9-001-140-362</td></tr></table><table><tr><td>17009 17016</td><td>17042 17183</td></tr></table><table><tr><td>0-001-218-004</td><td>0-001-218-009</td><td>0-001-218-012</td></tr><tr><td>0-001-218-013</td><td>0-001-218-017</td><td>0-001-218-018</td></tr><tr><td>0-001-218-027</td><td>0-001-218-028</td><td></td></tr></table> CW 104mm SHAFT x 12mm OD "218" SERIES STARTERS, PLASTIC GEAR TRACK W480-23, PINION GEAR W480-81, PINION GEAR PIN W480-92, GI BUSHING W420-25, 4 GEAR SETUP USE <td> BOSCH  W480-32 BOSCH PLANETARY GEAR TRAIN ASSEMBLY VOLKSWAGEN <table><tr><td>01-7756</td><td>1-006-200-021</td><td>S-3295</td></tr></table> 17030 <table><tr><td>0-001-110-001</td><td>0-001-110-002</td><td>0-001-110-014</td></tr><tr><td>0-001-110-015</td><td></td><td></td></tr></table> CCW 96mm SHAFT x 12mm STEPPED TO 11mm OD W480-16 GEAR TRACK, W480-57 PINION GEAR, W480-62 GEAR PIN, W480-26 CLOSURE CAP, W420-21 GI BUSHING </td></td>	AUDI FERRARI	CHRYSLER FORD	DODGE JAGUAR	17030 17047 17690 17705	17068 17128 17977 18365	17227 17231	0-001-109-009	0-001-110-001	0-001-110-002	0-001-110-004	0-001-110-007	0-001-110-008	0-001-110-009	0-001-110-013	0-001-110-014	BOSCH  W480-29 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>AUDI VOLVO</td><td>BMW</td><td>VOLKSWAGEN</td></tr></table><table><tr><td>290-24000 S-3290</td><td>76-91813</td><td>9-001-140-362</td></tr></table><table><tr><td>17009 17016</td><td>17042 17183</td></tr></table><table><tr><td>0-001-218-004</td><td>0-001-218-009</td><td>0-001-218-012</td></tr><tr><td>0-001-218-013</td><td>0-001-218-017</td><td>0-001-218-018</td></tr><tr><td>0-001-218-027</td><td>0-001-218-028</td><td></td></tr></table> CW 104mm SHAFT x 12mm OD "218" SERIES STARTERS, PLASTIC GEAR TRACK W480-23, PINION GEAR W480-81, PINION GEAR PIN W480-92, GI BUSHING W420-25, 4 GEAR SETUP USE <td> BOSCH  W480-32 BOSCH PLANETARY GEAR TRAIN ASSEMBLY VOLKSWAGEN <table><tr><td>01-7756</td><td>1-006-200-021</td><td>S-3295</td></tr></table> 17030 <table><tr><td>0-001-110-001</td><td>0-001-110-002</td><td>0-001-110-014</td></tr><tr><td>0-001-110-015</td><td></td><td></td></tr></table> CCW 96mm SHAFT x 12mm STEPPED TO 11mm OD W480-16 GEAR TRACK, W480-57 PINION GEAR, W480-62 GEAR PIN, W480-26 CLOSURE CAP, W420-21 GI BUSHING </td>	AUDI VOLVO	BMW	VOLKSWAGEN	290-24000 S-3290	76-91813	9-001-140-362	17009 17016	17042 17183	0-001-218-004	0-001-218-009	0-001-218-012	0-001-218-013	0-001-218-017	0-001-218-018	0-001-218-027	0-001-218-028		BOSCH  W480-32 BOSCH PLANETARY GEAR TRAIN ASSEMBLY VOLKSWAGEN <table><tr><td>01-7756</td><td>1-006-200-021</td><td>S-3295</td></tr></table> 17030 <table><tr><td>0-001-110-001</td><td>0-001-110-002</td><td>0-001-110-014</td></tr><tr><td>0-001-110-015</td><td></td><td></td></tr></table> CCW 96mm SHAFT x 12mm STEPPED TO 11mm OD W480-16 GEAR TRACK, W480-57 PINION GEAR, W480-62 GEAR PIN, W480-26 CLOSURE CAP, W420-21 GI BUSHING	01-7756	1-006-200-021	S-3295	0-001-110-001	0-001-110-002	0-001-110-014	0-001-110-015					
AUDI FERRARI	CHRYSLER FORD	DODGE JAGUAR																																												
17030 17047 17690 17705	17068 17128 17977 18365	17227 17231																																												
0-001-109-009	0-001-110-001	0-001-110-002																																												
0-001-110-004	0-001-110-007	0-001-110-008																																												
0-001-110-009	0-001-110-013	0-001-110-014																																												
AUDI VOLVO	BMW	VOLKSWAGEN																																												
290-24000 S-3290	76-91813	9-001-140-362																																												
17009 17016	17042 17183																																													
0-001-218-004	0-001-218-009	0-001-218-012																																												
0-001-218-013	0-001-218-017	0-001-218-018																																												
0-001-218-027	0-001-218-028																																													
01-7756	1-006-200-021	S-3295																																												
0-001-110-001	0-001-110-002	0-001-110-014																																												
0-001-110-015																																														
BOSCH  W480-27 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>ALFA ROMEO FIAT</td><td>AUDI FORD</td><td>CITROEN LANCIA</td></tr></table><table><tr><td>1-006-200-005 S-3293</td><td>1-006-200-123</td><td>BS-3293</td></tr></table><table><tr><td>16956 17013</td><td>17164 17225</td><td>32213</td></tr></table><table><tr><td>0-001-108-001</td><td>0-001-108-002</td><td>0-001-108-004</td></tr><tr><td>0-001-108-007</td><td>0-001-108-009</td><td>0-001-108-010</td></tr><tr><td>0-001-108-011</td><td>0-001-108-012</td><td>0-001-108-019</td></tr></table> CW 98mm SHAFT x 12mm OD W480-15 GEAR TRACK, W480-56 PINION GEAR, W480-61 GEAR PIN, W480-25 CLOSURE CAP, W420-21 GI BUSHING, W480-80 TRAIN SHAFT <td> BOSCH  W480-30 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>CITROEN</td><td>PEUGEOT</td><td>TALBOT</td></tr></table><table><tr><td>9-001-140-310</td><td>9-001-140-391</td><td>9-001-337-069</td></tr></table> 30651 <table><tr><td>0-001-218-003</td><td>0-001-218-020</td></tr></table> CW 115mm SHAFT x 12mm OD FITS "218" SERIES STARTERS, PLASTIC GEAR TRACK W480-23, PINION GEAR W480-81, PINION GEAR PIN W480-92, GI BUSHING W420-25, 4 GEAR SETUP USE <td> BOSCH  W480-33 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>AUDI JAGUAR</td><td>FERRARI LANCIA</td><td>FORD LANDROVER</td></tr></table><table><tr><td>1-006-200-006 S-3294</td><td>61-47-949</td><td>84AB-11K190-AA</td></tr></table><table><tr><td>17128 17149</td><td>17690 17705</td><td>17977</td></tr></table><table><tr><td>0-001-110-004</td><td>0-001-110-007</td><td>0-001-110-008</td></tr><tr><td>0-001-110-011</td><td>0-001-110-012</td><td>0-001-110-013</td></tr><tr><td>0-001-110-019</td><td>0-001-110-027</td><td>0-001-110-044</td></tr></table> CW 98mm SHAFT x 12mm OD W480-16 GEAR TRACK, W480-57 PINION GEAR, W480-62 GEAR PIN, W480-26 CLOSURE CAP, W420-21 GI BUSHING </td></td>	ALFA ROMEO FIAT	AUDI FORD	CITROEN LANCIA	1-006-200-005 S-3293	1-006-200-123	BS-3293	16956 17013	17164 17225	32213	0-001-108-001	0-001-108-002	0-001-108-004	0-001-108-007	0-001-108-009	0-001-108-010	0-001-108-011	0-001-108-012	0-001-108-019	BOSCH  W480-30 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>CITROEN</td><td>PEUGEOT</td><td>TALBOT</td></tr></table><table><tr><td>9-001-140-310</td><td>9-001-140-391</td><td>9-001-337-069</td></tr></table> 30651 <table><tr><td>0-001-218-003</td><td>0-001-218-020</td></tr></table> CW 115mm SHAFT x 12mm OD FITS "218" SERIES STARTERS, PLASTIC GEAR TRACK W480-23, PINION GEAR W480-81, PINION GEAR PIN W480-92, GI BUSHING W420-25, 4 GEAR SETUP USE <td> BOSCH  W480-33 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>AUDI JAGUAR</td><td>FERRARI LANCIA</td><td>FORD LANDROVER</td></tr></table><table><tr><td>1-006-200-006 S-3294</td><td>61-47-949</td><td>84AB-11K190-AA</td></tr></table><table><tr><td>17128 17149</td><td>17690 17705</td><td>17977</td></tr></table><table><tr><td>0-001-110-004</td><td>0-001-110-007</td><td>0-001-110-008</td></tr><tr><td>0-001-110-011</td><td>0-001-110-012</td><td>0-001-110-013</td></tr><tr><td>0-001-110-019</td><td>0-001-110-027</td><td>0-001-110-044</td></tr></table> CW 98mm SHAFT x 12mm OD W480-16 GEAR TRACK, W480-57 PINION GEAR, W480-62 GEAR PIN, W480-26 CLOSURE CAP, W420-21 GI BUSHING </td>	CITROEN	PEUGEOT	TALBOT	9-001-140-310	9-001-140-391	9-001-337-069	0-001-218-003	0-001-218-020	BOSCH  W480-33 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>AUDI JAGUAR</td><td>FERRARI LANCIA</td><td>FORD LANDROVER</td></tr></table><table><tr><td>1-006-200-006 S-3294</td><td>61-47-949</td><td>84AB-11K190-AA</td></tr></table><table><tr><td>17128 17149</td><td>17690 17705</td><td>17977</td></tr></table><table><tr><td>0-001-110-004</td><td>0-001-110-007</td><td>0-001-110-008</td></tr><tr><td>0-001-110-011</td><td>0-001-110-012</td><td>0-001-110-013</td></tr><tr><td>0-001-110-019</td><td>0-001-110-027</td><td>0-001-110-044</td></tr></table> CW 98mm SHAFT x 12mm OD W480-16 GEAR TRACK, W480-57 PINION GEAR, W480-62 GEAR PIN, W480-26 CLOSURE CAP, W420-21 GI BUSHING	AUDI JAGUAR	FERRARI LANCIA	FORD LANDROVER	1-006-200-006 S-3294	61-47-949	84AB-11K190-AA	17128 17149	17690 17705	17977	0-001-110-004	0-001-110-007	0-001-110-008	0-001-110-011	0-001-110-012	0-001-110-013	0-001-110-019	0-001-110-027	0-001-110-044
ALFA ROMEO FIAT	AUDI FORD	CITROEN LANCIA																																												
1-006-200-005 S-3293	1-006-200-123	BS-3293																																												
16956 17013	17164 17225	32213																																												
0-001-108-001	0-001-108-002	0-001-108-004																																												
0-001-108-007	0-001-108-009	0-001-108-010																																												
0-001-108-011	0-001-108-012	0-001-108-019																																												
CITROEN	PEUGEOT	TALBOT																																												
9-001-140-310	9-001-140-391	9-001-337-069																																												
0-001-218-003	0-001-218-020																																													
AUDI JAGUAR	FERRARI LANCIA	FORD LANDROVER																																												
1-006-200-006 S-3294	61-47-949	84AB-11K190-AA																																												
17128 17149	17690 17705	17977																																												
0-001-110-004	0-001-110-007	0-001-110-008																																												
0-001-110-011	0-001-110-012	0-001-110-013																																												
0-001-110-019	0-001-110-027	0-001-110-044																																												


BOSCH  W480-34 BOSCH PERMA-MAGNET STARTER REPAIR KIT CADILLAC PLYMOUTH CHRYSLER SAAB DODGE VOLVO 16963175081757617720 0-001-108-0680-001-108-1040-001-108-150 0-001-108-0690-001-108-1340-001-108-153 0-001-108-1030-001-108-148 KIT INCLUDES: W480-15 GEAR TRACK, W410-14 BRUSH SET, W420-20 CE BUSHING, W02X-37 DE ROLLER BEARING, W420-21 GI BUSHING	BOSCH  W480-37 BOSCH PERMA-MAGNET STARTER REPAIR KIT LANDROVER LOMBARDINI VOLKSWAGEN 170681770518365 0-001-110-0090-001-110-0420-001-110-090 KIT INCLUDES: W480-16 GEAR TRACK, W410-15 BRUSH SET, W420-20 CE BUSHING, W420-09 DE BUSHING, W420-21 GI BUSHING	BOSCH  W480-40 BOSCH PLASTIC PLANETARY GEAR HOUSING AUDI DODGE BMW FORD CHRYSLER LOMBARDINI 1-005-821-35276-91815169561702317210172360-001-108-0030-001-108-0420-001-108-064 14178S-3340170391713517406174070-001-108-0180-001-108-0540-001-108-065 222-24007171401714817508176990-001-108-0210-001-108-0630-001-108-088 "108" SERIES, RUBBER SHOCK W480-47, PLASTIC TRACK SUPPORT W480-55, COVER W480-67
BOSCH  W480-35 BOSCH PERMA-MAGNET STARTER REPAIR KIT CITROEN PEUGEOT RENAULT 17163 0-001-108-0850-001-108-0860-001-108-143 KIT INCLUDES: W480-15 GEAR TRACK, W410-14 BRUSH SET, W420-20 CE BUSHING, W420-31 DE BUSHING, W420-21 GI BUSHING	BOSCH  W480-38 BOSCH PERMA-MAGNET STARTER REPAIR KIT AUDI FORD 17977 0-001-110-0440-001-110-0660-001-110-0510-001-110-065 KIT INCLUDES: W480-16 GEAR TRACK, W410-15 BRUSH SET, W420-20 CE BUSHING, W02X-42 DE BEARING, W420-21 GI BUSHING	BOSCH  W480-41 BOSCH PLASTIC PLANETARY GEAR TRACK AUDI JOHN DEERE BMW LANDROVER FARYMANN LINDE 1-005-821-30676-91823170381715017237172790-001-109-0170-001-109-0590-001-110-03074mm OD, 32mm L 14179S-3285171581722617280172810-001-109-0400-001-110-0160-001-110-039 222-24012172271723117408174100-001-109-0490-001-110-0290-001-110-041 "110" SERIES,/ W480-48 RUBBER SHOCK INSERT, W480-58 GEAR RING, W480-59 TRACK SUPPORT.
BOSCH  W480-36 BOSCH PERMA-MAGNET STARTER REPAIR KIT FERRARI LANCIA VOLKSWAGEN 1703017128 0-001-110-0010-001-110-0140-001-110-076 0-001-110-0020-001-110-0150-001-110-077 0-001-110-0040-001-110-027 KIT INCLUDES: W480-16 GEAR TRACK, W410-15 BRUSH SET, W420-20 CE BUSHING, W420-08 DE BUSHING, W420-21 GI BUSHING	BOSCH  W480-39 BOSCH PERMA-MAGNET STARTER REPAIR KIT FERRARI MERCEDES 17227 0-001-110-0520-001-110-053 KIT INCLUDES: W480-16 GEAR TRACK, W410-15 BRUSH SET, W420-24 CE BUSHING, W420-05 DE BUSHING, W420-21 GI BUSHING	BOSCH  W480-42 BOSCH STARTER BRUSH SPRING "108" SERIES ALFA ROMEO CADILLAC AUDI CHRYSLER BMW DODGE 14147 156-24001 69-91706 1695616963169761698017011170131702317039171241713517140171480-001-108-0010-001-108-0020-001-108-0030-001-108-0050-001-108-0070-001-108-0090-001-108-0100-001-108-0120-001-108-0138.4mm x 18mm L BRUSH SET USE W410-14, BRUSH CLIP USE W480-45.

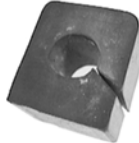
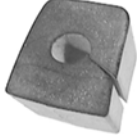
BOSCH  W480-43 BOSCH STARTER PARTS KIT <table> <tr> <td>ACME BERTOLINI</td> <td>ALFA ROMEO BMW</td> <td>AUDI BOMAG</td> </tr> </table> 1-007-010-000 1-007-010-003 <table> <tr> <td>16296 16299</td> <td>16300 16318</td> <td>16320 16327</td> </tr> <tr> <td>16330 16332</td> <td>16334 16336</td> <td>16339 16341</td> </tr> <tr> <td>0-001-207-001</td> <td>0-001-207-003</td> <td>0-001-207-005</td> </tr> <tr> <td>0-001-207-014</td> <td>0-001-207-016</td> <td>0-001-207-017</td> </tr> <tr> <td>0-001-207-018</td> <td>0-001-207-019</td> <td>0-001-207-020</td> </tr> </table> KIT INCLUDES: REAR SPACERS, C-CLIP, WASHERS, DRIVE CLIP ***AS OF 12/12/11 BOSCH DOES NOT INCLUDE THE RUBBER SEAL PARTS	ACME BERTOLINI	ALFA ROMEO BMW	AUDI BOMAG	16296 16299	16300 16318	16320 16327	16330 16332	16334 16336	16339 16341	0-001-207-001	0-001-207-003	0-001-207-005	0-001-207-014	0-001-207-016	0-001-207-017	0-001-207-018	0-001-207-019	0-001-207-020	BOSCH  W480-46 BOSCH BRUSH HOLDER CLIP "110" SERIES <table> <tr> <td>ACME CASE</td> <td>AUDI CHRYSLER</td> <td>BMW CITROEN</td> </tr> </table> 14187 151-24002 69-91201 <table> <tr> <td>17030 17038</td> <td>17047 17068</td> <td>17128 17149</td> </tr> <tr> <td>17150 17158</td> <td>17226 17227</td> <td>17231 17237</td> </tr> <tr> <td>0-001-109-001</td> <td>0-001-109-002</td> <td>0-001-109-006</td> </tr> <tr> <td>0-001-109-008</td> <td>0-001-109-009</td> <td>0-001-109-012</td> </tr> <tr> <td>0-001-109-043</td> <td>0-001-110-001</td> <td>0-001-110-002</td> </tr> </table> "110" PERMA-MAGNET GEAR REDUCTION STARTERS, BRUSH SPRING W480-44, BRUSH SET W410-15.	ACME CASE	AUDI CHRYSLER	BMW CITROEN	17030 17038	17047 17068	17128 17149	17150 17158	17226 17227	17231 17237	0-001-109-001	0-001-109-002	0-001-109-006	0-001-109-008	0-001-109-009	0-001-109-012	0-001-109-043	0-001-110-001	0-001-110-002	BOSCH  W480-49 BOSCH METAL GEAR TRACK RING <table> <tr> <td>AUDI CITROEN</td> <td>BMW FORD</td> <td>CADILLAC MERCEDES</td> </tr> </table> 76-91832 S-3326 <table> <tr> <td>16956 17023</td> <td>17039 17135</td> <td>17140 17148</td> </tr> <tr> <td>17236 17406</td> <td>17508 17699</td> <td>17720 17751</td> </tr> <tr> <td>0-001-107-054</td> <td>0-001-107-067</td> <td>0-001-107-068</td> </tr> <tr> <td>0-001-107-073</td> <td>0-001-107-074</td> <td>0-001-107-078</td> </tr> <tr> <td>0-001-108-003</td> <td>0-001-108-018</td> <td>0-001-108-021</td> </tr> </table> 37 TEETH "108" SERIES PMGR STARTERS, PLASTIC TRACK W480-40, RUBBER INSERT W480-47.	AUDI CITROEN	BMW FORD	CADILLAC MERCEDES	16956 17023	17039 17135	17140 17148	17236 17406	17508 17699	17720 17751	0-001-107-054	0-001-107-067	0-001-107-068	0-001-107-073	0-001-107-074	0-001-107-078	0-001-108-003	0-001-108-018	0-001-108-021
ACME BERTOLINI	ALFA ROMEO BMW	AUDI BOMAG																																																						
16296 16299	16300 16318	16320 16327																																																						
16330 16332	16334 16336	16339 16341																																																						
0-001-207-001	0-001-207-003	0-001-207-005																																																						
0-001-207-014	0-001-207-016	0-001-207-017																																																						
0-001-207-018	0-001-207-019	0-001-207-020																																																						
ACME CASE	AUDI CHRYSLER	BMW CITROEN																																																						
17030 17038	17047 17068	17128 17149																																																						
17150 17158	17226 17227	17231 17237																																																						
0-001-109-001	0-001-109-002	0-001-109-006																																																						
0-001-109-008	0-001-109-009	0-001-109-012																																																						
0-001-109-043	0-001-110-001	0-001-110-002																																																						
AUDI CITROEN	BMW FORD	CADILLAC MERCEDES																																																						
16956 17023	17039 17135	17140 17148																																																						
17236 17406	17508 17699	17720 17751																																																						
0-001-107-054	0-001-107-067	0-001-107-068																																																						
0-001-107-073	0-001-107-074	0-001-107-078																																																						
0-001-108-003	0-001-108-018	0-001-108-021																																																						
BOSCH  W480-44 BOSCH STARTER BRUSH SPRING "110" SERIES <table> <tr> <td>ACME CASE</td> <td>AUDI CHRYSLER</td> <td>BMW CITROEN</td> </tr> </table> 14182 69-91707 <table> <tr> <td>17030 17038</td> <td>17047 17068</td> <td>17128 17149</td> </tr> <tr> <td>17150 17158</td> <td>17226 17227</td> <td>17231 17237</td> </tr> <tr> <td>0-001-109-001</td> <td>0-001-109-002</td> <td>0-001-109-006</td> </tr> <tr> <td>0-001-109-008</td> <td>0-001-109-009</td> <td>0-001-109-012</td> </tr> <tr> <td>0-001-109-043</td> <td>0-001-110-001</td> <td>0-001-110-002</td> </tr> </table> 10.3mm x 19.5mm L BRUSH SET W410-15, BRUSH CLIP W480-46.	ACME CASE	AUDI CHRYSLER	BMW CITROEN	17030 17038	17047 17068	17128 17149	17150 17158	17226 17227	17231 17237	0-001-109-001	0-001-109-002	0-001-109-006	0-001-109-008	0-001-109-009	0-001-109-012	0-001-109-043	0-001-110-001	0-001-110-002	BOSCH  W480-47 BOSCH RUBBER SHOCK INSERT "108" SERIES <table> <tr> <td>AUDI CHRYSLER</td> <td>BMW DODGE</td> <td>CADILLAC EAGLE</td> </tr> </table> 14188 180-24003 71-91304 S-3349 <table> <tr> <td>16956 17039</td> <td>17135 17140</td> <td>17148 17210</td> </tr> <tr> <td>17236 17406</td> <td>17407 17508</td> <td>17560 17563</td> </tr> <tr> <td>0-001-107-031</td> <td>0-001-107-032</td> <td>0-001-107-037</td> </tr> <tr> <td>0-001-107-048</td> <td>0-001-107-049</td> <td>0-001-107-054</td> </tr> <tr> <td>0-001-107-067</td> <td>0-001-107-068</td> <td>0-001-107-073</td> </tr> </table> 12mm X 20mm "108" SERIES PMGR STARTERS, PLASTIC TRACK WITH W480-40, GEAR TRACK RING W480-49.	AUDI CHRYSLER	BMW DODGE	CADILLAC EAGLE	16956 17039	17135 17140	17148 17210	17236 17406	17407 17508	17560 17563	0-001-107-031	0-001-107-032	0-001-107-037	0-001-107-048	0-001-107-049	0-001-107-054	0-001-107-067	0-001-107-068	0-001-107-073	BOSCH  W480-50 BOSCH METAL PLANETARY GEAR HOUSING <table> <tr> <td>ALFA ROMEO CITROEN</td> <td>AUDI DEUTZ-ALLIS</td> <td>BMW DUCATI</td> </tr> </table> 19189 9-002-338-850 <table> <tr> <td>17009 17016</td> <td>17042 17183</td> <td>17234 17817</td> </tr> <tr> <td>18367 18952</td> <td>17921 19723</td> <td>19725 30009</td> </tr> <tr> <td>0-001-218-009</td> <td>0-001-218-012</td> <td>0-001-218-014</td> </tr> <tr> <td>0-001-218-017</td> <td>0-001-218-018</td> <td>0-001-218-019</td> </tr> <tr> <td>0-001-218-022</td> <td>0-001-218-023</td> <td>0-001-218-024</td> </tr> </table> LATE USE W480-60 RUBBER SHOCK INSERT, W480-70 GEAR RING, W480-71 CLOSURE CAP. CAN REPLACE W480-23 PLASTIC GEAR TRACK, MAY NEED TO BORE	ALFA ROMEO CITROEN	AUDI DEUTZ-ALLIS	BMW DUCATI	17009 17016	17042 17183	17234 17817	18367 18952	17921 19723	19725 30009	0-001-218-009	0-001-218-012	0-001-218-014	0-001-218-017	0-001-218-018	0-001-218-019	0-001-218-022	0-001-218-023	0-001-218-024
ACME CASE	AUDI CHRYSLER	BMW CITROEN																																																						
17030 17038	17047 17068	17128 17149																																																						
17150 17158	17226 17227	17231 17237																																																						
0-001-109-001	0-001-109-002	0-001-109-006																																																						
0-001-109-008	0-001-109-009	0-001-109-012																																																						
0-001-109-043	0-001-110-001	0-001-110-002																																																						
AUDI CHRYSLER	BMW DODGE	CADILLAC EAGLE																																																						
16956 17039	17135 17140	17148 17210																																																						
17236 17406	17407 17508	17560 17563																																																						
0-001-107-031	0-001-107-032	0-001-107-037																																																						
0-001-107-048	0-001-107-049	0-001-107-054																																																						
0-001-107-067	0-001-107-068	0-001-107-073																																																						
ALFA ROMEO CITROEN	AUDI DEUTZ-ALLIS	BMW DUCATI																																																						
17009 17016	17042 17183	17234 17817																																																						
18367 18952	17921 19723	19725 30009																																																						
0-001-218-009	0-001-218-012	0-001-218-014																																																						
0-001-218-017	0-001-218-018	0-001-218-019																																																						
0-001-218-022	0-001-218-023	0-001-218-024																																																						
BOSCH  W480-45 BOSCH BRUSH HOLDER CLIP"108" SERIES <table> <tr> <td>ALFA ROMEO CHRYSLER</td> <td>AUDI DODGE</td> <td>BMW EAGLE</td> </tr> </table> 14186 151-24008 69-91200 <table> <tr> <td>16956 16963</td> <td>16976 16980</td> <td>17011 17013</td> </tr> <tr> <td>17023 17039</td> <td>17124 17135</td> <td>17140 17148</td> </tr> <tr> <td>0-001-108-001</td> <td>0-001-108-002</td> <td>0-001-108-003</td> </tr> <tr> <td>0-001-108-005</td> <td>0-001-108-007</td> <td>0-001-108-009</td> </tr> <tr> <td>0-001-108-010</td> <td>0-001-108-012</td> <td>0-001-108-013</td> </tr> </table> PMGR G/R STARTERS, BRUSH SPRING USE W480-42, BRUSH SET W410-14.	ALFA ROMEO CHRYSLER	AUDI DODGE	BMW EAGLE	16956 16963	16976 16980	17011 17013	17023 17039	17124 17135	17140 17148	0-001-108-001	0-001-108-002	0-001-108-003	0-001-108-005	0-001-108-007	0-001-108-009	0-001-108-010	0-001-108-012	0-001-108-013	BOSCH  W480-48 BOSCH RUBBER SHOCK INSERT "110" SERIES <table> <tr> <td>ALFA ROMEO FARYMANN</td> <td>AUDI FIAT</td> <td>BMW HATZ</td> </tr> </table> 14189 71-91310 S-3350 <table> <tr> <td>17038 17150</td> <td>17158 17226</td> <td>17227 17231</td> </tr> <tr> <td>17237 17279</td> <td>17280 17281</td> <td>17408 17410</td> </tr> <tr> <td>0-001-109-017</td> <td>0-001-109-025</td> <td>0-001-109-029</td> </tr> <tr> <td>0-001-109-030</td> <td>0-001-109-033</td> <td>0-001-109-035</td> </tr> <tr> <td>0-001-109-041</td> <td>0-001-109-043</td> <td>0-001-109-045</td> </tr> </table> 14mm X 20mm "110" SERIES PMGR STARTERS, PLASTIC TRACK W480-41, GEAR TRACK RING W480-58.	ALFA ROMEO FARYMANN	AUDI FIAT	BMW HATZ	17038 17150	17158 17226	17227 17231	17237 17279	17280 17281	17408 17410	0-001-109-017	0-001-109-025	0-001-109-029	0-001-109-030	0-001-109-033	0-001-109-035	0-001-109-041	0-001-109-043	0-001-109-045	BOSCH  W480-55 BOSCH PLANETARY GEAR TRACK SUPPORT <table> <tr> <td>AUDI FORD</td> <td>BMW LOMBARDINI</td> <td>CITROEN MERCEDES</td> </tr> </table> 14169 S-3347 <table> <tr> <td>16956 17023</td> <td>17039 17135</td> <td>17140 17148</td> </tr> <tr> <td>17236 17406</td> <td>17508 17699</td> <td>18365</td> </tr> <tr> <td>0-001-108-003</td> <td>0-001-108-018</td> <td>0-001-108-021</td> </tr> <tr> <td>0-001-108-042</td> <td>0-001-108-054</td> <td>0-001-108-063</td> </tr> <tr> <td>0-001-108-064</td> <td>0-001-108-065</td> <td>0-001-108-074</td> </tr> </table> GEAR TRACK W480-40, CLOSURE CAP W480-67.	AUDI FORD	BMW LOMBARDINI	CITROEN MERCEDES	16956 17023	17039 17135	17140 17148	17236 17406	17508 17699	18365	0-001-108-003	0-001-108-018	0-001-108-021	0-001-108-042	0-001-108-054	0-001-108-063	0-001-108-064	0-001-108-065	0-001-108-074
ALFA ROMEO CHRYSLER	AUDI DODGE	BMW EAGLE																																																						
16956 16963	16976 16980	17011 17013																																																						
17023 17039	17124 17135	17140 17148																																																						
0-001-108-001	0-001-108-002	0-001-108-003																																																						
0-001-108-005	0-001-108-007	0-001-108-009																																																						
0-001-108-010	0-001-108-012	0-001-108-013																																																						
ALFA ROMEO FARYMANN	AUDI FIAT	BMW HATZ																																																						
17038 17150	17158 17226	17227 17231																																																						
17237 17279	17280 17281	17408 17410																																																						
0-001-109-017	0-001-109-025	0-001-109-029																																																						
0-001-109-030	0-001-109-033	0-001-109-035																																																						
0-001-109-041	0-001-109-043	0-001-109-045																																																						
AUDI FORD	BMW LOMBARDINI	CITROEN MERCEDES																																																						
16956 17023	17039 17135	17140 17148																																																						
17236 17406	17508 17699	18365																																																						
0-001-108-003	0-001-108-018	0-001-108-021																																																						
0-001-108-042	0-001-108-054	0-001-108-063																																																						
0-001-108-064	0-001-108-065	0-001-108-074																																																						

BOSCH  W480-56 BOSCH PLANETARY PINION BMW MERCEDES ISUZU LANDROVER 17039 17236 17770 0-001-108-003 0-001-108-054 0-001-108-131 F-005-M00-001 W480-27 W480-28 W480-63 W480-64 W480-80 19mm OD, 8.5mm THICK , 13TH "108" SERIES, INCLUDES BEARING, GEAR PIN W480-61, NEEDLE BEARING W02X-68.	BOSCH  W480-59 BOSCH PLANETARY GEAR TRACK SUPPORT AUDI LINDE BMW MERCEDES FARYMANN PORSCHE 14803 S-3348 17497 17698 17759 17918 17925 17977 0-001-109-017 0-001-109-049 0-001-109-059 0-001-110-071 0-001-110-091 0-001-110-110 0-001-110-126 0-001-110-136 0-001-124-015 "110" SERIES, CLOSURE CAP W480-66, GEAR TRACK W480-41, GEAR RING W480-58.	BOSCH  W480-62 BOSCH PLANETARY GEAR PIN BMW MERCEDES S-3338 17497 17698 0-001-110-071 0-001-110-091 W480-32 W480-33 W480-65 6mm x 19mm LONG "110" SERIES, USED WITH GEAR PINION W480-57.
BOSCH  W480-57 BOSCH PLANETARY PINION BMW MERCEDES PERKINS S-3335 17497 17698 18949 0-001-109-035 0-001-110-071 0-001-110-091 0-001-110-110 W480-32 W480-33 W480-65 19mm OD, 10.5mm THICK , 13TH "110" SERIES, INCLUDES BEARING, GEAR PIN W480-62, NEEDLE BEARING W02X-68.	BOSCH  W480-60 BOSCH PLANETARY RUBBER SHOCK INSERT ALFA ROMEO AUDI DUCATI BMW FIAT DEUTZ-ALLIS 71-91313 9-003-331-003 S-3337 17009 17016 17040 17042 17183 17234 17414 17817 18230 18367 18952 19723 0-001-218-004 0-001-218-006 0-001-218-009 0-001-218-012 0-001-218-013 0-001-218-017 0-001-218-018 0-001-218-019 0-001-218-021 . "218" & "219" SERIES WITH METAL GEAR TRACK . USED IN W480-50, GEAR RING W480-70, CLOSURE CAP W480-71	BOSCH  W480-63 BOSCH PLANETARY GEAR TRAIN ASSEMBLY BMW FORD CHEVROLET MERCEDES CITROEN OPEL 01-7753 1-006-200-017 1-006-200-104 1-006-200-903 S-3284 S-3296 17039 17135 17140 17148 17236 17406 17508 17699 0-001-108-003 0-001-108-018 0-001-108-042 0-001-108-054 0-001-108-063 0-001-108-064 0-001-108-065 0-001-108-074 0-001-108-080 CW 98mm SHAFT x 12mm OD "108" SERIES, PLASTIC GEAR HOUSING W480-40, RUBBER SHOCK W480-47, STEEL RING GEAR W480-49, TRACK SUPPORT W480-55, GEAR PINION W480-
BOSCH  W480-58 BOSCH METAL GEAR TRACK RING BMW MERCEDES PORSCHE S-3330 S-3336 17497 17698 17759 17925 0-001-110-071 0-001-110-091 0-001-110-110 0-001-124-015 0-001-125-025 W480-105 W480-106 W480-110 W480-65 42TH "110" SERIES, CLOSURE CAP W480-66, PLASTIC TRACK W480-41, RUBBER INSERT W480-48.	BOSCH  W480-61 BOSCH PLANETARY GEAR PIN BMW LANDROVER S-3333 17236 0-001-108-054 0-001-108-131 W480-27 W480-28 W480-63 W480-64 W480-80 6mm x 16mm LONG "108" SERIES, USED WITH GEAR PINION W480-56.	BOSCH  W480-64 BOSCH PLANETARY GEAR TRAIN ASSEMBLY PORSCHE 1-006-200-014 1-006-200-900 S-3284 17023 0-001-108-021 CCW 98mm SHAFT x 12mm OD "108" SERIES, PLASTIC GEAR HOUSING W480-40, RUBBER SHOCK W480-47, STEEL RING GEAR W480-49, TRACK SUPPORT W480-55, GEAR PINION W480-


BOSCH  W480-65 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>AUDI SKODA</td><td>BMW VOLKSWAGEN</td><td>MERCEDES</td></tr></table><table><tr><td>1-006-200-016 S-3297</td><td>1-006-200-152</td><td>1-006-200-902</td></tr></table><table><tr><td>17038</td><td>17150</td><td>17226</td><td>17227</td><td>17237</td><td>17410</td></tr><tr><td>17497</td><td>17698</td><td>17752</td><td>17977</td><td>19007</td><td></td></tr></table><table><tr><td>0-001-110-016</td><td>0-001-110-028</td><td>0-001-110-029</td></tr><tr><td>0-001-110-030</td><td>0-001-110-039</td><td>0-001-110-041</td></tr><tr><td>0-001-110-048</td><td>0-001-110-053</td><td>0-001-110-054</td></tr></table> CW 98mm SHAFT x 12mm OD "110" SERIES, PLASTIC GEAR HOUSING W480-41, RUBBER SHOCK W480-48, STEEL RING GEAR W480-58, TRACK SUPPORT W480-59, GEAR PINION W480-	AUDI SKODA	BMW VOLKSWAGEN	MERCEDES	1-006-200-016 S-3297	1-006-200-152	1-006-200-902	17038	17150	17226	17227	17237	17410	17497	17698	17752	17977	19007		0-001-110-016	0-001-110-028	0-001-110-029	0-001-110-030	0-001-110-039	0-001-110-041	0-001-110-048	0-001-110-053	0-001-110-054	BOSCH  W480-68 BOSCH PLASTIC PLANETARY GEAR <table><tr><td>AUDI FERRARI</td><td>BERTOLINI GOLDONI</td><td>DEUTZ-ALLIS ISUZU</td></tr></table><table><tr><td>1-005-821-312 222-24005</td><td>12693 76-91821</td><td>19139</td></tr></table><table><tr><td>17222</td><td>17223</td><td>17415</td><td>17416</td><td>17770</td><td>18473</td></tr><tr><td>19669</td><td>33033</td><td></td><td></td><td></td><td></td></tr></table><table><tr><td>0-001-107-003</td><td>0-001-107-004</td><td>0-001-107-005</td></tr><tr><td>0-001-107-007</td><td>0-001-107-008</td><td>0-001-107-020</td></tr><tr><td>0-001-107-021</td><td>0-001-107-022</td><td>0-001-107-023</td></tr></table> 69.5mm OD, 37 TEETH "107" SERIES. CLOSURE CAP W480-25.	AUDI FERRARI	BERTOLINI GOLDONI	DEUTZ-ALLIS ISUZU	1-005-821-312 222-24005	12693 76-91821	19139	17222	17223	17415	17416	17770	18473	19669	33033					0-001-107-003	0-001-107-004	0-001-107-005	0-001-107-007	0-001-107-008	0-001-107-020	0-001-107-021	0-001-107-022	0-001-107-023	BOSCH  W480-71 BOSCH PLANETARY GEAR CLOSURE CAP <table><tr><td>ALFA ROMEO FORD</td><td>BMW KHD</td><td>FIAT LANDROVER</td></tr></table><table><tr><td>9-003-330-509</td><td>S-3328</td><td></td></tr></table><table><tr><td>17009</td><td>17016</td><td>17042</td><td>17183</td><td>17234</td><td>18230</td></tr><tr><td>18367</td><td>18952</td><td>30131</td><td>30663</td><td>30676</td><td>32160</td></tr></table><table><tr><td>0-001-218-014</td><td>0-001-218-018</td><td>0-001-218-019</td></tr><tr><td>0-001-218-022</td><td>0-001-218-023</td><td>0-001-218-026</td></tr><tr><td>0-001-218-027</td><td>0-001-218-101</td><td>0-001-218-102</td></tr></table> "218 & 219" SERIES. USED ON COMPLETE ASSEMBLY W480-50	ALFA ROMEO FORD	BMW KHD	FIAT LANDROVER	9-003-330-509	S-3328		17009	17016	17042	17183	17234	18230	18367	18952	30131	30663	30676	32160	0-001-218-014	0-001-218-018	0-001-218-019	0-001-218-022	0-001-218-023	0-001-218-026	0-001-218-027	0-001-218-101	0-001-218-102
AUDI SKODA	BMW VOLKSWAGEN	MERCEDES																																																																																	
1-006-200-016 S-3297	1-006-200-152	1-006-200-902																																																																																	
17038	17150	17226	17227	17237	17410																																																																														
17497	17698	17752	17977	19007																																																																															
0-001-110-016	0-001-110-028	0-001-110-029																																																																																	
0-001-110-030	0-001-110-039	0-001-110-041																																																																																	
0-001-110-048	0-001-110-053	0-001-110-054																																																																																	
AUDI FERRARI	BERTOLINI GOLDONI	DEUTZ-ALLIS ISUZU																																																																																	
1-005-821-312 222-24005	12693 76-91821	19139																																																																																	
17222	17223	17415	17416	17770	18473																																																																														
19669	33033																																																																																		
0-001-107-003	0-001-107-004	0-001-107-005																																																																																	
0-001-107-007	0-001-107-008	0-001-107-020																																																																																	
0-001-107-021	0-001-107-022	0-001-107-023																																																																																	
ALFA ROMEO FORD	BMW KHD	FIAT LANDROVER																																																																																	
9-003-330-509	S-3328																																																																																		
17009	17016	17042	17183	17234	18230																																																																														
18367	18952	30131	30663	30676	32160																																																																														
0-001-218-014	0-001-218-018	0-001-218-019																																																																																	
0-001-218-022	0-001-218-023	0-001-218-026																																																																																	
0-001-218-027	0-001-218-101	0-001-218-102																																																																																	
BOSCH  W480-66 BOSCH PLANETARY GEAR CLOSURE CAP <table><tr><td>AUDI LINDE</td><td>BMW MERCEDES</td><td>FARYMANN PORSCHE</td></tr></table> S-3344 <table><tr><td>17497</td><td>17698</td><td>17759</td><td>17918</td><td>17925</td><td>17977</td></tr></table><table><tr><td>0-001-109-017</td><td>0-001-109-049</td><td>0-001-109-059</td></tr><tr><td>0-001-110-071</td><td>0-001-110-091</td><td>0-001-110-126</td></tr><tr><td>0-001-110-136</td><td>0-001-124-015</td><td>0-001-125-025</td></tr></table> "110" SERIES, PLASTIC TRACK W480-41, TRACK SUPPORT W480-59.	AUDI LINDE	BMW MERCEDES	FARYMANN PORSCHE	17497	17698	17759	17918	17925	17977	0-001-109-017	0-001-109-049	0-001-109-059	0-001-110-071	0-001-110-091	0-001-110-126	0-001-110-136	0-001-124-015	0-001-125-025	BOSCH  W480-69 BOSCH PLASTIC PLANETARY GEAR <table><tr><td>SEAT</td><td>VOLKSWAGEN</td></tr></table> 1-005-821-313 <table><tr><td>0-001-109-001</td><td>0-001-109-002</td><td>0-001-109-006</td></tr></table> 74mm OD, 42TH "109" SERIES, CLOSURE CAP W480-26.	SEAT	VOLKSWAGEN	0-001-109-001	0-001-109-002	0-001-109-006	BOSCH  W480-72 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>VOLKSWAGEN</td></tr></table><table><tr><td>1-006-200-037</td><td>1-006-200-130</td></tr></table><table><tr><td>17223</td><td>17416</td></tr></table><table><tr><td>0-001-107-003</td><td>0-001-107-004</td><td>0-001-107-022</td></tr><tr><td>0-001-107-023</td><td></td><td></td></tr></table> CCW 116mm SHAFT x 12mm OD "107" SERIES,	VOLKSWAGEN	1-006-200-037	1-006-200-130	17223	17416	0-001-107-003	0-001-107-004	0-001-107-022	0-001-107-023																																																	
AUDI LINDE	BMW MERCEDES	FARYMANN PORSCHE																																																																																	
17497	17698	17759	17918	17925	17977																																																																														
0-001-109-017	0-001-109-049	0-001-109-059																																																																																	
0-001-110-071	0-001-110-091	0-001-110-126																																																																																	
0-001-110-136	0-001-124-015	0-001-125-025																																																																																	
SEAT	VOLKSWAGEN																																																																																		
0-001-109-001	0-001-109-002	0-001-109-006																																																																																	
VOLKSWAGEN																																																																																			
1-006-200-037	1-006-200-130																																																																																		
17223	17416																																																																																		
0-001-107-003	0-001-107-004	0-001-107-022																																																																																	
0-001-107-023																																																																																			
BOSCH  W480-67 BOSCH PLANETARY GEAR CLOSURE CAP <table><tr><td>AUDI CHRYSLER</td><td>BMW CITROEN</td><td>CADILLAC DODGE</td></tr></table><table><tr><td>1-000-290-050</td><td>S-3345</td></tr></table><table><tr><td>16956</td><td>17023</td><td>17039</td><td>17135</td><td>17140</td><td>17148</td></tr><tr><td>17236</td><td>17406</td><td>17508</td><td>17560</td><td>17563</td><td>17699</td></tr></table><table><tr><td>0-001-107-031</td><td>0-001-107-032</td><td>0-001-107-037</td></tr><tr><td>0-001-107-048</td><td>0-001-107-049</td><td>0-001-107-054</td></tr><tr><td>0-001-107-067</td><td>0-001-107-068</td><td>0-001-107-073</td></tr></table> PLASTIC TRACK W480-40, TRACK SUPPORT W480-55.	AUDI CHRYSLER	BMW CITROEN	CADILLAC DODGE	1-000-290-050	S-3345	16956	17023	17039	17135	17140	17148	17236	17406	17508	17560	17563	17699	0-001-107-031	0-001-107-032	0-001-107-037	0-001-107-048	0-001-107-049	0-001-107-054	0-001-107-067	0-001-107-068	0-001-107-073	BOSCH  W480-70 BOSCH METAL GEAR TRACK RING <table><tr><td>ALFA ROMEO DEUTZ-ALLIS</td><td>AUDI DUCATI</td><td>BMW FIAT</td></tr></table><table><tr><td>17009</td><td>17016</td><td>17042</td><td>17183</td><td>18367</td><td>18952</td></tr><tr><td>30131</td><td>30663</td><td>30676</td><td>32160</td><td>32806</td><td></td></tr></table><table><tr><td>0-001-218-009</td><td>0-001-218-012</td><td>0-001-218-014</td></tr><tr><td>0-001-218-017</td><td>0-001-218-018</td><td>0-001-218-019</td></tr><tr><td>0-001-218-022</td><td>0-001-218-023</td><td>0-001-218-026</td></tr></table> "218 & 219" SERIES, COMPLETE ASSEMBLY W480-50, RUBBER SHOCK INSERT W480-60, CLOSURE CAP W480-71.	ALFA ROMEO DEUTZ-ALLIS	AUDI DUCATI	BMW FIAT	17009	17016	17042	17183	18367	18952	30131	30663	30676	32160	32806		0-001-218-009	0-001-218-012	0-001-218-014	0-001-218-017	0-001-218-018	0-001-218-019	0-001-218-022	0-001-218-023	0-001-218-026	BOSCH  W480-73 BOSCH PLANETARY GEAR TRAIN ASSEMBLY <table><tr><td>ALFA ROMEO LANDROVER</td><td>AUDI MERCEDES</td><td>BMW NISSAN</td></tr></table><table><tr><td>9-001-337-058</td><td>S-3331</td><td></td></tr></table><table><tr><td>17009</td><td>17016</td><td>17042</td><td>17183</td><td>17817</td><td>18367</td></tr><tr><td>30131</td><td>30646</td><td>33090</td><td></td><td></td><td></td></tr></table><table><tr><td>0-001-218-004</td><td>0-001-218-007</td><td>0-001-218-009</td></tr><tr><td>0-001-218-012</td><td>0-001-218-013</td><td>0-001-218-017</td></tr><tr><td>0-001-218-018</td><td>0-001-218-019</td><td>0-001-218-023</td></tr></table> CW 103mm SHAFT x 12mm OD, 4 GEAR STYLE. "218 & 219" SERIES, REPLACES W480-29. COMPLETE ASSEMBLY W480-50, RUBBER SHOCK W480-60, GEAR RING W480-70, CLOSURE CAP W480-71, CENTER	ALFA ROMEO LANDROVER	AUDI MERCEDES	BMW NISSAN	9-001-337-058	S-3331		17009	17016	17042	17183	17817	18367	30131	30646	33090				0-001-218-004	0-001-218-007	0-001-218-009	0-001-218-012	0-001-218-013	0-001-218-017	0-001-218-018	0-001-218-019	0-001-218-023				
AUDI CHRYSLER	BMW CITROEN	CADILLAC DODGE																																																																																	
1-000-290-050	S-3345																																																																																		
16956	17023	17039	17135	17140	17148																																																																														
17236	17406	17508	17560	17563	17699																																																																														
0-001-107-031	0-001-107-032	0-001-107-037																																																																																	
0-001-107-048	0-001-107-049	0-001-107-054																																																																																	
0-001-107-067	0-001-107-068	0-001-107-073																																																																																	
ALFA ROMEO DEUTZ-ALLIS	AUDI DUCATI	BMW FIAT																																																																																	
17009	17016	17042	17183	18367	18952																																																																														
30131	30663	30676	32160	32806																																																																															
0-001-218-009	0-001-218-012	0-001-218-014																																																																																	
0-001-218-017	0-001-218-018	0-001-218-019																																																																																	
0-001-218-022	0-001-218-023	0-001-218-026																																																																																	
ALFA ROMEO LANDROVER	AUDI MERCEDES	BMW NISSAN																																																																																	
9-001-337-058	S-3331																																																																																		
17009	17016	17042	17183	17817	18367																																																																														
30131	30646	33090																																																																																	
0-001-218-004	0-001-218-007	0-001-218-009																																																																																	
0-001-218-012	0-001-218-013	0-001-218-017																																																																																	
0-001-218-018	0-001-218-019	0-001-218-023																																																																																	

BOSCH  W480-74 BOSCH PLANETARY GEAR TRAIN ASSEMBLY VOLKSWAGEN 9-001-337-061 0-001-219-002 101mm SHAFT x 12mm OD, 4 GEAR STYLE "219" SERIES, COMPLETE ASSEMBLY W480-50. RUBBER SHOCK W480-60, GEAR RING W480-70, CLOSURE CAP W480-71, CENTER BUSHING W420-16.	BOSCH  W480-77 BOSCH STARTER THRU BOLT AUDI BMW CHRYSLER CITROEN DEUTZ-ALLIS DODGE 1-003-450-013 85-1333 16956 16963 16976 16980 17011 17039 17134 17135 17140 17163 17210 17222 0-001-107-034 0-001-107-062 0-001-108-003 0-001-108-013 0-001-108-022 0-001-108-023 0-001-108-026 0-001-108-027 0-001-108-030 5mm x 0.8mm x 135mm L, 8mm HEX HEAD FOR FIELD CASING SEE W510-00	BOSCH  W480-80 BOSCH PLANETARY GEAR TRAIN ASSEMBLY ALFA ROMEO AUDI BMW CITROEN FIAT FORD 16956 17013 17039 17135 17140 17148 17164 17236 17406 17508 17699 32213 0-001-108-001 0-001-108-002 0-001-108-003 0-001-108-004 0-001-108-007 0-001-108-009 0-001-108-010 0-001-108-011 0-001-108-012 CW 98mm SHAFT x 12mm OD "108" SERIES, FOR COMPLETE ASSEMBLY USE W480-27, W470-28, W480-63
BOSCH  W480-75 BOSCH PMGR SHIFT LEVER SUPPORT ALFA ROMEO AUDI BMW CHRYSLER DODGE JEEP 55-91400 84AB-11K126-AB 16956 16963 16976 16980 17011 17013 17023 17030 17038 17039 17047 17068 0-001-108-003 0-001-108-009 0-001-108-010 0-001-108-012 0-001-108-013 0-001-108-018 0-001-108-021 0-001-108-024 0-001-108-026 33mm OAL "108 & 110" SERIES, FOR SUPPORT WITH 29mm LENGTH SEE W480-91. SHIFT LEVER FORK W480-18.	BOSCH  W480-78 BOSCH STARTER DRIVE END GROMMET PLUG ALFA ROMEO AUDI BMW CHRYSLER DODGE EAGLE 71-91305 16956 16963 16976 16980 17011 17013 17023 17038 17039 17047 17068 17124 0-001-108-003 0-001-108-009 0-001-108-010 0-001-108-012 0-001-108-013 0-001-108-018 0-001-108-021 0-001-108-024 0-001-108-026 12mm THICK BLOCK.	BOSCH  W480-81 BOSCH PLANETARY PINION AUDI BMW CITROEN MERCEDES VOLKSWAGEN VOLVO 17009 17016 17040 17042 17183 30651 0-001-218-003 0-001-218-004 0-001-218-006 0-001-218-009 0-001-218-012 0-001-218-013 0-001-218-017 0-001-218-018 0-001-218-021 12TH, 18.3mm x 11.9mm HIGH "218" SERIES, INCLUDES BEARING, GEAR PIN W480-92
BOSCH  W480-76 BOSCH STARTER GROMMET PLUG CITROEN PEUGEOT VOLVO 17135 0-001-108-030 0-001-108-085 11mm x 18mm STEP "108" SERIES,	BOSCH  W480-79 BOSCH SOLENOID CONTACT STUD VOLKSWAGEN 66-91356 16722 16958 16961 17065 17066 17068 0-001-110-009 0-001-208-425 0-001-208-426 0-001-208-428 0-001-208-429 0-001-211-253 0-001-211-254 0-001-212-213 0-001-212-214 8mm x 45mm L, 5.7mm HEAD THICKNESS. FITS SOLENOID W450-47, W450-50, SOLENOID CAP W460-14.	BOSCH  W480-82 BOSCH STARTER F/C LEAD GROMMET ALFA ROMEO AUDI BMW CHRYSLER FIAT FORD 2-002-391-003 16300 16401 16408 16410 16442 16443 16450 16462 16531 16534 16546 16547 0-001-208-200 0-001-208-201 0-001-208-202 0-001-208-203 0-001-208-204 0-001-208-205 0-001-208-206 0-001-208-208 0-001-208-209 10mm x 10mm x 24mm RUBBER, ,FIELD COIL MOTOR LEAD

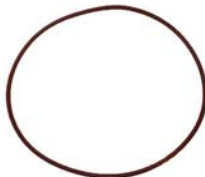
BOSCH  W480-83 BOSCH SOLENOID LOCKING WASHER <table><tr><td>ACME</td><td>ACURA</td><td>ALFA ROMEO</td></tr><tr><td>ALLIS-CHALMERS</td><td>AUDI</td><td>AUSTIN</td></tr></table> 85-9401 <table><tr><td>16110</td><td>16165</td><td>16166</td><td>16173</td><td>16184</td><td>16205</td></tr><tr><td>16207</td><td>16211</td><td>16270</td><td>16284</td><td>16288</td><td>16289</td></tr><tr><td>0-001-107-004</td><td>0-001-107-007</td><td>0-001-107-008</td><td></td><td></td><td></td></tr><tr><td>0-001-107-031</td><td>0-001-107-032</td><td>0-001-107-049</td><td></td><td></td><td></td></tr><tr><td>0-001-107-070</td><td>0-001-108-003</td><td>0-001-108-005</td><td></td><td></td><td></td></tr></table> 8mm ID USED TO SECURE CONTACT STUDS IN SOLENOID CAPS.	ACME	ACURA	ALFA ROMEO	ALLIS-CHALMERS	AUDI	AUSTIN	16110	16165	16166	16173	16184	16205	16207	16211	16270	16284	16288	16289	0-001-107-004	0-001-107-007	0-001-107-008				0-001-107-031	0-001-107-032	0-001-107-049				0-001-107-070	0-001-108-003	0-001-108-005				BOSCH  W480-86 BOSCH SOLENOID STRIKER PLATE <table><tr><td>ALFA ROMEO</td><td>AUDI</td><td>BMW</td></tr><tr><td>BMW MARINE</td><td>CHRYSLER</td><td>DEUTZ-ALLIS</td></tr></table> 03917 66-91650 <table><tr><td>16299</td><td>16401</td><td>16410</td><td>16417</td><td>16530</td><td>16531</td></tr><tr><td>16534</td><td>16538</td><td>16543</td><td>16547</td><td>16548</td><td>16556</td></tr><tr><td>0-001-107-004</td><td>0-001-107-007</td><td>0-001-107-008</td><td></td><td></td><td></td></tr><tr><td>0-001-107-031</td><td>0-001-107-032</td><td>0-001-107-049</td><td></td><td></td><td></td></tr><tr><td>0-001-107-070</td><td>0-001-108-003</td><td>0-001-108-005</td><td></td><td></td><td></td></tr></table> 8.3mm ID x 15mm x 32 x 2.5mm THICK. FOR REPAIRING MOBILE CONTACTS. FITS "303" SERIES, FOR COMPLETE MOBILE CONTACT USE W480-13.	ALFA ROMEO	AUDI	BMW	BMW MARINE	CHRYSLER	DEUTZ-ALLIS	16299	16401	16410	16417	16530	16531	16534	16538	16543	16547	16548	16556	0-001-107-004	0-001-107-007	0-001-107-008				0-001-107-031	0-001-107-032	0-001-107-049				0-001-107-070	0-001-108-003	0-001-108-005				BOSCH  W480-89 BOSCH BRUSH HOLDER CLIP <table><tr><td>BMW</td><td>EBRO</td><td>FIAT</td></tr><tr><td>FORD</td><td>LANDROVER</td><td>MERCEDES</td></tr></table> 9-001-140-383 <table><tr><td>17016</td><td>17183</td><td>17414</td><td>17817</td><td>19721</td><td>30009</td></tr><tr><td>30663</td><td>30676</td><td>32239</td><td>32895</td><td>33090</td><td>33091</td></tr><tr><td>0-001-218-014</td><td>0-001-218-022</td><td>0-001-218-029</td><td></td><td></td><td></td></tr><tr><td>0-001-218-109</td><td>0-001-218-134</td><td>0-001-218-135</td><td></td><td></td><td></td></tr><tr><td>0-001-218-137</td><td>0-001-218-138</td><td>0-001-218-152</td><td></td><td></td><td></td></tr></table> "218 & 219" SERIES STARTERS, BRUSH HOLDER W500-15, BRUSH SPRING W480-90.	BMW	EBRO	FIAT	FORD	LANDROVER	MERCEDES	17016	17183	17414	17817	19721	30009	30663	30676	32239	32895	33090	33091	0-001-218-014	0-001-218-022	0-001-218-029				0-001-218-109	0-001-218-134	0-001-218-135				0-001-218-137	0-001-218-138	0-001-218-152			
ACME	ACURA	ALFA ROMEO																																																																																																												
ALLIS-CHALMERS	AUDI	AUSTIN																																																																																																												
16110	16165	16166	16173	16184	16205																																																																																																									
16207	16211	16270	16284	16288	16289																																																																																																									
0-001-107-004	0-001-107-007	0-001-107-008																																																																																																												
0-001-107-031	0-001-107-032	0-001-107-049																																																																																																												
0-001-107-070	0-001-108-003	0-001-108-005																																																																																																												
ALFA ROMEO	AUDI	BMW																																																																																																												
BMW MARINE	CHRYSLER	DEUTZ-ALLIS																																																																																																												
16299	16401	16410	16417	16530	16531																																																																																																									
16534	16538	16543	16547	16548	16556																																																																																																									
0-001-107-004	0-001-107-007	0-001-107-008																																																																																																												
0-001-107-031	0-001-107-032	0-001-107-049																																																																																																												
0-001-107-070	0-001-108-003	0-001-108-005																																																																																																												
BMW	EBRO	FIAT																																																																																																												
FORD	LANDROVER	MERCEDES																																																																																																												
17016	17183	17414	17817	19721	30009																																																																																																									
30663	30676	32239	32895	33090	33091																																																																																																									
0-001-218-014	0-001-218-022	0-001-218-029																																																																																																												
0-001-218-109	0-001-218-134	0-001-218-135																																																																																																												
0-001-218-137	0-001-218-138	0-001-218-152																																																																																																												
BOSCH  W480-84 BOSCH DRIVE STOP COLLAR <table><tr><td>BOMAG</td><td>FARYMANN</td><td>HATZ</td></tr><tr><td>HOLDER</td><td>KHD</td><td>MAGIRUS DEUTZ</td></tr></table> 1-000-309-009 16299 <table><tr><td>0-001-311-035</td><td>0-001-311-050</td><td>0-001-314-008</td></tr><tr><td>0-001-314-018</td><td>0-001-316-007</td><td>0-001-316-008</td></tr></table> 10SPL PLASTIC STOP COLLAR.	BOMAG	FARYMANN	HATZ	HOLDER	KHD	MAGIRUS DEUTZ	0-001-311-035	0-001-311-050	0-001-314-008	0-001-314-018	0-001-316-007	0-001-316-008	BOSCH  W480-87 BOSCH SHIFT LEVER FORK <table><tr><td>ALFA ROMEO</td><td>AUDI</td><td>BMW</td></tr><tr><td>CITROEN</td><td>DEUTZ-ALLIS</td><td>DODGE</td></tr></table> 1-001-933-101 25162 <table><tr><td>16401</td><td>16408</td><td>16530</td><td>16952</td><td>17009</td><td>17016</td></tr><tr><td>17040</td><td>17042</td><td>17183</td><td>17234</td><td>17414</td><td>17817</td></tr><tr><td>0-001-208-501</td><td>0-001-208-709</td><td>0-001-208-710</td><td></td><td></td><td></td></tr><tr><td>0-001-208-711</td><td>0-001-208-712</td><td>0-001-211-500</td><td></td><td></td><td></td></tr><tr><td>0-001-211-502</td><td>0-001-211-504</td><td>0-001-211-505</td><td></td><td></td><td></td></tr></table> FITS "218 & 219" SERIES STARTERS,	ALFA ROMEO	AUDI	BMW	CITROEN	DEUTZ-ALLIS	DODGE	16401	16408	16530	16952	17009	17016	17040	17042	17183	17234	17414	17817	0-001-208-501	0-001-208-709	0-001-208-710				0-001-208-711	0-001-208-712	0-001-211-500				0-001-211-502	0-001-211-504	0-001-211-505				BOSCH  W480-90 BOSCH BRUSH SPRING "218" SERIES <table><tr><td>ALFA ROMEO</td><td>BMW</td><td>CITROEN</td></tr><tr><td>EBRO</td><td>FIAT</td><td>FORD</td></tr></table> 1-004-615-001 9-001-140-344 <table><tr><td>17016</td><td>17040</td><td>17183</td><td>17234</td><td>17414</td><td>17817</td></tr><tr><td>18230</td><td>18952</td><td>19721</td><td>30009</td><td>30131</td><td>30663</td></tr><tr><td>0-001-218-014</td><td>0-001-218-019</td><td>0-001-218-022</td><td></td><td></td><td></td></tr><tr><td>0-001-218-023</td><td>0-001-218-025</td><td>0-001-218-026</td><td></td><td></td><td></td></tr><tr><td>0-001-218-029</td><td>0-001-218-101</td><td>0-001-218-107</td><td></td><td></td><td></td></tr></table> 11.8mm x 35mm "218 & 219" SERIES, BRUSH HOLDER W500-15, BRUSH CLIP W480-89.	ALFA ROMEO	BMW	CITROEN	EBRO	FIAT	FORD	17016	17040	17183	17234	17414	17817	18230	18952	19721	30009	30131	30663	0-001-218-014	0-001-218-019	0-001-218-022				0-001-218-023	0-001-218-025	0-001-218-026				0-001-218-029	0-001-218-101	0-001-218-107																											
BOMAG	FARYMANN	HATZ																																																																																																												
HOLDER	KHD	MAGIRUS DEUTZ																																																																																																												
0-001-311-035	0-001-311-050	0-001-314-008																																																																																																												
0-001-314-018	0-001-316-007	0-001-316-008																																																																																																												
ALFA ROMEO	AUDI	BMW																																																																																																												
CITROEN	DEUTZ-ALLIS	DODGE																																																																																																												
16401	16408	16530	16952	17009	17016																																																																																																									
17040	17042	17183	17234	17414	17817																																																																																																									
0-001-208-501	0-001-208-709	0-001-208-710																																																																																																												
0-001-208-711	0-001-208-712	0-001-211-500																																																																																																												
0-001-211-502	0-001-211-504	0-001-211-505																																																																																																												
ALFA ROMEO	BMW	CITROEN																																																																																																												
EBRO	FIAT	FORD																																																																																																												
17016	17040	17183	17234	17414	17817																																																																																																									
18230	18952	19721	30009	30131	30663																																																																																																									
0-001-218-014	0-001-218-019	0-001-218-022																																																																																																												
0-001-218-023	0-001-218-025	0-001-218-026																																																																																																												
0-001-218-029	0-001-218-101	0-001-218-107																																																																																																												
BOSCH  W480-85 BOSCH STARTER BRUSH SPRING "107" SERIES <table><tr><td>AUDI</td><td>BERTOLINI</td><td>CHEVROLET</td></tr><tr><td>CHRYSLER</td><td>DEUTZ-ALLIS</td><td>DODGE</td></tr></table> 1-004-611-009 1-004-611-013 156-24000 69-91708 <table><tr><td>17134</td><td>17222</td><td>17223</td><td>17415</td><td>17416</td><td>17560</td></tr><tr><td>17563</td><td>17576</td><td>17730</td><td>17731</td><td>17736</td><td>17751</td></tr><tr><td>0-001-106-011</td><td>0-001-106-019</td><td>0-001-107-003</td><td></td><td></td><td></td></tr><tr><td>0-001-107-004</td><td>0-001-107-005</td><td>0-001-107-007</td><td></td><td></td><td></td></tr><tr><td>0-001-107-008</td><td>0-001-107-012</td><td>0-001-107-017</td><td></td><td></td><td></td></tr></table> 6.5mm x 16mm L "107, 112, 113 & 114" SERIES	AUDI	BERTOLINI	CHEVROLET	CHRYSLER	DEUTZ-ALLIS	DODGE	17134	17222	17223	17415	17416	17560	17563	17576	17730	17731	17736	17751	0-001-106-011	0-001-106-019	0-001-107-003				0-001-107-004	0-001-107-005	0-001-107-007				0-001-107-008	0-001-107-012	0-001-107-017				BOSCH  W480-88 BOSCH BRUSH HOLDER CLIP <table><tr><td>AUDI</td><td>BERTOLINI</td><td>CHEVROLET</td></tr><tr><td>CHRYSLER</td><td>DEUTZ-ALLIS</td><td>DODGE</td></tr></table> 69-91204 <table><tr><td>17134</td><td>17222</td><td>17223</td><td>17415</td><td>17416</td><td>17560</td></tr><tr><td>17563</td><td>17730</td><td>17736</td><td>17751</td><td>17758</td><td>17780</td></tr><tr><td>0-001-106-011</td><td>0-001-106-019</td><td>0-001-107-003</td><td></td><td></td><td></td></tr><tr><td>0-001-107-004</td><td>0-001-107-005</td><td>0-001-107-007</td><td></td><td></td><td></td></tr><tr><td>0-001-107-008</td><td>0-001-107-012</td><td>0-001-107-017</td><td></td><td></td><td></td></tr></table> "107, 112 & 113" SERIES, BRUSHES USE W410-29S.	AUDI	BERTOLINI	CHEVROLET	CHRYSLER	DEUTZ-ALLIS	DODGE	17134	17222	17223	17415	17416	17560	17563	17730	17736	17751	17758	17780	0-001-106-011	0-001-106-019	0-001-107-003				0-001-107-004	0-001-107-005	0-001-107-007				0-001-107-008	0-001-107-012	0-001-107-017				BOSCH  W480-91 BOSCH SHIFT LEVER SUPPORT <table><tr><td>AUDI</td><td>BERTOLINI</td><td>BMW</td></tr><tr><td>CHRYSLER</td><td>CITROEN</td><td>DODGE</td></tr></table> 1-007-010-070 55-91401 <table><tr><td>17135</td><td>17158</td><td>17163</td><td>17226</td><td>17281</td><td>17407</td></tr><tr><td>17409</td><td>17497</td><td>17560</td><td>17563</td><td>17725</td><td>17736</td></tr><tr><td>0-001-106-011</td><td>0-001-106-015</td><td>0-001-106-018</td><td></td><td></td><td></td></tr><tr><td>0-001-106-019</td><td>0-001-107-024</td><td>0-001-107-031</td><td></td><td></td><td></td></tr><tr><td>0-001-107-032</td><td>0-001-107-049</td><td>0-001-108-022</td><td></td><td></td><td></td></tr></table> 29mm OVERALL LENGTH. OFF SET SOLENOID MOUNTING, USED WITH W480-18 FORK, FOR SUPPORT WITH 33mm LENGTH USE W480-75.	AUDI	BERTOLINI	BMW	CHRYSLER	CITROEN	DODGE	17135	17158	17163	17226	17281	17407	17409	17497	17560	17563	17725	17736	0-001-106-011	0-001-106-015	0-001-106-018				0-001-106-019	0-001-107-024	0-001-107-031				0-001-107-032	0-001-107-049	0-001-108-022			
AUDI	BERTOLINI	CHEVROLET																																																																																																												
CHRYSLER	DEUTZ-ALLIS	DODGE																																																																																																												
17134	17222	17223	17415	17416	17560																																																																																																									
17563	17576	17730	17731	17736	17751																																																																																																									
0-001-106-011	0-001-106-019	0-001-107-003																																																																																																												
0-001-107-004	0-001-107-005	0-001-107-007																																																																																																												
0-001-107-008	0-001-107-012	0-001-107-017																																																																																																												
AUDI	BERTOLINI	CHEVROLET																																																																																																												
CHRYSLER	DEUTZ-ALLIS	DODGE																																																																																																												
17134	17222	17223	17415	17416	17560																																																																																																									
17563	17730	17736	17751	17758	17780																																																																																																									
0-001-106-011	0-001-106-019	0-001-107-003																																																																																																												
0-001-107-004	0-001-107-005	0-001-107-007																																																																																																												
0-001-107-008	0-001-107-012	0-001-107-017																																																																																																												
AUDI	BERTOLINI	BMW																																																																																																												
CHRYSLER	CITROEN	DODGE																																																																																																												
17135	17158	17163	17226	17281	17407																																																																																																									
17409	17497	17560	17563	17725	17736																																																																																																									
0-001-106-011	0-001-106-015	0-001-106-018																																																																																																												
0-001-106-019	0-001-107-024	0-001-107-031																																																																																																												
0-001-107-032	0-001-107-049	0-001-108-022																																																																																																												

BOSCH  W480-92 BOSCH PINION GEAR PIN AUDI MERCEDES BMW PEUGEOT CITROEN TALBOT 17009 17016 17040 17042 17183 30651 0-001-218-003 0-001-218-004 0-001-218-006 0-001-218-009 0-001-218-012 0-001-218-013 0-001-218-017 0-001-218-018 0-001-218-020 5mm x 24mm OVERALL LENGTH FITS ALL 3 GEAR STYLE "218" SERIES STARTERS, PINION GEAR W480-81.	BOSCH  W480-95 BOSCH SOLENOID GASKET .75mm - 302 SERIES ACME BERTOLINI ALFA ROMEO BOMAG AUDI BUKH 66-91400 16299 16304 16318 16319 16327 16330 16332 16336 16339 16343 16346 16350 0-001-154-007 0-001-207-001 0-001-207-002 0-001-207-005 0-001-207-008 0-001-207-016 0-001-207-017 0-001-207-019 0-001-207-020 43mm ID x 50mm OD x 0.75mm THICKNESS 1.5 - 2.5mm BURN IN DEPTH RECOMMENDED	BOSCH  W480-98 BOSCH GROMMET PLUG AUDI CADILLAC BERTOLINI CHRYSLER BMW DODGE 71-91309 16963 17210 17222 17223 17231 17279 17408 17415 17416 17417 17508 17560 0-001-107-003 0-001-107-004 0-001-107-007 0-001-107-008 0-001-107-020 0-001-107-021 0-001-107-022 0-001-107-023 0-001-107-024 4.8 x 7.8 x 11.5mm LONG FITS ALL STEEL VERSION, PMGR BRUSH HOLDERS
BOSCH  W480-93 BOSCH PLANETARY GEAR TRAIN ASSEMBLY MERCEDES 9-001-337-056 9-003-336-268 17040 17414 32895 0-001-218-006 0-001-218-021 0-001-218-029 0-001-218-108 0-001-218-109 0-001-218-137 0-001-218-139 0-001-218-150 0-001-218-156 COMPLETE 4 GEAR SYSTEM, REPLACES W480-31. COMPLETE ASSEMBLY W480-50. RUBBER SHOCK W480-60, GEAR RING W480-70, CLOSURE CAP W480-	BOSCH  W480-96 BOSCH FIELD COIL GROMMET ALFA ROMEO CASE AUDI CLAAS BEDFORD EBRO 2-002-380-015 16293 16445 16715 16752 16949 17093 17127 17228 17229 17258 17318 17644 0-001-362-007 0-001-362-020 0-001-362-036 0-001-362-042 0-001-362-045 0-001-362-047 0-001-362-051 0-001-362-052 0-001-362-059 13 x 15 x 17mm, 7mm HOLE FOR TWISTED WIRE	BOSCH  W480-99 BOSCH FIELD COIL GROMMET ACME BMW ALFA ROMEO BPM BERTOLINI DAF 1-002-380-000 71-91314 16299 16318 16319 16320 16330 16332 16334 16336 16339 16346 16353 16354 0-001-207-001 0-001-207-002 0-001-207-003 0-001-207-005 0-001-207-008 0-001-207-014 0-001-207-016 0-001-207-017 0-001-207-018 10.2 x 10.2 x 14.5 LONG, 4mm HOLE FOR 5mm HOLE USE W480-100.
BOSCH  W480-94 BOSCH SOLENOID GASKET .3mm -302 SERIES ALFA ROMEO DUCATI BMW FERRARI DAF FORD 1-330-111-000 16299 16304 16318 16319 16320 16332 16334 16336 16339 16346 16353 16354 0-001-154-007 0-001-207-001 0-001-207-002 0-001-207-003 0-001-207-005 0-001-207-008 0-001-207-014 0-001-207-016 0-001-207-017 43mm ID x 50mm OD x .3mm THICKNESS 1.5 - 2.5mm BURN IN DEPTH RECOMMENDED, W480- 95 IS .75mm THICK	BOSCH  W480-97 BOSCH FIELD COIL GROMMET BMW CATERPILLAR BOMAG CLAAS CASE CLARK 2-002-380-025 16957 16999 17075 17077 17092 17095 17106 17228 17229 17232 17257 17307 0-001-362-300 0-001-362-301 0-001-362-303 0-001-362-304 0-001-362-305 0-001-362-310 0-001-362-312 0-001-362-314 0-001-362-316 13 x 15 x 17mm HIGH, 5mm HOLE FOR SOLID BAR STYLE	BOSCH VALEO  W482-15 VALEO RETAINER RING CLIP ACME BERTOLINI ALFA ROMEO BMW AUDI BMW MARINE 073292 19312 16257 16299 16320 16332 16334 16336 16339 16346 16353 16354 16362 16412 0-001-107-003 0-001-107-004 0-001-107-007 0-001-107-008 0-001-107-010 0-001-107-020 0-001-107-021 0-001-107-022 0-001-107-023 FOR 12mm SHAFTS, 2mm WIRE DIAMETER, 15.5mm OD FOR STOP COLLAR W482-16, ALSO USED IN BOSCH APPLICATIONS, ALSO SEE D48-12

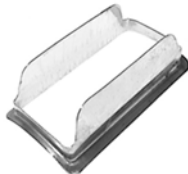
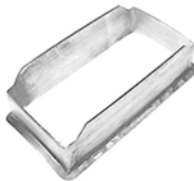
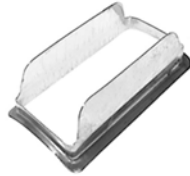
BOSCH VALEO  W482-16 VALEO RETAINER RING ACME AUDI AIFO BERTOLINI ALFA ROMEO BMW 1-000-202-003 2-000-202-022 186235 2-000-202-030 19311 76-91819 16257 16296 16339 16341 16299 16320 16343 16346 16332 16336 16350 16353 0-001-107-003 0-001-107-008 0-001-107-021 12mm ID 0-001-107-004 0-001-107-010 0-001-107-022 0-001-107-007 0-001-107-020 0-001-107-023 DRIVE STOP, USED WITH CLIP W482-15, UNIVERSAL CAN ALSO BE USED IN BOSCH APPLICATIONS	BOSCH UNIVERSAL  WAS2.190 BOSCH DRIVE CAP 55.6mm ID, 39.9mm HOLE, 25.4mm L (2.190", 1.570", 1.000") BOSCH INDUSTRIAL	BOSCH UNIVERSAL  WAS236-315 STARTER DRIVE ROLLER ALFA ROMEO FIAT AUDI MERCEDES BMW MERCURY 16299 16353 16445 16462 16531 16539 16550 16557 16593 16616 16619 16683 0-001-108-054 0-001-108-065 0-001-108-115 0-001-108-145 0-001-208-211 0-001-208-405 0-001-211-207 0-001-211-242 0-001-311-100 6.00mm OD, 8.00mm L (.236" x .315") FOR COMMON 6 ROLLER DRIVES, SPRINGS WAS402
BOSCH MITSUBISHI UNIVERSAL  WAS1.815 STARTER DRIVE CAP ALFA ROMEO MERCEDES BMW MERCURY FIAT MITSUBISHI MOTOR 54-91700 16299 16353 16462 16531 16539 16550 16557 16593 16616 16619 16683 17236 0-001-108-054 0-001-108-065 0-001-108-115 0-001-108-145 0-001-208-211 0-001-208-405 0-001-211-207 0-001-211-242 0-001-311-100 46.0mm ID, 31.8mm HOLE, 18.8mm L (1.815", 1.250", 0.740") FOR COMMON 6 ROLLER DRIVES: W470-20, W470-30, W470-36	BOSCH UNIVERSAL  WAS2.200 STARTER DRIVE CAP BOMAG MERCEDES 16445 16957 16999 0-001-362-038 0-001-362-600 0-001-362-601 0-001-362-605 0-001-369-004 9-000-143-408 55.9mm ID, 39.8mm HOLE, 21.5mm L (2.200", 1.568", 0.845") FITS DRIVE 2-006-209-500	BOSCH MITSUBISHI UNIVERSAL  WAS238-355 STARTER DRIVE ROLLER ALFA ROMEO DODGE CHEVROLET EAGLE CLARK FORD 16194 16246 16339 16450 16514 16527 16551 16569 16579 16708 16728 16742 0-001-211-001 0-001-211-004 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 M0T20672ZC M191T27571 M2T10071 6.05mm OD, 9.02mm L (.238" x .355" L) FITS DRIVES: W470-28, W475-12, W475-18
BOSCH UNIVERSAL  WAS2.055 STARTER DRIVE CAP AUDI MERCEDES VOLVO 16445 16949 0-001-362-047 0-001-362-069 0-001-362-070 0-001-362-077 0-001-362-083 W470-14 W470-15 W470-72 W470-73 52.2mm ID, 33.2mm HOLE, 19.1mm L (2.055", 1.306", 0.750") FITS W470-15 DRIVE	BOSCH UNIVERSAL  WAS2.300 BOSCH DRIVE CAP 58mm ID, 45mm HOLE, 27mm L, (2.300" ID, 1.75 HOLE, 1.10 L)	BOSCH NIPPONDENSO UNIVERSAL  WAS28 STARTER DRIVE SPRING ALFA ROMEO PORSCHE VOLKSWAGEN 16339 16450 16551 0-001-211-001 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 W470-05 W470-06 W470-07 W470-08 4.19mm OD, 20.06mm L, (.165" x .790" L) FOR 5 ROLLER DRIVES, ALSO USED IN NIPPONDENSO DD DRIVES

BOSCH UNIVERSAL  WAS402 STARTER DRIVE SPRING ALFA ROMEO MERCEDES BMW MERCURY FIAT PEUGEOT 162991635316462165311653916550 165571659316616166191668317236 0-001-108-0540-001-108-0650-001-108-115 0-001-108-1450-001-208-2110-001-208-405 0-001-211-2070-001-211-2420-001-311-100 4.52mm x 12.5mm L, (.178" x .492" L) BOSCH 6 ROLLER VERSION, ROLLER WAS236-315	CHRYSLER  C48-01 CHRYSLER PLUNGER CONTACT SPRING CHRYSLER DODGE PLYMOUTH 1889152 S-2495 248-10006 76-3700 32573258 365657536566503755250 375590040919504091975 411185541118604145359 11.6 OD X 66mm L, (.455 X 2.60") SPRING ON THE MOBILE CONTACT PIN AND THE PLUNGER, CHRYSLER "TIN CAN" 1.5 & 1.8HP OSGR STARTERS	CHRYSLER  C48-09 CHRYSLER STARTER RUBBER BOOT 1889147 S-2516 324832493252 1889100 1889200 2095753 30mm ID x 42mm OD TIN CAN STARTERS
BOSCH HITACHI UNIVERSAL  WAS81 STARTER DRIVE CAP ALFA ROMEO VOLKSWAGEN NISSAN VOLVO PENTA PORSCHE 161941624616339164501655116954 0-001-211-0010-001-211-0040-001-211-012 0-001-211-0130-001-211-0140-001-211-016 2114-55100S114-180S114-182 47.4mm ID, 33.4mm HOLE, 20.0mm L (1.865", 1.314", 0.788") FOR COMMON 5 ROLLER DRIVES	CHRYSLER  C48-02 CHRYSLER BRUSH SPRING CHRYSLER LINCOLN DODGE MERCURY FORD PLYMOUTH 156-14002 D1AZ-11059-A 2084666 MS-501 69-3700 S-1006 312431313132313531423149 32573258 365657536566503755250 375590040919504091975 411185541118604145359 USED ON EARLY CHRYSLER AND FORD	DELCO  D48-02 DELCO MOVEABLE SOLENOID CONTACT ALLIS-CHALMERS BAKER AMC BOBCAT AUSTIN WESTERN BUICK 1932243 66-1703 1956226 248-12021 350235043505350835103510M 351135123524352535333535 104553081045530910455310 1045531111072011107203 110720411072051107206 41mm CONTACT HEIGHT DELCO 5MT, 8MT, 10MT, 20MT, 22MT, 25MT, 27MT
CHRYSLER  C48-00 CHRYSLER WASHER CHRYSLER DODGE PLYMOUTH 2095121 456-29001 84-4614 32573258 365657536566503755250 375590040919504091975 411185541118604145359 11.9 X 19.1 X 1.5 THICK STEEL	CHRYSLER  C48-07 CHRYSLER PLATE FELT PAD CHRYSLER DODGE PLYMOUTH 2095562 S-2465 467-10001 76-3801 32573258 365657536566503755250 375590040919504091975 411185541118604145359 22mm x 4mm T OIL WICK	DELCO  D48-03 DELCO SOLENOID CONTACT ALLIS-CHALMERS BAKER AMC BOBCAT AUSTIN WESTERN BUICK 1851716 1984563 1892786 452-12002 1927344 76-1560 350235043505350735083508M 35103510M3511351235243525 104550041045500610455007 104550151045501610455017 104550181045501910455020 3/8"-16 X 1 3/16" LONG BATTERY SIDE, 5MT, 8MT, 10MT, 20MT, 22MT, 25MT, SD200, SD250, SD300

DELCO  D48-08 DELCO RETAINER CLIP <table><tr><td>ALLIS-CHALMERS BAKER</td><td>AMC BOBCAT</td><td>AUSTIN WESTERN BUICK</td><td></td><td></td><td></td></tr><tr><td>1913043</td><td>66-1786</td><td></td><td></td><td></td><td></td></tr><tr><td>3502 3504 3511 3512</td><td>3505 3508 3524 3525</td><td>3510 3510M 3533 3535</td><td></td><td></td><td></td></tr><tr><td>10455308</td><td>10455309</td><td>10455310</td><td></td><td></td><td></td></tr><tr><td>10455311</td><td>1107201</td><td>1107203</td><td></td><td></td><td></td></tr><tr><td>1107204</td><td>1107205</td><td>1107206</td><td></td><td></td><td></td></tr></table> USED ON SOLENOIDS FOR 5MT, 8MT, 10MT, 20MT, 22MT, 25MT, 27MT, SD200, SD300	ALLIS-CHALMERS BAKER	AMC BOBCAT	AUSTIN WESTERN BUICK				1913043	66-1786					3502 3504 3511 3512	3505 3508 3524 3525	3510 3510M 3533 3535				10455308	10455309	10455310				10455311	1107201	1107203				1107204	1107205	1107206				DELCO  D48-16 DELCO WASHER #12 <table><tr><td>BOBCAT CLARK</td><td>CHAMPION CUMMINS</td><td>CHEVROLET DEUTZ-ALLIS</td><td></td><td></td><td></td></tr><tr><td>456-12000</td><td>84-4306</td><td>S-347</td><td></td><td></td><td></td></tr><tr><td>6468 6469 6574 6575</td><td>6570 6571 6576 6578</td><td>6572 6573 6579 6580</td><td></td><td></td><td></td></tr><tr><td>10479600</td><td>10479604</td><td>10479605</td><td></td><td></td><td></td></tr><tr><td>10479606</td><td>10479607</td><td>10479608</td><td></td><td></td><td></td></tr><tr><td>10479611</td><td>10479612</td><td>10479613</td><td></td><td></td><td></td></tr></table> #12 (5.6mm ID x 12.5mm OD x 1mm W) ZINC PLATED	BOBCAT CLARK	CHAMPION CUMMINS	CHEVROLET DEUTZ-ALLIS				456-12000	84-4306	S-347				6468 6469 6574 6575	6570 6571 6576 6578	6572 6573 6579 6580				10479600	10479604	10479605				10479606	10479607	10479608				10479611	10479612	10479613				DELCO  D48-21 DELCO SCREW #6 SELF TAP THREAD <table><tr><td>AMC CHEVROLET</td><td>BUICK GMC</td><td>CADILLAC ISUZU</td><td></td><td></td><td></td></tr><tr><td>1893297 S-2305</td><td>451-06006</td><td>84-1100</td><td></td><td></td><td></td></tr><tr><td>3502 3503 3552 3553</td><td>3504 3507 3562 3563</td><td>3510M 3535 3564 3565</td><td></td><td></td><td></td></tr><tr><td>10455004</td><td>10455006</td><td>10455007</td><td></td><td></td><td></td></tr><tr><td>10455008</td><td>10455009</td><td>10455015</td><td></td><td></td><td></td></tr><tr><td>10455016</td><td>10455017</td><td>10455018</td><td></td><td></td><td></td></tr></table> #6 THREAD, 18mm L, 3/16 HEX SELF TAPING BRUSH SCREW	AMC CHEVROLET	BUICK GMC	CADILLAC ISUZU				1893297 S-2305	451-06006	84-1100				3502 3503 3552 3553	3504 3507 3562 3563	3510M 3535 3564 3565				10455004	10455006	10455007				10455008	10455009	10455015				10455016	10455017	10455018			
ALLIS-CHALMERS BAKER	AMC BOBCAT	AUSTIN WESTERN BUICK																																																																																																												
1913043	66-1786																																																																																																													
3502 3504 3511 3512	3505 3508 3524 3525	3510 3510M 3533 3535																																																																																																												
10455308	10455309	10455310																																																																																																												
10455311	1107201	1107203																																																																																																												
1107204	1107205	1107206																																																																																																												
BOBCAT CLARK	CHAMPION CUMMINS	CHEVROLET DEUTZ-ALLIS																																																																																																												
456-12000	84-4306	S-347																																																																																																												
6468 6469 6574 6575	6570 6571 6576 6578	6572 6573 6579 6580																																																																																																												
10479600	10479604	10479605																																																																																																												
10479606	10479607	10479608																																																																																																												
10479611	10479612	10479613																																																																																																												
AMC CHEVROLET	BUICK GMC	CADILLAC ISUZU																																																																																																												
1893297 S-2305	451-06006	84-1100																																																																																																												
3502 3503 3552 3553	3504 3507 3562 3563	3510M 3535 3564 3565																																																																																																												
10455004	10455006	10455007																																																																																																												
10455008	10455009	10455015																																																																																																												
10455016	10455017	10455018																																																																																																												
DELCO  D48-09 DELCO COIL RETAINER 5MT <table><tr><td>BUICK OLDSMOBILE</td><td>CADILLAC PONTIAC</td><td>CHEVROLET</td><td></td><td></td><td></td></tr><tr><td>1893350 S-2313</td><td>190-12001</td><td>76-1300</td><td></td><td></td><td></td></tr><tr><td>3503 3510M 6308 6309</td><td>3553 3564 6319</td><td>3565 6307</td><td></td><td></td><td></td></tr><tr><td>10455021</td><td>10455022</td><td>10455052</td><td></td><td></td><td></td></tr><tr><td>1109522</td><td>1109527</td><td>1109532</td><td></td><td></td><td></td></tr><tr><td>1109537</td><td>1109551</td><td>1109556</td><td></td><td></td><td></td></tr></table> 1.92" 5MT, SD200 FIELD COIL RETAINER	BUICK OLDSMOBILE	CADILLAC PONTIAC	CHEVROLET				1893350 S-2313	190-12001	76-1300				3503 3510M 6308 6309	3553 3564 6319	3565 6307				10455021	10455022	10455052				1109522	1109527	1109532				1109537	1109551	1109556				DELCO  D48-18 DELCO BRUSH SPRING-40, 50MT <table><tr><td>ALLIS-CHALMERS CASE</td><td>AUSTIN WESTERN CATERPILLAR</td><td>AUTOCAR CHEVROLET</td><td></td><td></td><td></td></tr><tr><td>156-12006 S-744</td><td>1861785</td><td>69-1704</td><td></td><td></td><td></td></tr><tr><td>3020 3033 3039 3040</td><td>3034 3036 3041 3042</td><td>3037 3038 3043 3044</td><td></td><td></td><td></td></tr><tr><td>10478827</td><td>10478828</td><td>10478829</td><td></td><td></td><td></td></tr><tr><td>10478830</td><td>10478919</td><td>1108716</td><td></td><td></td><td></td></tr><tr><td>1108717</td><td>1108801</td><td>1108802</td><td></td><td></td><td></td></tr></table> 11mm OD 40MT, 50MT	ALLIS-CHALMERS CASE	AUSTIN WESTERN CATERPILLAR	AUTOCAR CHEVROLET				156-12006 S-744	1861785	69-1704				3020 3033 3039 3040	3034 3036 3041 3042	3037 3038 3043 3044				10478827	10478828	10478829				10478830	10478919	1108716				1108717	1108801	1108802				DELCO  D48-23 DELCO TERMINAL POST <table><tr><td>ALLIS-CHALMERS</td><td>GALION</td><td>HYSTER</td><td></td><td></td><td></td></tr><tr><td>1950728</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>4233</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>1108309</td><td>1108311</td><td>1108314</td><td></td><td></td><td></td></tr><tr><td>1108315</td><td>1108505</td><td>1998487</td><td></td><td></td><td></td></tr></table> 1/4-20 GROUND STUD, ***NLA WHEN STOCK DEPLETED***	ALLIS-CHALMERS	GALION	HYSTER				1950728						4233						1108309	1108311	1108314				1108315	1108505	1998487									
BUICK OLDSMOBILE	CADILLAC PONTIAC	CHEVROLET																																																																																																												
1893350 S-2313	190-12001	76-1300																																																																																																												
3503 3510M 6308 6309	3553 3564 6319	3565 6307																																																																																																												
10455021	10455022	10455052																																																																																																												
1109522	1109527	1109532																																																																																																												
1109537	1109551	1109556																																																																																																												
ALLIS-CHALMERS CASE	AUSTIN WESTERN CATERPILLAR	AUTOCAR CHEVROLET																																																																																																												
156-12006 S-744	1861785	69-1704																																																																																																												
3020 3033 3039 3040	3034 3036 3041 3042	3037 3038 3043 3044																																																																																																												
10478827	10478828	10478829																																																																																																												
10478830	10478919	1108716																																																																																																												
1108717	1108801	1108802																																																																																																												
ALLIS-CHALMERS	GALION	HYSTER																																																																																																												
1950728																																																																																																														
4233																																																																																																														
1108309	1108311	1108314																																																																																																												
1108315	1108505	1998487																																																																																																												
DELCO  D48-10 DELCO SOLENOID GASKET <table><tr><td>ALLIS-CHALMERS CASE</td><td>AUSTIN WESTERN CATERPILLAR</td><td>AUTOCAR CHEVROLET</td><td></td><td></td><td></td></tr><tr><td>180-12013</td><td>1950111</td><td>66-1403</td><td></td><td></td><td></td></tr><tr><td>3033 3036 3042 3044</td><td>3037 3038 3045 3047</td><td>3040 3041 3049 3050</td><td></td><td></td><td></td></tr><tr><td>1109755</td><td>1109757</td><td>1109759</td><td></td><td></td><td></td></tr><tr><td>1109768</td><td>1109771</td><td>1109772</td><td></td><td></td><td></td></tr><tr><td>1109774</td><td>1109775</td><td>1109776</td><td></td><td></td><td></td></tr></table> 40MT, 50MT	ALLIS-CHALMERS CASE	AUSTIN WESTERN CATERPILLAR	AUTOCAR CHEVROLET				180-12013	1950111	66-1403				3033 3036 3042 3044	3037 3038 3045 3047	3040 3041 3049 3050				1109755	1109757	1109759				1109768	1109771	1109772				1109774	1109775	1109776				DELCO  D48-19 DELCO BRUSH SPRING-5MT <table><tr><td>AMC CHEVROLET</td><td>BUICK GMC</td><td>CADILLAC ISUZU</td><td></td><td></td><td></td></tr><tr><td>10499103 C2OZ-11134-C</td><td>156-12002 S-2314</td><td>69-1700</td><td></td><td></td><td></td></tr><tr><td>3502 3503 3552 3553</td><td>3504 3507 3562 3563</td><td>3510M 3535 3564 3565</td><td></td><td></td><td></td></tr><tr><td>10455004</td><td>10455006</td><td>10455007</td><td></td><td></td><td></td></tr><tr><td>10455008</td><td>10455009</td><td>10455015</td><td></td><td></td><td></td></tr><tr><td>10455016</td><td>10455017</td><td>10455018</td><td></td><td></td><td></td></tr></table> 5MT, SD200, SD250	AMC CHEVROLET	BUICK GMC	CADILLAC ISUZU				10499103 C2OZ-11134-C	156-12002 S-2314	69-1700				3502 3503 3552 3553	3504 3507 3562 3563	3510M 3535 3564 3565				10455004	10455006	10455007				10455008	10455009	10455015				10455016	10455017	10455018				DELCO  D48-25 DELCO BRUSH HOLDER NEG. <table><tr><td>ALLIS-CHALMERS BOBCAT</td><td>AUSTIN WESTERN BUICK</td><td>BAKER CADILLAC</td><td></td><td></td><td></td></tr><tr><td>151-12007 1940477</td><td>1875699 69-1201</td><td>1926617 69-1201-1</td><td></td><td></td><td></td></tr><tr><td>3277 3279 3304 3331</td><td>3280 3281 3346 3347</td><td>3282 3294 3352 3353</td><td></td><td></td><td></td></tr><tr><td>10455300</td><td>10455301</td><td>10455305</td><td></td><td></td><td></td></tr><tr><td>10455306</td><td>10455308</td><td>10455309</td><td></td><td></td><td></td></tr><tr><td>10455310</td><td>10455311</td><td>10455312</td><td></td><td></td><td></td></tr></table> EARLY, 8MT, 10MT, 20MT, 27MT, 30MT, 35MT, SD300	ALLIS-CHALMERS BOBCAT	AUSTIN WESTERN BUICK	BAKER CADILLAC				151-12007 1940477	1875699 69-1201	1926617 69-1201-1				3277 3279 3304 3331	3280 3281 3346 3347	3282 3294 3352 3353				10455300	10455301	10455305				10455306	10455308	10455309				10455310	10455311	10455312			
ALLIS-CHALMERS CASE	AUSTIN WESTERN CATERPILLAR	AUTOCAR CHEVROLET																																																																																																												
180-12013	1950111	66-1403																																																																																																												
3033 3036 3042 3044	3037 3038 3045 3047	3040 3041 3049 3050																																																																																																												
1109755	1109757	1109759																																																																																																												
1109768	1109771	1109772																																																																																																												
1109774	1109775	1109776																																																																																																												
AMC CHEVROLET	BUICK GMC	CADILLAC ISUZU																																																																																																												
10499103 C2OZ-11134-C	156-12002 S-2314	69-1700																																																																																																												
3502 3503 3552 3553	3504 3507 3562 3563	3510M 3535 3564 3565																																																																																																												
10455004	10455006	10455007																																																																																																												
10455008	10455009	10455015																																																																																																												
10455016	10455017	10455018																																																																																																												
ALLIS-CHALMERS BOBCAT	AUSTIN WESTERN BUICK	BAKER CADILLAC																																																																																																												
151-12007 1940477	1875699 69-1201	1926617 69-1201-1																																																																																																												
3277 3279 3304 3331	3280 3281 3346 3347	3282 3294 3352 3353																																																																																																												
10455300	10455301	10455305																																																																																																												
10455306	10455308	10455309																																																																																																												
10455310	10455311	10455312																																																																																																												

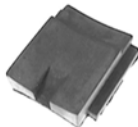
DELCO  D48-30 DELCO OIL WICK 50MT <table><tr><td>ALLIS-CHALMERS BOBCAT</td><td>AUSTIN WESTERN CASE</td><td>AUTOCAR CATERPILLAR</td><td></td><td></td><td></td></tr><tr><td>1916439 467-12017</td><td>1920400 76-1831</td><td>1986466</td><td></td><td></td><td></td></tr><tr><td>3058 3079 3511 3601</td><td>3080 3096 3760 3776</td><td>3098 3300 3777 3815</td><td></td><td></td><td></td></tr><tr><td>10455321</td><td>10455323</td><td>10455336</td><td></td><td></td><td></td></tr><tr><td>10455339</td><td>10455347</td><td>10455352</td><td></td><td></td><td></td></tr><tr><td>10455353</td><td>10455354</td><td>10478948</td><td></td><td></td><td></td></tr></table> 8mm OD x 70mm L 20MT, 22MT, 25MT, 27MT, 30MT, 35MT, 40MT, 50MT	ALLIS-CHALMERS BOBCAT	AUSTIN WESTERN CASE	AUTOCAR CATERPILLAR				1916439 467-12017	1920400 76-1831	1986466				3058 3079 3511 3601	3080 3096 3760 3776	3098 3300 3777 3815				10455321	10455323	10455336				10455339	10455347	10455352				10455353	10455354	10478948				DELCO  D48-38 DELCO PMGR STARTER GEAR <table><tr><td>BUICK CLARK</td><td>CADILLAC DAEWOO</td><td>CHEVROLET GMC</td><td></td><td></td><td></td></tr><tr><td>10475578 S-6319</td><td>222-12013</td><td>76-1864</td><td></td><td></td><td></td></tr><tr><td>6449 6452 6482 6486</td><td>6470 6471 6487 6492</td><td>6472 6480 6560 6561</td><td></td><td></td><td></td></tr><tr><td>9000786</td><td>9000798</td><td>9000804</td><td></td><td></td><td></td></tr><tr><td>9000805</td><td>9000806</td><td>9000812</td><td></td><td></td><td></td></tr><tr><td>9000819</td><td>9000820</td><td>9000821</td><td></td><td></td><td></td></tr></table> 18TH 19.5mm OD 6mm ID 11mm W PG260M	BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC				10475578 S-6319	222-12013	76-1864				6449 6452 6482 6486	6470 6471 6487 6492	6472 6480 6560 6561				9000786	9000798	9000804				9000805	9000806	9000812				9000819	9000820	9000821				DELCO UNIVERSAL  WAS1.639 DELCO DRIVE CAP 41.7mm ID, 28.5mm HOLE, 15.5mm L, (1.639" ID, 1.12" HOLE, 0.6" L) DRIVE CAP
ALLIS-CHALMERS BOBCAT	AUSTIN WESTERN CASE	AUTOCAR CATERPILLAR																																																																								
1916439 467-12017	1920400 76-1831	1986466																																																																								
3058 3079 3511 3601	3080 3096 3760 3776	3098 3300 3777 3815																																																																								
10455321	10455323	10455336																																																																								
10455339	10455347	10455352																																																																								
10455353	10455354	10478948																																																																								
BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC																																																																								
10475578 S-6319	222-12013	76-1864																																																																								
6449 6452 6482 6486	6470 6471 6487 6492	6472 6480 6560 6561																																																																								
9000786	9000798	9000804																																																																								
9000805	9000806	9000812																																																																								
9000819	9000820	9000821																																																																								
DELCO  D48-32 DELCO O RING 35MT 37MT 41MT 42MT <table><tr><td>AGCO AUSTIN WESTERN</td><td>ALLIS-CHALMERS AUTOCAR</td><td>ATLAS BOBCAT</td><td></td><td></td><td></td></tr><tr><td>180-12036 S-2261</td><td>1916272</td><td>71-1503</td><td></td><td></td><td></td></tr><tr><td>3039 3040 3045 3047</td><td>3041 3042 3099 3288</td><td>3043 3044 3290 3332</td><td></td><td></td><td></td></tr><tr><td>10478801</td><td>10478802</td><td>10478803</td><td></td><td></td><td></td></tr><tr><td>10478804</td><td>10478805</td><td>10478806</td><td></td><td></td><td></td></tr><tr><td>10478809</td><td>10478810</td><td>10478811</td><td></td><td></td><td></td></tr></table> 4 1/8" ID X 4 13/32" OD 30MT, 35MT, 37MT, 40MT, 41MT, 42MT	AGCO AUSTIN WESTERN	ALLIS-CHALMERS AUTOCAR	ATLAS BOBCAT				180-12036 S-2261	1916272	71-1503				3039 3040 3045 3047	3041 3042 3099 3288	3043 3044 3290 3332				10478801	10478802	10478803				10478804	10478805	10478806				10478809	10478810	10478811				DELCO  D48-39 DELCO PLASTIC PLANETARY GEAR TRACK <table><tr><td>BUICK CLARK</td><td>CADILLAC DAEWOO</td><td>CHEVROLET GMC</td><td></td><td></td><td></td></tr><tr><td>10475632 76-1863</td><td>10476598 S-6325</td><td>222-12014</td><td></td><td></td><td></td></tr><tr><td>6449 6452 6482 6486</td><td>6470 6471 6487 6492</td><td>6472 6480 6560 6561</td><td></td><td></td><td></td></tr><tr><td>9000786</td><td>9000798</td><td>9000804</td><td></td><td></td><td></td></tr><tr><td>9000805</td><td>9000806</td><td>9000812</td><td></td><td></td><td></td></tr><tr><td>9000819</td><td>9000820</td><td>9000821</td><td></td><td></td><td></td></tr></table> 48 TOOTH, 66mm OD PG260M SERIES STARTERS	BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC				10475632 76-1863	10476598 S-6325	222-12014				6449 6452 6482 6486	6470 6471 6487 6492	6472 6480 6560 6561				9000786	9000798	9000804				9000805	9000806	9000812				9000819	9000820	9000821				DELCO UNIVERSAL  WAS1.747 DELCO STARTER DRIVE CAP HYUNDAI KIA 17989 8000169 44mm ID x 30mm HOLE, 17mm L (1.732" x 1.181" x .669" L) SPRINGS WAS70-5, ROLLERS WAS214-440
AGCO AUSTIN WESTERN	ALLIS-CHALMERS AUTOCAR	ATLAS BOBCAT																																																																								
180-12036 S-2261	1916272	71-1503																																																																								
3039 3040 3045 3047	3041 3042 3099 3288	3043 3044 3290 3332																																																																								
10478801	10478802	10478803																																																																								
10478804	10478805	10478806																																																																								
10478809	10478810	10478811																																																																								
BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC																																																																								
10475632 76-1863	10476598 S-6325	222-12014																																																																								
6449 6452 6482 6486	6470 6471 6487 6492	6472 6480 6560 6561																																																																								
9000786	9000798	9000804																																																																								
9000805	9000806	9000812																																																																								
9000819	9000820	9000821																																																																								
DELCO  D48-37 DELCO STARTER DRIVE SHAFT PG260 <table><tr><td>BUICK CLARK</td><td>CADILLAC DAEWOO</td><td>CHEVROLET GMC</td><td></td><td></td><td></td></tr><tr><td>10475626 76-1865-1</td><td>290-12006 SS-1994</td><td>76-1865</td><td></td><td></td><td></td></tr><tr><td>6449 6452 6482 6486</td><td>6470 6471 6487 6492</td><td>6472 6480 6560 6561</td><td></td><td></td><td></td></tr><tr><td>9000786</td><td>9000798</td><td>9000804</td><td></td><td></td><td></td></tr><tr><td>9000805</td><td>9000806</td><td>9000812</td><td></td><td></td><td></td></tr><tr><td>9000819</td><td>9000820</td><td>9000821</td><td></td><td></td><td></td></tr></table> 125mm OAL, 12mm SHAFT PG260	BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC				10475626 76-1865-1	290-12006 SS-1994	76-1865				6449 6452 6482 6486	6470 6471 6487 6492	6472 6480 6560 6561				9000786	9000798	9000804				9000805	9000806	9000812				9000819	9000820	9000821				DELCO FORD  D48-40 DELCO THRUST COLLAR <table><tr><td>BUICK CLARK</td><td>CADILLAC DAEWOO</td><td>CHEVROLET GMC</td><td></td><td></td><td></td></tr><tr><td>10495828 76-1855</td><td>10495897 S-1517</td><td>461-12008</td><td></td><td></td><td></td></tr><tr><td>3505 3510M 3633 3635</td><td>3546 3551 3664 3686</td><td>3627 3631 3691 3696</td><td></td><td></td><td></td></tr><tr><td>10455006</td><td>10455008</td><td>10455009</td><td></td><td></td><td></td></tr><tr><td>10455010</td><td>10455011</td><td>10455012</td><td></td><td></td><td></td></tr><tr><td>10455013</td><td>10455015</td><td>10455024</td><td></td><td></td><td></td></tr></table> 12mm ID, 19mm OD, 2.5mm W 10MT, SD200, SD205, SD210, SD250, SD255, SD260, SD300, PG100, PG150, PG260F1, PG260F2, PG260M	BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC				10495828 76-1855	10495897 S-1517	461-12008				3505 3510M 3633 3635	3546 3551 3664 3686	3627 3631 3691 3696				10455006	10455008	10455009				10455010	10455011	10455012				10455013	10455015	10455024				DELCO  WAS2003 STARTER DRIVE SPRING KIA 17811 OK30A-18-400 3.6 X 7.5 X 10mm L
BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC																																																																								
10475626 76-1865-1	290-12006 SS-1994	76-1865																																																																								
6449 6452 6482 6486	6470 6471 6487 6492	6472 6480 6560 6561																																																																								
9000786	9000798	9000804																																																																								
9000805	9000806	9000812																																																																								
9000819	9000820	9000821																																																																								
BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC																																																																								
10495828 76-1855	10495897 S-1517	461-12008																																																																								
3505 3510M 3633 3635	3546 3551 3664 3686	3627 3631 3691 3696																																																																								
10455006	10455008	10455009																																																																								
10455010	10455011	10455012																																																																								
10455013	10455015	10455024																																																																								

DELCO UNIVERSAL  WAS214-440 DELCO STARTER DRIVE ROLLER HYUNDAI KIA 17989 8000169 5.43mm x 11.0mm L (.214" x .435" L) SPRINGS WAS70-5, CAP WAS1747	DUCELLIER  W487-00 DUCELLIER SOLENOID CONTACT STUD RENAULT 03937 16797 534029A 534042A 534043A W457-01 8mm x 25mm LONG USED IN SOLENOID CAP W467-00	DELCO FORD  D48-40 DELCO THRUST COLLAR <table> <tr> <td>BUICK CLARK</td><td>CADILLAC DAEWOO</td><td>CHEVROLET GMC</td></tr> <tr> <td>10495828 76-1855</td><td>10495897 S-1517</td><td>461-12008</td></tr> <tr> <td>3505 3510M 3633 3635</td><td>3546 3551 3664 3686</td><td>3627 3631 3691 3696</td></tr> <tr> <td>10455006</td><td>10455008</td><td>10455009</td></tr> <tr> <td>10455010</td><td>10455011</td><td>10455012</td></tr> <tr> <td>10455013</td><td>10455015</td><td>10455024</td></tr> </table> 12mm ID, 19mm OD, 2.5mm W 10MT, SD200, SD205, SD210, SD250, SD255, SD260, SD300, PG100, PG150, PG260F1, PG260F2, PG260M	BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC	10495828 76-1855	10495897 S-1517	461-12008	3505 3510M 3633 3635	3546 3551 3664 3686	3627 3631 3691 3696	10455006	10455008	10455009	10455010	10455011	10455012	10455013	10455015	10455024															
BUICK CLARK	CADILLAC DAEWOO	CHEVROLET GMC																																	
10495828 76-1855	10495897 S-1517	461-12008																																	
3505 3510M 3633 3635	3546 3551 3664 3686	3627 3631 3691 3696																																	
10455006	10455008	10455009																																	
10455010	10455011	10455012																																	
10455013	10455015	10455024																																	
DELCO UNIVERSAL  WAS70-5 DELCO STARTER DRIVE SPRING HYUNDAI KIA 17989 8000169 4 x 10.5 x 12mm L INTERNAL DRIVE SPRING	DUCELLIER  W487-01 DUCELLIER SOLENOID MOBILE CONTACT RENAULT 03905 66-94700 16797 534029A 534042A 534043A W457-01 37.1mm LONG SHAFT USED IN SOLENOID W457-01, WITH CAP W467-00, CONTACT STUDS W487-00.	FORD  F48-01 FORD SHIFT LEVEL COVER GASKET <table> <tr> <td>FORD</td><td>MERCURY</td><td></td></tr> <tr> <td>180-14002 S-944</td><td>71-2101 SZ-592</td><td>C2DF-11065-A</td></tr> <tr> <td>3148 3151</td><td>3156 3158</td><td></td></tr> <tr> <td>D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A</td><td>D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B</td><td>D4ZZ-11002-A D7ZZ-11002-A</td></tr> </table> FORD 4" STARTER	FORD	MERCURY		180-14002 S-944	71-2101 SZ-592	C2DF-11065-A	3148 3151	3156 3158		D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A	D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B	D4ZZ-11002-A D7ZZ-11002-A																					
FORD	MERCURY																																		
180-14002 S-944	71-2101 SZ-592	C2DF-11065-A																																	
3148 3151	3156 3158																																		
D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A	D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B	D4ZZ-11002-A D7ZZ-11002-A																																	
DELCO UNIVERSAL  WAS83 STARTER DRIVE SPRING 4mm x 9mm x 12mm, (.157" x .354" x .472") STARTER DRIVE	DUCELLIER  W487-02 DUCELLIER BRUSH HOLDER INSULATOR <table> <tr> <td>RENAULT</td><td>TORO</td><td></td></tr> <tr> <td>14372</td><td>69-94200-1</td><td></td></tr> <tr> <td>16458 16484 16619 16686 16702 16756</td><td></td><td></td></tr> <tr> <td>16797</td><td></td><td></td></tr> <tr> <td>532021A 532023A 534003A</td><td></td><td></td></tr> <tr> <td>534003B 534003C 534004A</td><td></td><td></td></tr> <tr> <td>534004B 534005A 534005B</td><td></td><td></td></tr> </table> USED WITH BRUSH HOLDER W507-00.	RENAULT	TORO		14372	69-94200-1		16458 16484 16619 16686 16702 16756			16797			532021A 532023A 534003A			534003B 534003C 534004A			534004B 534005A 534005B			FORD  F48-03 FORD THRUST WASHER <table> <tr> <td>FORD</td><td>LINCOLN</td><td>MERCURY</td></tr> <tr> <td>457-50000 C0DZ-11036-A</td><td>457-50001 C0FL-11036-A</td><td>84-7603 C2DF-11036-A</td></tr> <tr> <td>3124 3131</td><td>3132 3135</td><td>3142 3149</td></tr> <tr> <td>C2OZ-11002-B C6OZ-11002-A D1AZ-11002-A</td><td>C3OZ-11002-C C8VY-11002-C D3OZ-11002-A</td><td>C5TZ-11002-D D0VY-11002-A D3TZ-11002-C</td></tr> </table> 16mm ID x 35mm OD x 3mm W LEATHER, 4", 4 1/2" STARTERS	FORD	LINCOLN	MERCURY	457-50000 C0DZ-11036-A	457-50001 C0FL-11036-A	84-7603 C2DF-11036-A	3124 3131	3132 3135	3142 3149	C2OZ-11002-B C6OZ-11002-A D1AZ-11002-A	C3OZ-11002-C C8VY-11002-C D3OZ-11002-A	C5TZ-11002-D D0VY-11002-A D3TZ-11002-C
RENAULT	TORO																																		
14372	69-94200-1																																		
16458 16484 16619 16686 16702 16756																																			
16797																																			
532021A 532023A 534003A																																			
534003B 534003C 534004A																																			
534004B 534005A 534005B																																			
FORD	LINCOLN	MERCURY																																	
457-50000 C0DZ-11036-A	457-50001 C0FL-11036-A	84-7603 C2DF-11036-A																																	
3124 3131	3132 3135	3142 3149																																	
C2OZ-11002-B C6OZ-11002-A D1AZ-11002-A	C3OZ-11002-C C8VY-11002-C D3OZ-11002-A	C5TZ-11002-D D0VY-11002-A D3TZ-11002-C																																	


FORD  F48-04 FORD BRUSH GROUND SCREW <table><tr><td>AMC LINCOLN</td><td>FORD MERCURY</td><td>JEEP</td></tr><tr><td>25231-S 84-1328</td><td>451-10009 S-123</td><td>50399-S36</td></tr><tr><td>3124 3131 3151 3152</td><td>3132 3135 3153 3154</td><td>3148 3149 3155 3156</td></tr><tr><td>C2OZ-11002-B C6OZ-11002-A D4FZ-11002-B</td><td>C3OZ-11002-C D1AZ-11002-A D4OZ-11002-A</td><td>C5TZ-11002-D D2FZ-11002-A D4TZ-11002-D</td></tr></table> 10-32 x 5/8 SLOTTED TAPERED HEAD GROUND BRUSH	AMC LINCOLN	FORD MERCURY	JEEP	25231-S 84-1328	451-10009 S-123	50399-S36	3124 3131 3151 3152	3132 3135 3153 3154	3148 3149 3155 3156	C2OZ-11002-B C6OZ-11002-A D4FZ-11002-B	C3OZ-11002-C D1AZ-11002-A D4OZ-11002-A	C5TZ-11002-D D2FZ-11002-A D4TZ-11002-D	FORD  F48-08 FORD RETAINER FIELD COIL <table><tr><td>FORD</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>390-14005 S-959</td><td>76-2300</td><td>C0DF-11106-A</td></tr><tr><td>3124 3131 3153 3154</td><td>3132 3135 3155 3157</td><td>3149 3152 3160 3165</td></tr><tr><td>C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D</td><td>C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C</td><td>C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A</td></tr></table> 31.5mm x 62mm ID x 45mm x 67mm OD 4 1/2" DD STARTERS	FORD	LINCOLN	MERCURY	390-14005 S-959	76-2300	C0DF-11106-A	3124 3131 3153 3154	3132 3135 3155 3157	3149 3152 3160 3165	C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D	C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A	FORD  F48-11 FORD RETAINER SLEEVE <table><tr><td>FORD</td><td>MERCURY</td></tr><tr><td>390-14002 C2DZ-11105-A 3148 3151</td><td>76-2202 S-987 3156 3158</td></tr><tr><td>C2DF-11105-A SZ-707 3179</td><td></td></tr><tr><td>D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A</td><td>D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B</td></tr></table> 26mm x 56mm ID 4" AND 4" MOD I STARTERS	FORD	MERCURY	390-14002 C2DZ-11105-A 3148 3151	76-2202 S-987 3156 3158	C2DF-11105-A SZ-707 3179		D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A	D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B
AMC LINCOLN	FORD MERCURY	JEEP																																
25231-S 84-1328	451-10009 S-123	50399-S36																																
3124 3131 3151 3152	3132 3135 3153 3154	3148 3149 3155 3156																																
C2OZ-11002-B C6OZ-11002-A D4FZ-11002-B	C3OZ-11002-C D1AZ-11002-A D4OZ-11002-A	C5TZ-11002-D D2FZ-11002-A D4TZ-11002-D																																
FORD	LINCOLN	MERCURY																																
390-14005 S-959	76-2300	C0DF-11106-A																																
3124 3131 3153 3154	3132 3135 3155 3157	3149 3152 3160 3165																																
C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D	C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A																																
FORD	MERCURY																																	
390-14002 C2DZ-11105-A 3148 3151	76-2202 S-987 3156 3158																																	
C2DF-11105-A SZ-707 3179																																		
D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A	D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B																																	
FORD  F48-06 FORD BRUSH SPRING <table><tr><td>FORD</td><td>MERCURY</td></tr><tr><td>156-14001 C3XF-11058-A 3148 3151</td><td>69-2703 S-977</td></tr><tr><td>D2FZ-11002-A D6FZ-11002-A</td><td>D4FZ-11002-B D6FZ-11002-B</td></tr></table> D4ZZ-11002-A 16mm OD x 4.8mm W 4" DD STARTERS	FORD	MERCURY	156-14001 C3XF-11058-A 3148 3151	69-2703 S-977	D2FZ-11002-A D6FZ-11002-A	D4FZ-11002-B D6FZ-11002-B	FORD  F48-09 FORD RETAINER SLEEVE <table><tr><td>FORD</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>390-14004 S-960</td><td>76-2200</td><td>C0DF-11105-A</td></tr><tr><td>3124 3131 3153 3154</td><td>3132 3135 3155 3157</td><td>3149 3152 3160 3165</td></tr><tr><td>C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D</td><td>C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C</td><td>C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A</td></tr></table> 29mm x 59.5mm ID 4 1/2" DD STARTERS	FORD	LINCOLN	MERCURY	390-14004 S-960	76-2200	C0DF-11105-A	3124 3131 3153 3154	3132 3135 3155 3157	3149 3152 3160 3165	C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D	C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A	FORD  F48-12 FORD TERMINAL CONVERSION STRAP <table><tr><td>AMC LINCOLN</td><td>FORD MERCURY</td><td>JEEP</td></tr><tr><td>390-14000</td><td>76-2556</td><td>S-1900</td></tr><tr><td>3124 3131 3207</td><td>3132 3135</td><td>3145 3149</td></tr><tr><td>C2OZ-11002-B C5TZ-11002-D C6FF-11001-D</td><td>C3OZ-11002-C C6AF-11001-B C6OZ-11002-A</td><td>C5AF-11001-A C6FF-11001-B D1AZ-11002-A</td></tr></table> 5/16" HOLE TO 1/4-20 THREAD USED TO CONVERT SIDE POST STARTERS TO CE CONNECTIONS	AMC LINCOLN	FORD MERCURY	JEEP	390-14000	76-2556	S-1900	3124 3131 3207	3132 3135	3145 3149	C2OZ-11002-B C5TZ-11002-D C6FF-11001-D	C3OZ-11002-C C6AF-11001-B C6OZ-11002-A	C5AF-11001-A C6FF-11001-B D1AZ-11002-A		
FORD	MERCURY																																	
156-14001 C3XF-11058-A 3148 3151	69-2703 S-977																																	
D2FZ-11002-A D6FZ-11002-A	D4FZ-11002-B D6FZ-11002-B																																	
FORD	LINCOLN	MERCURY																																
390-14004 S-960	76-2200	C0DF-11105-A																																
3124 3131 3153 3154	3132 3135 3155 3157	3149 3152 3160 3165																																
C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D	C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A																																
AMC LINCOLN	FORD MERCURY	JEEP																																
390-14000	76-2556	S-1900																																
3124 3131 3207	3132 3135	3145 3149																																
C2OZ-11002-B C5TZ-11002-D C6FF-11001-D	C3OZ-11002-C C6AF-11001-B C6OZ-11002-A	C5AF-11001-A C6FF-11001-B D1AZ-11002-A																																
FORD  F48-07 FORD RETAINER <table><tr><td>FORD MERKUR</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>390-14001 S-988</td><td>76-2301</td><td>C2DF-11106-A</td></tr><tr><td>3148 3151 3180 3181</td><td>3156 3158 3185 3187</td><td>3175 3179 3188 3189</td></tr><tr><td>D2FZ-11002-A D6FZ-11002-A D8FZ-11002-B</td><td>D4FZ-11002-B D6FZ-11002-B E1FZ-11002-A</td><td>D4ZZ-11002-A D7ZZ-11002-A E1FZ-11002-B</td></tr></table> 28mm x 58mm ID x 43mm x 64mm OD 4" DD STARTERS	FORD MERKUR	LINCOLN	MERCURY	390-14001 S-988	76-2301	C2DF-11106-A	3148 3151 3180 3181	3156 3158 3185 3187	3175 3179 3188 3189	D2FZ-11002-A D6FZ-11002-A D8FZ-11002-B	D4FZ-11002-B D6FZ-11002-B E1FZ-11002-A	D4ZZ-11002-A D7ZZ-11002-A E1FZ-11002-B	FORD  F48-10 FORD RETAINER SLEEVE <table><tr><td>FORD MERKUR</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>390-14003 E2BZ-11105-A</td><td>76-2203 S-2617</td><td>E2BF-11105-AA</td></tr><tr><td>3175 3179 3188 3189</td><td>3180 3181 3191 3196</td><td>3185 3187 3198</td></tr><tr><td>E25Y-11002-A E2FZ-11002-A E3FZ-11002-A</td><td>E25Z-11002-A E2PZ-11002-A E3TZ-11002-A</td><td>E2BZ-11002-A E3AZ-11002-A E3TZ-11002-D</td></tr></table> 26mm x 56mm ID 4" MOD I & II STARTERS, STAINLESS	FORD MERKUR	LINCOLN	MERCURY	390-14003 E2BZ-11105-A	76-2203 S-2617	E2BF-11105-AA	3175 3179 3188 3189	3180 3181 3191 3196	3185 3187 3198	E25Y-11002-A E2FZ-11002-A E3FZ-11002-A	E25Z-11002-A E2PZ-11002-A E3TZ-11002-A	E2BZ-11002-A E3AZ-11002-A E3TZ-11002-D	FORD  F48-14 FORD TERMINAL POST <table><tr><td>452-14015 S-964</td><td>76-2552</td><td>D8PF-11102-AA</td></tr></table> 5/16-24 THREAD x 1-1/4" LONG 4 1/2" SERIES MOTOR POST	452-14015 S-964	76-2552	D8PF-11102-AA					
FORD MERKUR	LINCOLN	MERCURY																																
390-14001 S-988	76-2301	C2DF-11106-A																																
3148 3151 3180 3181	3156 3158 3185 3187	3175 3179 3188 3189																																
D2FZ-11002-A D6FZ-11002-A D8FZ-11002-B	D4FZ-11002-B D6FZ-11002-B E1FZ-11002-A	D4ZZ-11002-A D7ZZ-11002-A E1FZ-11002-B																																
FORD MERKUR	LINCOLN	MERCURY																																
390-14003 E2BZ-11105-A	76-2203 S-2617	E2BF-11105-AA																																
3175 3179 3188 3189	3180 3181 3191 3196	3185 3187 3198																																
E25Y-11002-A E2FZ-11002-A E3FZ-11002-A	E25Z-11002-A E2PZ-11002-A E3TZ-11002-A	E2BZ-11002-A E3AZ-11002-A E3TZ-11002-D																																
452-14015 S-964	76-2552	D8PF-11102-AA																																

FORD  F48-15 FORD TERMINAL FIELD COIL <table><tr><td>FORD</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>466-14007</td><td>76-2557</td><td>S-2594</td></tr><tr><td>3124 3152 3157 3160 D6OZ-11002-A D7DZ-11002-A D7TZ-11002-A 60mm LONG</td><td>3153 3154 3165 3168 D7AZ-11002-A D7DZ-11002-B D8BZ-11002-A</td><td>3155 3156 3169 3172 D7AZ-11002-B D7OZ-11002-A D8FZ-11002-B</td></tr></table> FIELD COIL TERMINAL 4" MOD I, 4 1/2" MOD I & II	FORD	LINCOLN	MERCURY	466-14007	76-2557	S-2594	3124 3152 3157 3160 D6OZ-11002-A D7DZ-11002-A D7TZ-11002-A 60mm LONG	3153 3154 3165 3168 D7AZ-11002-A D7DZ-11002-B D8BZ-11002-A	3155 3156 3169 3172 D7AZ-11002-B D7OZ-11002-A D8FZ-11002-B	FORD  F48-22 FORD CONTACT POST <table><tr><td>FORD MERKUR</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>248-14005 S-2721</td><td>76-2509</td><td>E2BF-11177-AA</td></tr><tr><td>3175 3179 3188 3189 E25Y-11002-A E2FZ-11002-A E3FZ-11002-A</td><td>3180 3181 3191 3196 E25Z-11002-A E2PZ-11002-A E3TZ-11002-A</td><td>3185 3187 3198 E2BZ-11002-A E3AZ-11002-A E3TZ-11002-D</td></tr></table> FORD 4" MOD II	FORD MERKUR	LINCOLN	MERCURY	248-14005 S-2721	76-2509	E2BF-11177-AA	3175 3179 3188 3189 E25Y-11002-A E2FZ-11002-A E3FZ-11002-A	3180 3181 3191 3196 E25Z-11002-A E2PZ-11002-A E3TZ-11002-A	3185 3187 3198 E2BZ-11002-A E3AZ-11002-A E3TZ-11002-D	FORD  F48-40 FORD INSULATOR <table><tr><td>AMC LINCOLN</td><td>FORD MERCURY</td><td>JEEP</td></tr><tr><td>185-14009 S-921</td><td>69-2400</td><td>B-11062</td></tr><tr><td>3124 3131 3149 3207 C2OZ-11002-B C5AF-11001-A C6OZ-11002-A 9.5 x 40.0 x 0.8mm</td><td>3132 3135 3208 C3OZ-11002-C C5TZ-11002-D C9FF-11001-B</td><td>3139 3142 C4TZ-11049-A C6FF-11001-D D0VY-11002-A</td></tr></table> FORD 4 1/2" MOD I ***NLA WHEN STOCK DEPLETED***	AMC LINCOLN	FORD MERCURY	JEEP	185-14009 S-921	69-2400	B-11062	3124 3131 3149 3207 C2OZ-11002-B C5AF-11001-A C6OZ-11002-A 9.5 x 40.0 x 0.8mm	3132 3135 3208 C3OZ-11002-C C5TZ-11002-D C9FF-11001-B	3139 3142 C4TZ-11049-A C6FF-11001-D D0VY-11002-A
FORD	LINCOLN	MERCURY																											
466-14007	76-2557	S-2594																											
3124 3152 3157 3160 D6OZ-11002-A D7DZ-11002-A D7TZ-11002-A 60mm LONG	3153 3154 3165 3168 D7AZ-11002-A D7DZ-11002-B D8BZ-11002-A	3155 3156 3169 3172 D7AZ-11002-B D7OZ-11002-A D8FZ-11002-B																											
FORD MERKUR	LINCOLN	MERCURY																											
248-14005 S-2721	76-2509	E2BF-11177-AA																											
3175 3179 3188 3189 E25Y-11002-A E2FZ-11002-A E3FZ-11002-A	3180 3181 3191 3196 E25Z-11002-A E2PZ-11002-A E3TZ-11002-A	3185 3187 3198 E2BZ-11002-A E3AZ-11002-A E3TZ-11002-D																											
AMC LINCOLN	FORD MERCURY	JEEP																											
185-14009 S-921	69-2400	B-11062																											
3124 3131 3149 3207 C2OZ-11002-B C5AF-11001-A C6OZ-11002-A 9.5 x 40.0 x 0.8mm	3132 3135 3208 C3OZ-11002-C C5TZ-11002-D C9FF-11001-B	3139 3142 C4TZ-11049-A C6FF-11001-D D0VY-11002-A																											
FORD  F48-16 FORD TERMINAL CONTACT <table><tr><td>FORD MERKUR</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>248-14004</td><td>76-2513</td><td>S-2597</td></tr><tr><td>3152 3153 3158 3165 D7AZ-11002-A D7DZ-11002-B D7ZZ-11002-A 19mm LONG, 3.4mm ID HOLE</td><td>3154 3155 3168 3169 D7AZ-11002-B D7OZ-11002-A D8FZ-11002-B</td><td>3156 3157 3172 3174 D7DZ-11002-A D7TZ-11002-A E1AZ-11002-B</td></tr></table> IN KIT NUMBERS F48-21, F48-31	FORD MERKUR	LINCOLN	MERCURY	248-14004	76-2513	S-2597	3152 3153 3158 3165 D7AZ-11002-A D7DZ-11002-B D7ZZ-11002-A 19mm LONG, 3.4mm ID HOLE	3154 3155 3168 3169 D7AZ-11002-B D7OZ-11002-A D8FZ-11002-B	3156 3157 3172 3174 D7DZ-11002-A D7TZ-11002-A E1AZ-11002-B	FORD  F48-33 FORD CONTACT SPRING BRUSH <table><tr><td>FORD</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>141-14019 C5NF-11116-A</td><td>76-2502 S-967</td><td>C0DF-11116-A</td></tr><tr><td>3124 3131 C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D 8.8 x 19 x 12mm 100mm LL</td><td>3132 3135 C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C</td><td>3149 C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A</td></tr></table> FORD 4 1/2" MOD I	FORD	LINCOLN	MERCURY	141-14019 C5NF-11116-A	76-2502 S-967	C0DF-11116-A	3124 3131 C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D 8.8 x 19 x 12mm 100mm LL	3132 3135 C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	3149 C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A	FORD  F48-59 FORD SOLENOID RETURN SPRING <table><tr><td>FORD MERKUR</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>248-14025 S-998</td><td>76-2701 SZ-629</td><td>C2DF-11103-A</td></tr><tr><td>3148 3151 3180 3181 D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A 9.7 x 12.2 x 38mm</td><td>3156 3158 3185 3187 D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B</td><td>3175 3179 3188 3189 D4ZZ-11002-A D7ZZ-11002-A E1FZ-11002-A</td></tr></table> RETURN SPRING	FORD MERKUR	LINCOLN	MERCURY	248-14025 S-998	76-2701 SZ-629	C2DF-11103-A	3148 3151 3180 3181 D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A 9.7 x 12.2 x 38mm	3156 3158 3185 3187 D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B	3175 3179 3188 3189 D4ZZ-11002-A D7ZZ-11002-A E1FZ-11002-A
FORD MERKUR	LINCOLN	MERCURY																											
248-14004	76-2513	S-2597																											
3152 3153 3158 3165 D7AZ-11002-A D7DZ-11002-B D7ZZ-11002-A 19mm LONG, 3.4mm ID HOLE	3154 3155 3168 3169 D7AZ-11002-B D7OZ-11002-A D8FZ-11002-B	3156 3157 3172 3174 D7DZ-11002-A D7TZ-11002-A E1AZ-11002-B																											
FORD	LINCOLN	MERCURY																											
141-14019 C5NF-11116-A	76-2502 S-967	C0DF-11116-A																											
3124 3131 C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D 8.8 x 19 x 12mm 100mm LL	3132 3135 C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	3149 C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A																											
FORD MERKUR	LINCOLN	MERCURY																											
248-14025 S-998	76-2701 SZ-629	C2DF-11103-A																											
3148 3151 3180 3181 D2FZ-11002-A D6FZ-11002-A D8FZ-11002-A 9.7 x 12.2 x 38mm	3156 3158 3185 3187 D4FZ-11002-B D6FZ-11002-B D8FZ-11002-B	3175 3179 3188 3189 D4ZZ-11002-A D7ZZ-11002-A E1FZ-11002-A																											
FORD  F48-19 FORD CONTACT KIT <table><tr><td>FORD</td><td>LINCOLN</td><td>MERCURY</td></tr><tr><td>248-14021 S-1000</td><td>79-2103 SZ-750</td><td>C2OZ-11134-B</td></tr><tr><td>3124 3131 C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D</td><td>3132 3135 C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C</td><td>3149 C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A</td></tr></table> 4 1/2" STARTERS, SET F48-04, F48-29, F48-33, F48-48 AND F48-52	FORD	LINCOLN	MERCURY	248-14021 S-1000	79-2103 SZ-750	C2OZ-11134-B	3124 3131 C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D	3132 3135 C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	3149 C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A	FORD  F48-35 FORD CONTACT SPRING <table><tr><td>FORD</td><td>MERCURY</td></tr><tr><td>141-14003 S-985</td><td>76-2507 D12F-11116-BA</td></tr><tr><td>3148 3156 D2FZ-11002-A D8FZ-11002-A 8.0 x 15.4 x 12mm 118mm LL</td><td>D4FZ-11002-B D6FZ-11002-B</td></tr></table> FORD 4" MOD I	FORD	MERCURY	141-14003 S-985	76-2507 D12F-11116-BA	3148 3156 D2FZ-11002-A D8FZ-11002-A 8.0 x 15.4 x 12mm 118mm LL	D4FZ-11002-B D6FZ-11002-B	FORD  F48-61 FORD PLASTIC PLANETARY GEAR TRACK <table><tr><td>FORD MERCURY</td><td>LINCOLN</td><td>MAZDA</td></tr><tr><td>222-14001 S-3288</td><td>76-2811 SM-476</td><td>E9OZ-11A165-A</td></tr><tr><td>3204 3205 3223 3224 1L5T-11000-AA E9OY-11002-A E9SZ-11002-B 37TH, 72mm OD</td><td>3213 3214 3225 3226 6L5T-11000-AA E9OY-11002-B F02Z-11002-A</td><td>3217 3221 3230 3231 98AB-11000-EC E9SZ-11002-A F0FZ-11002-A</td></tr></table> PMGR	FORD MERCURY	LINCOLN	MAZDA	222-14001 S-3288	76-2811 SM-476	E9OZ-11A165-A	3204 3205 3223 3224 1L5T-11000-AA E9OY-11002-A E9SZ-11002-B 37TH, 72mm OD	3213 3214 3225 3226 6L5T-11000-AA E9OY-11002-B F02Z-11002-A	3217 3221 3230 3231 98AB-11000-EC E9SZ-11002-A F0FZ-11002-A			
FORD	LINCOLN	MERCURY																											
248-14021 S-1000	79-2103 SZ-750	C2OZ-11134-B																											
3124 3131 C2OZ-11002-B C6OZ-11002-A D4TZ-11002-D	3132 3135 C3OZ-11002-C D1AZ-11002-A D5AZ-11002-C	3149 C5TZ-11002-D D4OZ-11002-A D6DZ-11002-A																											
FORD	MERCURY																												
141-14003 S-985	76-2507 D12F-11116-BA																												
3148 3156 D2FZ-11002-A D8FZ-11002-A 8.0 x 15.4 x 12mm 118mm LL	D4FZ-11002-B D6FZ-11002-B																												
FORD MERCURY	LINCOLN	MAZDA																											
222-14001 S-3288	76-2811 SM-476	E9OZ-11A165-A																											
3204 3205 3223 3224 1L5T-11000-AA E9OY-11002-A E9SZ-11002-B 37TH, 72mm OD	3213 3214 3225 3226 6L5T-11000-AA E9OY-11002-B F02Z-11002-A	3217 3221 3230 3231 98AB-11000-EC E9SZ-11002-A F0FZ-11002-A																											

HITACHI  W485-08 HITACHI PLASTIC CE DUST COVER <table> <tr> <td>GEHL ISEKI</td> <td>HONDA ISUZU</td> <td>INFINITI NISSAN</td> </tr> </table> 14544 2114-38012 16194 16203 16209 16246 16270 16773 16774 16775 16805 16843 16877 16911 2114-3963 S114-170B S114-170E S114-173F S114-177 S114-180 S114-180B S114-180D S114-180E 44.5mm OD CE COVER	GEHL ISEKI	HONDA ISUZU	INFINITI NISSAN	HITACHI  W485-18 HITACHI STOP COLLAR RETAINER <table> <tr> <td>CHEVROLET</td> <td>HONDA</td> <td>NISSAN</td> </tr> </table> S-3869 16190 16203 16209 16246 16270 16498 16579 S114-103K S114-103L S114-103M S114-103N S114-103P S114-108L S114-111 S114-118 S114-121 13.5mm ID SNAP RING CLIP	CHEVROLET	HONDA	NISSAN	HITACHI  W485-51 HITACHI SOLENOID MOBILE CONTACT <table> <tr> <td>ACURA NISSAN</td> <td>INFINITI SUBARU</td> <td>ISUZU YANMAR</td> </tr> </table> 03916 66-81701 16732 16774 16775 16805 16817 16991 16992 17057 17145 17146 17147 17161 S114-306 S114-315 S114-316 S114-317A S114-317B S114-318 S114-318A S114-319 S114-345 42mm CONTACT HEIGHT SHORT BODY SOLENOID. USED ON W455-08, W455-24, W455-27, W455-51, W455-81, W455-82,	ACURA NISSAN	INFINITI SUBARU	ISUZU YANMAR
GEHL ISEKI	HONDA ISUZU	INFINITI NISSAN									
CHEVROLET	HONDA	NISSAN									
ACURA NISSAN	INFINITI SUBARU	ISUZU YANMAR									
HITACHI MITSUBA MITSUBISHI NIPPONDENSO  W485-115 HITACHI SOLENOID LOCKING WASHER <table> <tr> <td>ACURA AUDI</td> <td>ALLIS-CHALMERS BLUE BIRD</td> <td>AMC BOBCAT</td> </tr> </table> 16211 16215 16218 16245 16468 16500 16514 16519 16520 16522 16527 16584 028000-2000 028000-2240 028000-4210 028000-6520 028000-6650 028000-6810 028000-7131 028000-7172 028000-7330 8mm ID USED FOR LOCKING CONTACT STUDS INTO PLACE ON SOLENOID STUDS, JUST FLATTEN IN PLACE, ALTERNATE W480-83	ACURA AUDI	ALLIS-CHALMERS BLUE BIRD	AMC BOBCAT	HITACHI MITSUBISHI NIPPONDENSO  W485-21 NIPPONDENSO PAPER WASHER <table> <tr> <td>GRAVELY KUBOTA</td> <td>JOHN DEERE</td> <td>KAWASAKI</td> </tr> </table> 85-7400 18266 228000-7990 228000-7991 W455-00 W455-02 W455-03 W455-09 W455-10 W455-12 W455-13 8.3mm ID x 12.7mm OD x 0.8mm THICK SPACER/SEAL, FITS MOST SOLENOID CAP POSTS WITH 8mm POSTS, ALSO FITS COMMON BOSCH, SEE W480-11	GRAVELY KUBOTA	JOHN DEERE	KAWASAKI	HITACHI  W485-60 HITACHI SOLENOID CONTACT STUD <table> <tr> <td>ACURA HYSTER</td> <td>CHEVROLET INFINITI</td> <td>FORD INTERNATIONAL</td> </tr> </table> 66-81350 16205 16207 16211 16246 16270 16579 16732 16740 16771 16773 16774 16775 2114-57509 S108-76 S108-76A S114-126 S114-126M S114-160 S114-160D S114-160E S114-160F 8mm x 27mm, 32.5mm LENGTH, 11.5mm x 11.5mm x 4.5mm HEAD. USED ON SOLENOID CAPS W465-01, W465-03, W465-05, W465-07, W465-08, W465-10, W465-15, W465-18, W465-24, W465-28, W465-29. FOR METAL WASHER	ACURA HYSTER	CHEVROLET INFINITI	FORD INTERNATIONAL
ACURA AUDI	ALLIS-CHALMERS BLUE BIRD	AMC BOBCAT									
GRAVELY KUBOTA	JOHN DEERE	KAWASAKI									
ACURA HYSTER	CHEVROLET INFINITI	FORD INTERNATIONAL									
HITACHI  W485-147 HITACHI SOLENOID SPACER <table> <tr> <td>CHEVROLET ISHIKAWAJIMA</td> <td>FORD AG ISUZU</td> <td>HONDA KOMATSU</td> </tr> </table> 2130-2910 16194 16203 16205 16207 16209 16211 16246 16270 16499 16579 16710 16711 2114-3963 S114-141 S114-146 S114-149 S114-160 S114-160A S114-160B S114-160C S114-160D 26mm ID x 50mm OD x 0.5mm NOTE USED TO CONTROL DRIVE THROW DISTANCE TO APROX 1-1.5mm BEFORE HITTING STOP COLLAR	CHEVROLET ISHIKAWAJIMA	FORD AG ISUZU	HONDA KOMATSU	HITACHI  W485-43 HITACHI SOLENOID MOBILE CONTACT <table> <tr> <td>CHEVROLET INTERNATIONAL</td> <td>FORD ISEKI</td> <td>HYSTER ISHIKAWAJIMA</td> </tr> </table> 03915 248-44000 66-81700 16205 16207 16211 16579 16740 16771 16773 16803 16806 16807 16811 16818 2114-57509 S108-76 S108-76A S114-160 S114-160D S114-160E S114-160F S114-161 S114-161E 29.5mm CONTACT HEIGHT LONG BODY SOLENOIDS. FITS SOLENOID CAPS W465-01, W465-03, W465-05, W465-07, W465-18, W465-34.	CHEVROLET INTERNATIONAL	FORD ISEKI	HYSTER ISHIKAWAJIMA	HITACHI  W485-61 HITACHI SHIFT LEVER FORK NISSAN 16817 17196 S114-503A S114-516 S114-516A S114-528 S114-528A 64mm LONG			
CHEVROLET ISHIKAWAJIMA	FORD AG ISUZU	HONDA KOMATSU									
CHEVROLET INTERNATIONAL	FORD ISEKI	HYSTER ISHIKAWAJIMA									

HITACHI  W485-66 HITACHI STOP COLLAR KIT <table><tr><td>CHEVROLET ISUZU</td><td>HYSTER JOHN DEERE</td><td>INFINITI MASSEY FERGUSON</td></tr><tr><td>2114-29006</td><td>461-44002</td><td>79-81102</td></tr></table> 16540 16584 16611 16694 16733 16740 16803 16806 16807 16809 16811 16814 2114-45552 S114-252 S114-252A S114-252C S114-252E S114-252F S114-253 S114-253A S114-253B RETURN SPRING FOR CW ROTATION STARTERS ON DRIVE PINION	CHEVROLET ISUZU	HYSTER JOHN DEERE	INFINITI MASSEY FERGUSON	2114-29006	461-44002	79-81102	HITACHI  W485-77 HITACHI FIELD COIL BOOT <table><tr><td>CHEVROLET GMC</td><td>FUJI INDUSTRY ISUZU</td><td>GEHL JOHN DEERE</td></tr><tr><td>2114-2742</td><td></td><td></td></tr></table> 16774 16814 17057 17801 18203 18204 18205 18207 18218 18280 18281 18299 S108-76A S114-213A S114-320A S114-419 S114-419A S114-441A S114-441B S114-483 S114-556 RUBBER, COVERS THE FIELD COIL EYELET AND POST ON THE SOLENOID	CHEVROLET GMC	FUJI INDUSTRY ISUZU	GEHL JOHN DEERE	2114-2742			HITACHI MITSUBISHI UNIVERSAL  WAS10 STARTER DRIVE SPRING <table><tr><td>CHEVROLET FORD</td><td>DODGE GEO</td><td>EAGLE HYSTER</td></tr><tr><td>16194 16246 16514 16527 16569 16579 16708 16728 16742 16795 16856 16859 2114-55100 M0T206722C M191T27571 M2T10071 M2T20181 M2T20182 M3T10172 M3T10473 M3T10475 4.5 x 8.9 x 11.7mm L, (.178" x .354" x .460" L)</td><td></td><td></td></tr></table> FOR MOST COMMON SMALL MITSUBISHI DRIVES	CHEVROLET FORD	DODGE GEO	EAGLE HYSTER	16194 16246 16514 16527 16569 16579 16708 16728 16742 16795 16856 16859 2114-55100 M0T206722C M191T27571 M2T10071 M2T20181 M2T20182 M3T10172 M3T10473 M3T10475 4.5 x 8.9 x 11.7mm L, (.178" x .354" x .460" L)								
CHEVROLET ISUZU	HYSTER JOHN DEERE	INFINITI MASSEY FERGUSON																								
2114-29006	461-44002	79-81102																								
CHEVROLET GMC	FUJI INDUSTRY ISUZU	GEHL JOHN DEERE																								
2114-2742																										
CHEVROLET FORD	DODGE GEO	EAGLE HYSTER																								
16194 16246 16514 16527 16569 16579 16708 16728 16742 16795 16856 16859 2114-55100 M0T206722C M191T27571 M2T10071 M2T20181 M2T20182 M3T10172 M3T10473 M3T10475 4.5 x 8.9 x 11.7mm L, (.178" x .354" x .460" L)																										
HITACHI  W485-68 HITACHI FIELD GROMMET <table><tr><td>CHEVROLET</td><td>HONDA</td><td>NISSAN</td></tr><tr><td>S-3851</td><td></td><td></td></tr><tr><td>16190 16203 16209 16246 16498 16579</td><td></td><td></td></tr><tr><td>S114-103K S114-103N S114-111 10mm SLOT</td><td>S114-103L S114-103P S114-118</td><td>S114-103M S114-108L S114-121</td></tr></table> EARLY HITACHI	CHEVROLET	HONDA	NISSAN	S-3851			16190 16203 16209 16246 16498 16579			S114-103K S114-103N S114-111 10mm SLOT	S114-103L S114-103P S114-118	S114-103M S114-108L S114-121	HITACHI  W485-87 HITACHI SOLENOID MOBILE CONTACT <table><tr><td>CHEVROLET</td><td>HONDA</td><td>NISSAN</td></tr><tr><td>14142</td><td></td><td></td></tr><tr><td>16190 16203 16209 16246 16270 16498</td><td></td><td></td></tr><tr><td>S114-100 S114-103M S114-108L 30.7mm CONTACT HEIGHT, 4.8mm SHAFT</td><td>S114-103K S114-103N S114-111</td><td>S114-103L S114-103P S114-118</td></tr></table> FOR OLD STYLE BOLT ON CAPS	CHEVROLET	HONDA	NISSAN	14142			16190 16203 16209 16246 16270 16498			S114-100 S114-103M S114-108L 30.7mm CONTACT HEIGHT, 4.8mm SHAFT	S114-103K S114-103N S114-111	S114-103L S114-103P S114-118	HITACHI UNIVERSAL  WAS237-356 STARTER DRIVE ROLLER WISCONSIN 18565 2114-55100 S114-680 6.02mm OD, 9.04mm L (.237" x .356")
CHEVROLET	HONDA	NISSAN																								
S-3851																										
16190 16203 16209 16246 16498 16579																										
S114-103K S114-103N S114-111 10mm SLOT	S114-103L S114-103P S114-118	S114-103M S114-108L S114-121																								
CHEVROLET	HONDA	NISSAN																								
14142																										
16190 16203 16209 16246 16270 16498																										
S114-100 S114-103M S114-108L 30.7mm CONTACT HEIGHT, 4.8mm SHAFT	S114-103K S114-103N S114-111	S114-103L S114-103P S114-118																								
HITACHI  W485-73 HITACHI RUBBER GROMMET PLUG NISSAN 16817 S114-503A S114-516 SHIFT LEVER PLUG	HITACHI UNIVERSAL  WAS1.855 STARTER DRIVE CAP NISSAN 16817 17146 17161 17196 17454 31338 S114-503A S114-517C S114-525 47.1mm ID, 30.6mm HOLE, 26.1mm L (1.855", 1.205", 1.027") FITS DRIVES W475-57, 16817, 17146, 17161, 17190, 17196, 17454 S114-516 S114-519A S114-525A S114-516A S114-520B S114-527	HITACHI UNIVERSAL  WAS238-490 STARTER DRIVE ROLLER NISSAN 16584 S114-254 W475-136 W475-97 6.05mm OD, 12.45mm L (.238" x .490" L) W475-110 W475-139 W475-98 W475-130 W475-86 USED ON HITACHI OSGR LARGE DIAMETER INNER RACES, SPRINGS WAS70-4, WAS40																								

HITACHI MITSUBISHI UNIVERSAL  WAS238-540 STARTER DRIVE ROLLER AUDI CATERPILLAR BUICK CHRYSLER CASE CLARK 16584 16720 16780 16815 16817 16866 16868 16875 16947 17097 17110 17141 M191T70771 M191T70971 M1T50071 M1T50371 M1T50471 M1T60381 M2T25281 M2T25282 M2T25581 6.05mm OD, 13.72mm L, (.238" x .540" L) SPRINGS WAS70-4, WAS40	HITACHI MITSUBA MITSUBISHI NIPPONDENSO UNIVERSAL  WAS70-4 STARTER DRIVE SPRING ACURA CHRYSLER AUDI DODGE CHEVROLET HONDA 54-81600 16540 16584 16611 16694 16720 16740 16780 16803 16806 16807 16811 16814 028301-0010 428000-0870 428000-1520 M1T50071 M1T50471 M2T50181 M2T52071 M2T52081 M2T52172 4.14mm x 11.33mm x 12.7mm L, (.163" x .446" x .500" L) GEAR REDUCTION DRIVE CLUTCHES, W475-74, W475-90 USED FOR MANY GASOLINE APPLICATIONS WITH SMALL PINIONS	LUCAS  W481-00 LUCAS SOLENOID MOBILE CONTACT ALLIS-CHALMERS FORD CASE IH (INTERNATIONAL) CLARK INTERNATIONAL 03903 66-92700 16164 16165 16173 16184 16288 16606 16660 16664 16665 17072 17640 17641 25616A/J 25620A/D 25621A/E 25627A/E 25654A/H 25654E 25673A 26236L 26268A/H 31mm CONTACT HEIGHT FITS SOLENOIDS W451-01, W451-02, W451-03 & W451-04.
HITACHI NIPPONDENSO UNIVERSAL  WAS276-470 STARTER DRIVE ROLLER ACURA CHEVROLET ALLIS-CHALMERS CHRYSLER CATERPILLAR DODGE 54-81501 16540 16584 16611 16694 16733 16739 16740 16803 16806 16807 16809 16811 028000-6280 028000-6350 028000-6400 028000-7000 028000-7640 028000-8130 028000-8251 028000-8371 028000-9670 7.01mm OD, 11.94mm L, (.276" x .470" L) USED ON SMALL INNER RACE STYLE CLUTCHES, SPRINGS WAS70-4, WAS40	BOSCH HITACHI UNIVERSAL  WAS81 STARTER DRIVE CAP ALFA ROMEO VOLKSWAGEN NISSAN VOLVO PENTA PORSCHE 16194 16246 16339 16450 16551 16954 0-001-211-001 0-001-211-004 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 2114-55100 S114-180 S114-182 47.4mm ID, 33.4mm HOLE, 20.0mm L (1.865", 1.314", 0.788") FOR COMMON 5 ROLLER DRIVES	LUCAS  W481-01 LUCAS STARTER BRAKE KIT ALLIS-CHALMERS CLARK CASE FIAT CATERPILLAR FIAT-ALLIS 14409 500-30003 54243852 79-92103 S-2681 16138 16144 16170 16175 16286 16287 16288 16606 16608 16660 16661 16662 26209A/E 26215A/F 26215H 26236L 26252A/D 26264H/K 26266A/F 26268J/L 26269A/F M45/M50 STARTERS *INCLUDES (2) BRAKE SHOES, (2) SPRINGS, (1) CE THRUST SHIM, & (1) CE THRUST WASHER
HITACHI LUCAS MITSUBA NIPPONDENSO UNIVERSAL  WAS40 STARTER DRIVE SPRING BUICK CLARK CASE DODGE CATERPILLAR FORD 54-82607 16286 16287 16288 16606 16608 16660 16670 16733 16744 16799 16809 16815 028300-5381 028300-7802 228000-2291 228000-2292 228000-6471 26211M/T 26211U 26227R/V 26265J/M 4.5mm x 12.34mm x 14.5mm L, (.177" x .486" x .570" L) STRONGER TENSION THAN WAS70-4 SPRING, ALSO USED IN HITACHI, LUCAS, MITSUBISHI, NIPPONDENSO DRIVE CLUTCHES	ISKRA  W488-00 ISKRA SHIFT LEVER FORK YUGO 14209 16465 16547 16619 11.130.166 11.130.245 11.130.334 FOR ISKRA STARTERS ONLY	LUCAS  W481-02 LUCAS SRE RUBBER SEALING KIT ALLIS-CHALMERS FIAT-ALLIS CASE JAGUAR FIAT LEYLAND-DAF 60600026 16175 16286 16287 16288 16661 16662 17640 17641 17644 18263 26236L 26268A/H 26268J/L 26269A/F 26269H/L 26279F/K 26283H/K 26310A/D 26346A/D M45G, COMPLETE SEAL KIT


LUCAS  W481-03 LUCAS RETAINING (STAR) WASHER <table><tr><td>AUSTIN MERCURY</td><td>FORD MG</td><td>JAGUAR ROVER</td></tr><tr><td>14423</td><td>54160560</td><td>TLB185</td></tr></table> <table><tr><td>16104</td><td>16109</td><td>16127</td><td>16133</td><td>16134</td><td>16164</td></tr><tr><td>16166</td><td>16173</td><td>16178</td><td>16284</td><td>16289</td><td>16699</td></tr><tr><td>25145A/J</td><td colspan="2">25182D/J</td><td colspan="3">25204A/L</td></tr><tr><td>25289A/J</td><td colspan="2">25327A/D</td><td colspan="3">25616A/J</td></tr><tr><td>25643A/J</td><td colspan="2">25647A/L</td><td colspan="3">25654A/H</td></tr></table> 11mm ID FITS M35J, K 5M90. FOR ARMATURE SHAFT COM END, CE BUSHING W421-17, RUBBER BOOT W481-07.	AUSTIN MERCURY	FORD MG	JAGUAR ROVER	14423	54160560	TLB185	16104	16109	16127	16133	16134	16164	16166	16173	16178	16284	16289	16699	25145A/J	25182D/J		25204A/L			25289A/J	25327A/D		25616A/J			25643A/J	25647A/L		25654A/H			LUCAS  W481-07 LUCAS RUBBER COMMENTATOR END COVER <table><tr><td>AUSTIN MG</td><td>FORD ROVER</td><td>JAGUAR TRIUMPH</td></tr><tr><td>14416</td><td>180-30001</td><td></td></tr></table> <table><tr><td>16104</td><td>16134</td><td>16164</td><td>16166</td><td>16173</td><td>16178</td></tr><tr><td>16284</td><td>16289</td><td>16699</td><td>17021</td><td></td><td></td></tr><tr><td>25145A/J</td><td colspan="2">25643A/J</td><td colspan="3">25647A/L</td></tr><tr><td>25654A/H</td><td colspan="2">25654E</td><td colspan="3">25674A/E</td></tr><tr><td>25683A/D</td><td colspan="2">25684A/J</td><td colspan="3">25689A/J</td></tr></table> FITS M35J, K 5M90. FOR ARMATURE SHAFT CE, CE BUSHING W421-17, RETAINER SPRING W481-03.	AUSTIN MG	FORD ROVER	JAGUAR TRIUMPH	14416	180-30001		16104	16134	16164	16166	16173	16178	16284	16289	16699	17021			25145A/J	25643A/J		25647A/L			25654A/H	25654E		25674A/E			25683A/D	25684A/J		25689A/J			LUCAS  W481-10 LUCAS STARTER MOTOR TERMINAL INSULATOR <table><tr><td>FORD TRIUMPH</td><td>MERCURY</td><td>MG</td></tr><tr><td>14404</td><td>54258775</td><td>S-2614</td></tr></table> <table><tr><td>16109</td><td>16121</td><td>16127</td><td>16133</td><td>16723</td></tr></table> <table><tr><td>25149B/H</td><td colspan="2">25182D/J</td><td colspan="2">25204A/L</td></tr><tr><td>25219A/K</td><td colspan="2">25289A/J</td><td colspan="2">25327A/D</td></tr></table> 7mm ID x 8mm OD SQUARE HOLE STYLE	FORD TRIUMPH	MERCURY	MG	14404	54258775	S-2614	16109	16121	16127	16133	16723	25149B/H	25182D/J		25204A/L		25219A/K	25289A/J		25327A/D										
AUSTIN MERCURY	FORD MG	JAGUAR ROVER																																																																																																						
14423	54160560	TLB185																																																																																																						
16104	16109	16127	16133	16134	16164																																																																																																			
16166	16173	16178	16284	16289	16699																																																																																																			
25145A/J	25182D/J		25204A/L																																																																																																					
25289A/J	25327A/D		25616A/J																																																																																																					
25643A/J	25647A/L		25654A/H																																																																																																					
AUSTIN MG	FORD ROVER	JAGUAR TRIUMPH																																																																																																						
14416	180-30001																																																																																																							
16104	16134	16164	16166	16173	16178																																																																																																			
16284	16289	16699	17021																																																																																																					
25145A/J	25643A/J		25647A/L																																																																																																					
25654A/H	25654E		25674A/E																																																																																																					
25683A/D	25684A/J		25689A/J																																																																																																					
FORD TRIUMPH	MERCURY	MG																																																																																																						
14404	54258775	S-2614																																																																																																						
16109	16121	16127	16133	16723																																																																																																				
25149B/H	25182D/J		25204A/L																																																																																																					
25219A/K	25289A/J		25327A/D																																																																																																					
LUCAS  W481-04 LUCAS POSITIVE POST KIT <table><tr><td>AUSTIN MASSEY FERGUSON</td><td>FORD MG</td><td>LOTUS SINGER</td></tr><tr><td>54251942</td><td>S-2653</td><td>TCB115</td></tr></table> <table><tr><td>16100</td><td>16109</td><td>16119</td><td>16121</td><td>16122</td><td>16150</td></tr><tr><td>16169</td><td>16186</td><td>16601</td><td></td><td></td><td></td></tr><tr><td>25016A</td><td colspan="2">25022A/L</td><td colspan="3">25022K/M</td></tr><tr><td>25022N/O</td><td colspan="2">25038E/H</td><td colspan="3">25061A</td></tr><tr><td>25061B</td><td colspan="2">25061E/F</td><td colspan="3">25065A</td></tr></table> 1/4" UNF ENGLISH THREAD BRASS, ROUND HOLE CE PLATES	AUSTIN MASSEY FERGUSON	FORD MG	LOTUS SINGER	54251942	S-2653	TCB115	16100	16109	16119	16121	16122	16150	16169	16186	16601				25016A	25022A/L		25022K/M			25022N/O	25038E/H		25061A			25061B	25061E/F		25065A			LUCAS  W481-08 LUCAS STARTER MOTOR TERMINAL BOLT <table><tr><td>ALLIS-CHALMERS IH (INTERNATIONAL)</td><td>CASE J.C. BAMFORD</td><td>FORD JAGUAR</td></tr><tr><td>14415 272022</td><td>256745 54243851</td><td>256746</td></tr></table> <table><tr><td>16108</td><td>16129</td><td>16138</td><td>16170</td><td>16287</td><td>16606</td></tr><tr><td>16660</td><td>16665</td><td>17071</td><td>17643</td><td>17644</td><td>18261</td></tr><tr><td>25519A/F</td><td colspan="2">25541F/H</td><td colspan="3">26180</td></tr><tr><td>26246A/L</td><td colspan="2">26246M</td><td colspan="3">26252A/D</td></tr><tr><td>26269A/F</td><td colspan="2">26269H/L</td><td colspan="3">26270A/J</td></tr></table> 4mm SLOT, 33mm POST, 43mm OAL SIDE MOUNT POST, USED WITH W481-17 NUT. FOR REAR POST BOLT VERSION USE W481-16.	ALLIS-CHALMERS IH (INTERNATIONAL)	CASE J.C. BAMFORD	FORD JAGUAR	14415 272022	256745 54243851	256746	16108	16129	16138	16170	16287	16606	16660	16665	17071	17643	17644	18261	25519A/F	25541F/H		26180			26246A/L	26246M		26252A/D			26269A/F	26269H/L		26270A/J			LUCAS  W481-11 LUCAS MOTOR POST INSULATOR <table><tr><td>AUSTIN MG</td><td>LOTUS TRIUMPH</td><td>MASSEY FERGUSON</td></tr><tr><td>14405</td><td>S-2652</td><td></td></tr></table> <table><tr><td>16100</td><td>16121</td><td>16122</td><td>16150</td><td>16186</td><td>16601</td></tr></table> <table><tr><td>25022K/M</td><td colspan="2">25022N/O</td><td colspan="3">25038E/H</td></tr><tr><td>25061A</td><td colspan="2">25061B</td><td colspan="3">25061E/F</td></tr><tr><td>25065A</td><td colspan="2">25079A/J</td><td colspan="3">25083A/H</td></tr></table> 7mm ID x 8mm OD ROUND HOLE STYLE	AUSTIN MG	LOTUS TRIUMPH	MASSEY FERGUSON	14405	S-2652		16100	16121	16122	16150	16186	16601	25022K/M	25022N/O		25038E/H			25061A	25061B		25061E/F			25065A	25079A/J		25083A/H		
AUSTIN MASSEY FERGUSON	FORD MG	LOTUS SINGER																																																																																																						
54251942	S-2653	TCB115																																																																																																						
16100	16109	16119	16121	16122	16150																																																																																																			
16169	16186	16601																																																																																																						
25016A	25022A/L		25022K/M																																																																																																					
25022N/O	25038E/H		25061A																																																																																																					
25061B	25061E/F		25065A																																																																																																					
ALLIS-CHALMERS IH (INTERNATIONAL)	CASE J.C. BAMFORD	FORD JAGUAR																																																																																																						
14415 272022	256745 54243851	256746																																																																																																						
16108	16129	16138	16170	16287	16606																																																																																																			
16660	16665	17071	17643	17644	18261																																																																																																			
25519A/F	25541F/H		26180																																																																																																					
26246A/L	26246M		26252A/D																																																																																																					
26269A/F	26269H/L		26270A/J																																																																																																					
AUSTIN MG	LOTUS TRIUMPH	MASSEY FERGUSON																																																																																																						
14405	S-2652																																																																																																							
16100	16121	16122	16150	16186	16601																																																																																																			
25022K/M	25022N/O		25038E/H																																																																																																					
25061A	25061B		25061E/F																																																																																																					
25065A	25079A/J		25083A/H																																																																																																					
LUCAS  W481-06 LUCAS SEAL KIT - M50 <table><tr><td>ALLIS-CHALMERS FORD</td><td>CASE IH (INTERNATIONAL)</td><td>CLARK INTERNATIONAL</td></tr><tr><td>14426 60600020</td><td>180-30000 79-92300</td><td>54244971 S-2684</td></tr></table> <table><tr><td>16608</td><td>16669</td><td>16670</td><td>16984</td><td>17071</td><td>17072</td></tr><tr><td>17644</td><td>17646</td><td>17647</td><td>17648</td><td>17649</td><td>17650</td></tr><tr><td>26274A/D</td><td colspan="2">26274E/F</td><td colspan="3">26274H/N</td></tr><tr><td>26294A/B</td><td colspan="2">26294D/E</td><td colspan="3">26294F/N</td></tr><tr><td>26295A/B</td><td colspan="2">26295D/E</td><td colspan="3">26295F/M</td></tr></table> M50, *INCLUDES CE & CS SEAL, O-RING, FIELD COIL GROMMET AND SOLENOID GASKET	ALLIS-CHALMERS FORD	CASE IH (INTERNATIONAL)	CLARK INTERNATIONAL	14426 60600020	180-30000 79-92300	54244971 S-2684	16608	16669	16670	16984	17071	17072	17644	17646	17647	17648	17649	17650	26274A/D	26274E/F		26274H/N			26294A/B	26294D/E		26294F/N			26295A/B	26295D/E		26295F/M			LUCAS  W481-09 LUCAS PLASTIC GEAR TRACK 42TH <table><tr><td>JAGUAR</td><td>LANDROVER</td></tr><tr><td>14438</td><td>54293375</td></tr></table> <table><tr><td>17249</td><td>17453</td></tr></table> <table><tr><td>26801B/F</td><td>26907B</td><td>26908A/B</td></tr><tr><td>26923B</td><td>26937A</td><td></td></tr></table> 39 TOOTH M80R STARTERS, 40 TOOTH VERSION USE W481-14.	JAGUAR	LANDROVER	14438	54293375	17249	17453	26801B/F	26907B	26908A/B	26923B	26937A		LUCAS  W481-12 LUCAS/MARELLI BRUSH SPRING <table><tr><td>JAGUAR</td><td>LANDROVER</td><td>LISTER PETTER</td></tr><tr><td>14457</td><td>69-92799</td><td></td></tr></table> <table><tr><td>17249</td><td>17453</td><td>17638</td></tr></table> <table><tr><td>26801B/F</td><td>26803A/D</td><td>26907B</td></tr><tr><td>26908A/B</td><td>26920</td><td>26923B</td></tr><tr><td>26937A</td><td></td><td></td></tr></table> 9.6mm OD x 29mm LONG FOR CLIP USE W481-13	JAGUAR	LANDROVER	LISTER PETTER	14457	69-92799		17249	17453	17638	26801B/F	26803A/D	26907B	26908A/B	26920	26923B	26937A																																						
ALLIS-CHALMERS FORD	CASE IH (INTERNATIONAL)	CLARK INTERNATIONAL																																																																																																						
14426 60600020	180-30000 79-92300	54244971 S-2684																																																																																																						
16608	16669	16670	16984	17071	17072																																																																																																			
17644	17646	17647	17648	17649	17650																																																																																																			
26274A/D	26274E/F		26274H/N																																																																																																					
26294A/B	26294D/E		26294F/N																																																																																																					
26295A/B	26295D/E		26295F/M																																																																																																					
JAGUAR	LANDROVER																																																																																																							
14438	54293375																																																																																																							
17249	17453																																																																																																							
26801B/F	26907B	26908A/B																																																																																																						
26923B	26937A																																																																																																							
JAGUAR	LANDROVER	LISTER PETTER																																																																																																						
14457	69-92799																																																																																																							
17249	17453	17638																																																																																																						
26801B/F	26803A/D	26907B																																																																																																						
26908A/B	26920	26923B																																																																																																						
26937A																																																																																																								

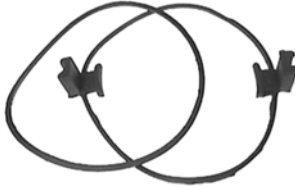
LUCAS  W481-13 LUCAS/MARELLI BRUSH CLIP JAGUAR LANDROVER LISTER PETTER 14442 17249 17453 17638 26801B/F 26803A/D 26907B 26908A/B 26920 26923B 26937A FOR SPRING USE W481-12.	LUCAS  W481-16 LUCAS MOTOR POST AUSTIN INTERNATIONAL JAGUAR LANDROVER LISTER PETTER MG 16106 16107 16108 16117 16131 16132 16139 16180 16290 16602 25521D 25521F 25522 25533A/E 25541A/D 25541E 25541F/H 25550A 25555A/F 40mm POST, 50mm OAL, ENGLISH THREAD BRASS, FOR REAR POST STARTERS, FOR SIDE POST STARTERS USE W481-08, FOR NUT USE W481-17	LUCAS  W481-19 LUCAS/MARELLI MOBILE CONTACT JAGUAR LANDROVER 03913 17249 17453 26801B/F 26908A/B 26937A W451-10 32mm CONTACT HEIGHT PMGR STARTERS, FOR SOLENOID W451-10.
LUCAS  W481-14 LUCAS/MARELLI GEAR TRACK 40TH LISTER PETTER MASSEY FERGUSON 14441 54292400 54293830 76-92840 17638 26803A/D 26917 26918 26920 40 TEETH FOR 39 TOOTH VERSION USE W481-09.	LUCAS  W481-17 LUCAS MOTOR POST NUT ALLIS-CHALMERS CASE FORD IH (INTERNATIONAL JAGUAR LANDROVER 16139 16606 16660 16665 17644 18261 26062 26283H/K 26286A/E 26288F/J 26301A/E 26364A/F 26375A/D ENGLISH THREAD WITH 14mm HEX HEAD BRASS, USED WITH W481-08, W481-16 MOTOR POST	LUCAS  W481-20 LUCAS STARTER SHIFT LEVER KIT CASE FORD LISTER PETTER NEW HOLLAND 14425 355-30001 54243847 55-9200 BS-2682 16608 17638 17646 17647 26211A/L 26211M/T 26211U 26227R/V 26338A/B 26338D/F 26339A/B 26339D/H 26341A/B 111mm OAL WITH ADJUSTABLE PIN
LUCAS  W481-15 LUCAS/MARELLI BRUSH HOLDER INSULATOR JAGUAR LANDROVER LISTER PETTER 14465 17249 17453 17638 26801B/F 26803A/D 26907B 26908A/B 26923B 26937A FITS ALL PMGR STARTERS	LUCAS  W481-18 LUCAS MOTOR POST NUT AUSTIN LOTUS MASSEY FERGUSON MG TRIUMPH 16100 16121 16122 16150 16186 16601 25022K/M 25022N/O 25038E/H 25061A 25061B 25061E/F 25065A 25079A/J 25083A/H 1/4" UNF ENGLISH THREAD, 11mm HEX BRASS, COMMONLY USED ON 16121	LUCAS UNIVERSAL  WAS2.350 STARTER DRIVE CAP CASE FORD IH (INTERNATIONAL INTERNATIONAL MASSEY FERGUSON NEW HOLLAND 16286 16287 16288 16606 16608 16660 16670 17071 17072 17639 17644 17645 26211M/T 26211U 26227R/V 26265J/M 26268A/H 26268J/L 26269A/F 26269H/L 26291A/D 59.7mm ID, 41.1mm HOLE, 21.5mm L (2.350", 1.619", 0.845") FITS W471-00, W471-01, W471-03, W471-19, W471-21

LUCAS UNIVERSAL  WAS296-510 STARTER DRIVE ROLLER CASE FORD IH (INTERNATIONAL) INTERNATIONAL MASSEY FERGUSON NEW HOLLAND 16286 16287 16288 16606 16608 16660 16670 17071 17072 17639 17644 17645 26211M/T 26211U 26227R/V 26265J/M 26268A/H 26268J/L 26269A/F 26269H/L 26291A/D 7.52mm OD, 12.95mm L (.296" x .510" L) FITS DRIVES: W471-00, W471-01, W471-03, W471-15, W471-21, SPRINGS WAS40, WAS70-4	MANDO MITSUBISHI  W485-35 MITSUBISHI GEAR TRACK ASSEMBLY AMC CHEVROLET DODGE EAGLE FORD GEO 14548 222-48019 76-83810 M135C00171 M135X00771 16874 16888 16889 16900 16930 16931 16933 16939 16998 17006 17046 17131 M1T70281 M1T70381 M1T70481 M1T70482 M1T70483 M1T70485 M1T70686 M1T70781 M1T70881 43TH, 19mm ID, 65mm OD BLACK	MITSUBA  W485-109 MITSUBA SOLENOID BATTERY STUD ACURA HONDA KOHLER 03979 66-85350 16845 16901 16902 16914 16960 16975 17160 17201 17205 18423 SM302-02 SM302-04 SM302-07 SM302-08 SM302-16 SM302-18 SM302-22 SM302-24 SM302-25 8mm x 31mm, 5mm HEAD THICKNESS INCLUDES PAPER WASHER, USED IN SOLENOID CAPS W465-16, W465-27
HITACHI LUCAS MITSUBA NIPPONDENSO UNIVERSAL  WAS40 STARTER DRIVE SPRING BUICK CASE CATERPILLAR CLARK DODGE FORD 54-82607 16286 16287 16288 16606 16608 16660 16670 16733 16744 16799 16809 16815 028300-5381 028300-7802 228000-2291 228000-2292 228000-6471 26211M/T 26211U 26227R/V 26265J/M 4.5mm x 12.34mm x 14.5mm L, (.177" x .486" x .570" L) STRONGER TENSION THAN WAS70-4 SPRING, ALSO USED IN HITACHI, LUCAS, MITSUBISHI, NIPPONDENSO DRIVE CLUTCHES	MARELLI  W483-01 FIAT SOLENOID CONTACT PLUNGER FERRARI FIAT 03947 16256 16257 16465 63220701 63220709 63220721 63220741 63222400 63222409 63222502 63222532 63600493 FITS SOLENOID OEM: 63600400, 63600493, 4189658, 4198226	MITSUBA  W485-110 MITSUBA SOLENOID MOTOR STUD ACURA HONDA KOHLER 66-85351 16845 16901 16902 16914 16960 16975 17160 17201 17205 18423 SM302-02 SM302-04 SM302-07 SM302-08 SM302-16 SM302-18 SM302-22 SM302-24 SM302-25 8mm x 19.5mm, 5mm HEAD THICKNESS INCLUDES PAPER WASHER, USED IN SOLENOID CAPS W465-16, W465-27.
MANDO MITSUBISHI VALEO  W485-139 MITSUBISHI SOLENOID STRIKER PLATE ALLIS-CHALMERS AMC AUDI BLUE BIRD BUICK CADILLAC 16514 16520 16522 16527 16569 16584 16671 16717 16720 16728 16742 16744 M1T50071 M1T50471 M1T60281 M1T70281 M1T70283 M1T70381 M1T70481 M1T70482 M1T71081 30mm x 16mm x 11mm x 3mm THICK, 9.2mm ID COPPER, DESIGNED FOR THE COMMON NON-"R" TERMINAL CRIMP STYLE SOLENOIDS FOR MANDO, MITSUBISHI AND SOME VALEO, ALTERNATE W485-112	MARELLI  W483-02 MARELLI PMGR TRAIN ASSEMBLY AUDI BMW FIAT LANCIA 54294189 85540821 85540822 16956 17236 63223430 63223431 63223432 63223434 63223435 63223436 63223532 63223533 63223639 CW 90mm SHAFT x 12mm OD E70R SERIES, ALL METAL DESIGN FOR LONGER LIFE THAN THOSE MADE IN PLASTIC	MITSUBA  W485-113 MITSUBA TERMINAL BOOT ACURA HONDA ISUZU KOHLER 71-85300 16845 16901 16902 16914 16960 16975 17160 17201 17205 17433 17474 17491 SM302-02 SM302-04 SM302-07 SM302-08 SM302-16 SM302-18 SM302-22 SM302-24 SM302-25 53mm OAL GEAR REDUCTION STARTERS

HITACHI MITSUBA MITSUBISHI NIPPONDENSO  W485-115 HITACHI SOLENOID LOCKING WASHER ACURA ALLIS-CHALMERS AMC AUDI BLUE BIRD BOBCAT 16211 16215 16218 16245 16468 16500 16514 16519 16520 16522 16527 16584 028000-2000 028000-2240 028000-4210 028000-6520 028000-6650 028000-6810 028000-7131 028000-7172 028000-7330 8mm ID USED FOR LOCKING CONTACT STUDS INTO PLACE ON SOLENOID STUDS, JUST FLATTEN IN PLACE, ALTERNATE W480-83	MITSUBA  W485-176 MITSUBA TERMINAL BLOCK ACURA HONDA 76-85501 17958 17959 17960 19009 SM710-01 SM710-03 SM710-05 SM710-07 4.5mm SPADE BAKELITE, PRESS FIT	MITSUBA  W485-62 MITSUBA SOLENOID CONTACT INSULATOR HONDA KOHLER 66-85400 16845 16901 16902 16914 16960 16975 17160 17201 17205 17474 17491 17527 SM302-02 SM302-08 SM302-18 SM302-22 SM302-24 SM302-25 SM302-26 SM302-28 SM302-44 USED UNDER CONTACT DISK
MITSUBA  W485-123 MITSUBA STARTER DRIVE CAP ACURA BUICK CADILLAC CATERPILLAR CHEVROLET GMC 01557-9 467-12003 76-1841 9419572 16845 16901 16902 16914 16960 16975 17160 17201 17205 17433 17474 17491 10455309 10455310 10455311 10455344 10455346 10455347 10455348 10455349 10455350 15.9mm OD USED WITH STARTER DRIVE W475-68K. ALSO USED ON DELCO STARTERS	MITSUBA  W485-177 MITSUBA CONTACT REPAIR KIT ACURA HONDA 17814 17816 17844 17870 17871 17901 SM612-02 SM612-05 SM612-06 SM612-07 SM612-08 SM612-09 ROUND CONTACT, SPRING, CLIP WITH RUBBER BOOT	MITSUBA  W485-92 MITSUBA STARTER DRIVE LOCK RING ACURA HONDA ISUZU KOHLER 01557-8 76-85800 16845 16901 16902 16914 16960 16975 17160 17201 17205 17433 17474 17491 SM302-02 SM302-04 SM302-06 SM302-07 SM302-08 SM302-16 SM302-18 SM302-22 SM302-24 USED WITH STARTER DRIVE W475-68K
MITSUBA  W485-132 MITSUBA STARTER DRIVE RETAINER CAP ACURA HONDA ISUZU KOHLER 01557-5 76-85801 16845 16901 16902 16914 16960 16975 17160 17201 17205 17433 17474 17491 SM302-02 SM302-04 SM302-06 SM302-07 SM302-08 SM302-16 SM302-18 SM302-22 SM302-24 STEEL USED WITH STARTER DRIVE W475-68K, LOCKING RING W485-92.	MITSUBA  W485-178 MITSUBA TERMINAL BLOCK ACURA HONDA 248-54003 76-85503 17816 17844 SM612-05 SM612-06 1/4" SPADE PLASTIC	HITACHI LUCAS MITSUBA NIPPONDENSO UNIVERSAL  WAS40 STARTER DRIVE SPRING BUICK CASE CATERPILLAR CLARK DODGE FORD 54-82607 16286 16287 16288 16606 16608 16660 16670 16733 16744 16799 16809 16815 028300-5381 028300-7802 228000-2291 228000-2292 228000-6471 26211M/T 26211U 26227R/V 26265J/M 4.5mm x 12.34mm x 14.5mm L, (.177" x .486" x .570" L) STRONGER TENSION THAN WAS70-4 SPRING, ALSO USED IN HITACHI, LUCAS, MITSUBISHI, NIPPONDENSO DRIVE CLUTCHES

HITACHI MITSUBA MITSUBISHI NIPPONDENSO UNIVERSAL  WAS70-4 STARTER DRIVE SPRING ACURA AUDI CHEVROLET CHRYSLER DODGE HONDA 54-81600 16540 16584 16611 16694 16720 16740 16780 16803 16806 16807 16811 16814 028301-0010 428000-0870 428000-1520 M1T50071 M1T50471 M2T50181 M2T52071 M2T52081 M2T52172 4.14mm x 11.33mm x 12.7mm L, (.163" x .446" x .500" L) GEAR REDUCTION DRIVE CLUTCHES, W475-74, W475-90 USED FOR MANY GASOLINE APPLICATIONS WITH SMALL PINIONS	MITSUBISHI  W485-112 MITSUBISHI SOLENOID STRIKER PLATE DODGE FORD JEEP MAZDA MITSUBISHI MOTOR PLYMOUTH 16519 16708 16720 16742 16866 16922 16938 17185 17786 17798 M1T70485 M1T79483 M1T95681 M2T53085 M2T53086 M3T22381 M3T22781 M3T24486 M3T25885 30mm x 18mm x 11mm x 3mm THICK , 9.2mm ID COPPER, DESIGNED FOR "R" TERMINAL CAPS, USED ON SOLENOIDS: W455-17, W455-32. SOLENOID CAPS W465-11, W465-23, W465-31	MITSUBISHI  W485-119 MITSUBISHI RUBBER SOLENOID GASKET ALLIS-CHALMERS AMC AUDI BLUE BIRD CASE CATERPILLAR 66-83400 16514 16519 16584 16708 16720 16728 16742 16774 16775 16780 16793 16794 M0T60081ZC M1T50071 M1T50471 M1T60281 M1T70482 M1T70485 M1T71081 M1T71381 M1T71581 44.4mm OD, 1.3mm THICK FITS MOST MITSUBISHI CRIMP CAP SOLENOIDS
MITSUBISHI  W485-101 MITSUBISHI SOLENOID SPACER AUDI CASE CATERPILLAR CLARK DODGE FORD 16514 16584 16732 16780 16816 16859 16875 16935 16982 17097 17110 17141 M1T50071 M1T50471 M2T23081 M2T23685 M2T50181 M2T50281 M2T50285 M2T50381 M2T52071 28mm ID x 50mm OD x 1mm THICK . NOTE USED TO CONTROL DRIVE THROW DISTANCE TO APROX 1-1.5mm BEFORE HITTING STOP COLLAR	HITACHI MITSUBA MITSUBISHI NIPPONDENSO  W485-115 HITACHI SOLENOID LOCKING WASHER ACURA ALLIS-CHALMERS AMC AUDI BLUE BIRD BOBCAT 16211 16215 16218 16245 16468 16500 16514 16519 16520 16522 16527 16584 028000-2000 028000-2240 028000-4210 028000-6520 028000-6650 028000-6810 028000-7131 028000-7172 028000-7330 8mm ID USED FOR LOCKING CONTACT STUDS INTO PLACE ON SOLENOID STUDS, JUST FLATTEN IN PLACE, ALTERNATE W480-83	MITSUBISHI  W485-120 MITSUBISHI SOLENOID CONTACT GASKET ALLIS-CHALMERS AMC BLUE BIRD CASE CATERPILLAR CHEVROLET 66-83401 16514 16569 16584 16671 16717 16720 16728 16742 16774 16775 16791 16793 M0T60081ZC M1T50471 M1T60281 M1T60381 M1T70281 M1T70283 M1T70381 M1T70481 M1T70482 8mm ID x 10.5mm x 12.3mm, 0.9mm THICK USED IN SOLENOIDS: W455-53, W455-55, W455-56, W455-59, W455-66, W455-72, W455-73.
MITSUBISHI  W485-108 MITSUBISHI SOLENOID MOBILE CONTACT DODGE MAZDA MITSUBISHI MOTOR NISSAN PLYMOUTH 66-83700 16210 16268 16495 16500 16519 16522 16524 16581 16588 18097 M3T10371 M3T10372 M3T11272 M3T12572 M3T15073 M3T15075 M3T15772 M3T26081 M3T26181 35.4mm CONTACT HEIGHT EARLY BOLT ON CAP STYLE, USED WITH SOLENOID CAP W465-09	MITSUBISHI  W485-116 MITSUBISHI SOLENOID MOBILE CONTACT BUICK CADILLAC CHEVROLET FORD GM GMC 03926 66-83702 16853 16869 16871 17036 17037 M2T57271 M2T60371 M3T90071 M3T90072 M4T66073 M4T66074 M4T66173 W455-37 W455-38 42.5mm CONTACT HEIGHT, 16mm x 30mm FITS SOLENOIDS W455-37, W455-38, W455-42, REPLACEMENT CONTACT PLATE W485-139	MITSUBISHI  W485-124 MITSUBISHI SOLENOID MOBILE CONTACT DODGE MAZDA MITSUBISHI MOTOR 16922 16938 17185 M1T70485 M3T30881 M3T41285 W455-32 W455-65 25.5mm CONTACT HEIGHT, 18 x 30mm CONTACT FOR "R" TERMINAL STYLE CAP, CONTACT DISK W485-112, SIMILAR TO W485-81

MITSUBISHI  W485-137 MITSUBISHI SHIFT LEVER SUPPORT <table><tr><td>BOBCAT</td><td>DODGE</td><td>FORD</td></tr><tr><td>KUBOTA</td><td>MAZDA</td><td>MELROE</td></tr></table> 55-83400 <table><tr><td>16203</td><td>16209</td><td>16210</td><td>16500</td><td>16514</td><td>16519</td></tr><tr><td>16520</td><td>16522</td><td>16742</td><td>16805</td><td>17332</td><td>17577</td></tr><tr><td>M3T10071</td><td>M3T10072</td><td>M3T10172</td><td></td><td></td><td></td></tr><tr><td>M3T10272</td><td>M3T10371</td><td>M3T10372</td><td></td><td></td><td></td></tr><tr><td>M3T10672</td><td>M3T11272</td><td>M3T12572</td><td></td><td></td><td></td></tr></table>PLASTIC, SINGLE PIECE DIRECT DRIVE STARTERS. SEE SHIFT LEVER W485-44	BOBCAT	DODGE	FORD	KUBOTA	MAZDA	MELROE	16203	16209	16210	16500	16514	16519	16520	16522	16742	16805	17332	17577	M3T10071	M3T10072	M3T10172				M3T10272	M3T10371	M3T10372				M3T10672	M3T11272	M3T12572				MITSUBISHI  W485-141 MITSUBISHI PLANETARY GEAR SEAL <table><tr><td>AMC</td><td>CHEVROLET</td><td>CHRYSLER</td></tr><tr><td>CLARK</td><td>DODGE</td><td>EAGLE</td></tr></table> 180-48003 71-83100 M578C24601 <table><tr><td>16874</td><td>16888</td><td>16889</td><td>16900</td><td>16930</td><td>16931</td></tr><tr><td>16932</td><td>16933</td><td>16939</td><td>16998</td><td>17006</td><td>17046</td></tr><tr><td>M0T92081ZC</td><td>M1T60081</td><td>M1T60281</td><td></td><td></td><td></td></tr><tr><td>M1T60285</td><td>M1T60381</td><td>M1T64285</td><td></td><td></td><td></td></tr><tr><td>M1T68081ZC</td><td>M1T68681ZC</td><td>M1T68781ZC</td><td></td><td></td><td></td></tr></table>RUBBER USED ON GEAR TRACK W485-35	AMC	CHEVROLET	CHRYSLER	CLARK	DODGE	EAGLE	16874	16888	16889	16900	16930	16931	16932	16933	16939	16998	17006	17046	M0T92081ZC	M1T60081	M1T60281				M1T60285	M1T60381	M1T64285				M1T68081ZC	M1T68681ZC	M1T68781ZC				MITSUBISHI  W485-166 MITSUBISHI GEAR TRACK <table><tr><td>CHEVROLET</td><td>CHRYSLER</td><td>DODGE</td></tr><tr><td>FORD</td><td>HYSTER</td><td>HYUNDAI</td></tr></table> 222-48045 76-83819 M135X01471 M135X01571 <table><tr><td>17592</td><td>17683</td><td>17685</td><td>17688</td><td>17691</td><td>17717</td></tr><tr><td>17718</td><td>17734</td><td>17738</td><td>17740</td><td>17761</td><td>17762</td></tr><tr><td>M0T60081ZC</td><td>M0T60082</td><td>M0T60181</td><td></td><td></td><td></td></tr><tr><td>M0T60186ZC</td><td>M0T60187ZC</td><td>M0T60481</td><td></td><td></td><td></td></tr><tr><td>M0T60581</td><td>M0T60781</td><td>M0T65381</td><td></td><td></td><td></td></tr></table>42TH, 17.5mm ID, 63.8mm OD LATE M0T8 SERIES, NOTICE THRU BOLT SLOT, W485-168 SEAL	CHEVROLET	CHRYSLER	DODGE	FORD	HYSTER	HYUNDAI	17592	17683	17685	17688	17691	17717	17718	17734	17738	17740	17761	17762	M0T60081ZC	M0T60082	M0T60181				M0T60186ZC	M0T60187ZC	M0T60481				M0T60581	M0T60781	M0T65381			
BOBCAT	DODGE	FORD																																																																																																												
KUBOTA	MAZDA	MELROE																																																																																																												
16203	16209	16210	16500	16514	16519																																																																																																									
16520	16522	16742	16805	17332	17577																																																																																																									
M3T10071	M3T10072	M3T10172																																																																																																												
M3T10272	M3T10371	M3T10372																																																																																																												
M3T10672	M3T11272	M3T12572																																																																																																												
AMC	CHEVROLET	CHRYSLER																																																																																																												
CLARK	DODGE	EAGLE																																																																																																												
16874	16888	16889	16900	16930	16931																																																																																																									
16932	16933	16939	16998	17006	17046																																																																																																									
M0T92081ZC	M1T60081	M1T60281																																																																																																												
M1T60285	M1T60381	M1T64285																																																																																																												
M1T68081ZC	M1T68681ZC	M1T68781ZC																																																																																																												
CHEVROLET	CHRYSLER	DODGE																																																																																																												
FORD	HYSTER	HYUNDAI																																																																																																												
17592	17683	17685	17688	17691	17717																																																																																																									
17718	17734	17738	17740	17761	17762																																																																																																									
M0T60081ZC	M0T60082	M0T60181																																																																																																												
M0T60186ZC	M0T60187ZC	M0T60481																																																																																																												
M0T60581	M0T60781	M0T65381																																																																																																												
MITSUBISHI  W485-138 MITSUBISHI DE HOUSING COVER FORD 76-83816 17037 <table><tr><td>M3T90071</td><td>M3T90072</td></tr></table> 24mm OD STEEL	M3T90071	M3T90072	MITSUBISHI  W485-156 MITSUBISHI TERMINAL POST NISSAN SUBARU 66-83354 17478 17718 <table><tr><td>M0T81381</td><td>M1T73881ZC</td><td>W455-92</td></tr></table> 8mm ID x 8mm x 1.25 POST SIMILAR TO THE HITACHI VERSION, CAN USE WITH MINIMAL MODIFICATION	M0T81381	M1T73881ZC	W455-92	MITSUBISHI  W485-167 MITSUBISHI GEAR TRACK ASSEMBLY <table><tr><td>CHEVROLET</td><td>CHRYSLER</td><td>DODGE</td></tr><tr><td>INFINITI</td><td>JEEP</td><td>KUBOTA</td></tr></table> 76-83820 M135X02071 <table><tr><td>17479</td><td>17722</td><td>17723</td><td>17726</td><td>17749</td><td>17754</td></tr><tr><td>17773</td><td>17783</td><td>17796</td><td>17832</td><td>17835</td><td>17836</td></tr><tr><td>M0T92081ZC</td><td>M1T68081ZC</td><td>M1T68681ZC</td><td></td><td></td><td></td></tr><tr><td>M1T68781ZC</td><td>M1T84181</td><td>M1T84281</td><td></td><td></td><td></td></tr><tr><td>M1T84381ZC</td><td>M1T84382ZC</td><td>M1T84481</td><td></td><td></td><td></td></tr></table>42TH, 17.5mm ID, 65mm OD LATE M1T8 SERIES, NOTICE THRU BOLT SLOT, ALSO SEE W485-166	CHEVROLET	CHRYSLER	DODGE	INFINITI	JEEP	KUBOTA	17479	17722	17723	17726	17749	17754	17773	17783	17796	17832	17835	17836	M0T92081ZC	M1T68081ZC	M1T68681ZC				M1T68781ZC	M1T84181	M1T84281				M1T84381ZC	M1T84382ZC	M1T84481																																																																						
M3T90071	M3T90072																																																																																																													
M0T81381	M1T73881ZC	W455-92																																																																																																												
CHEVROLET	CHRYSLER	DODGE																																																																																																												
INFINITI	JEEP	KUBOTA																																																																																																												
17479	17722	17723	17726	17749	17754																																																																																																									
17773	17783	17796	17832	17835	17836																																																																																																									
M0T92081ZC	M1T68081ZC	M1T68681ZC																																																																																																												
M1T68781ZC	M1T84181	M1T84281																																																																																																												
M1T84381ZC	M1T84382ZC	M1T84481																																																																																																												
MANDO MITSUBISHI VALEO  W485-139 MITSUBISHI SOLENOID STRIKER PLATE <table><tr><td>ALLIS-CHALMERS</td><td>AMC</td><td>AUDI</td></tr><tr><td>BLUE BIRD</td><td>BUICK</td><td>CADILLAC</td></tr></table> <table><tr><td>16514</td><td>16520</td><td>16522</td><td>16527</td><td>16569</td><td>16584</td></tr><tr><td>16671</td><td>16717</td><td>16720</td><td>16728</td><td>16742</td><td>16744</td></tr><tr><td>M1T50071</td><td>M1T50471</td><td>M1T60281</td><td></td><td></td><td></td></tr><tr><td>M1T70281</td><td>M1T70283</td><td>M1T70381</td><td></td><td></td><td></td></tr><tr><td>M1T70481</td><td>M1T70482</td><td>M1T71081</td><td></td><td></td><td></td></tr></table>30mm x 16mm x 11mm x 3mm THICK, 9.2mm ID COPPER, DESIGNED FOR THE COMMON NON-"R" TERMINAL CRIMP STYLE SOLENOIDS FOR MANDO, MITSUBISHI AND SOME VALEO. ALTERNATE W485-112	ALLIS-CHALMERS	AMC	AUDI	BLUE BIRD	BUICK	CADILLAC	16514	16520	16522	16527	16569	16584	16671	16717	16720	16728	16742	16744	M1T50071	M1T50471	M1T60281				M1T70281	M1T70283	M1T70381				M1T70481	M1T70482	M1T71081				MITSUBISHI  W485-165 MITSUBISHI GEAR TRACK ASSEMBLY <table><tr><td>CHEVROLET</td><td>CHRYSLER</td><td>CLARK</td></tr><tr><td>DODGE</td><td>EAGLE</td><td>FORD</td></tr></table> 76-83818 M135X01171 <table><tr><td>16874</td><td>16889</td><td>16932</td><td>16933</td><td>17006</td><td>17131</td></tr><tr><td>17132</td><td>17133</td><td>17142</td><td>17151</td><td>17176</td><td>17180</td></tr><tr><td>M0T71981</td><td>M1T60081</td><td>M1T60281</td><td></td><td></td><td></td></tr><tr><td>M1T60285</td><td>M1T60381</td><td>M1T64285</td><td></td><td></td><td></td></tr><tr><td>M1T70283</td><td>M1T70685</td><td>M1T70685A</td><td></td><td></td><td></td></tr></table>43TH, 19mm ID, 65mm OD LATE VERSION OF W485-35	CHEVROLET	CHRYSLER	CLARK	DODGE	EAGLE	FORD	16874	16889	16932	16933	17006	17131	17132	17133	17142	17151	17176	17180	M0T71981	M1T60081	M1T60281				M1T60285	M1T60381	M1T64285				M1T70283	M1T70685	M1T70685A				MITSUBISHI  W485-168 MITSUBISHI PLANETARY GEAR SEAL <table><tr><td>CHEVROLET</td><td>CHRYSLER</td><td>DODGE</td></tr><tr><td>EAGLE</td><td>FORD</td><td>HYSTER</td></tr></table> 71-83105 M578X26871 <table><tr><td>17214</td><td>17450</td><td>17592</td><td>17683</td><td>17685</td><td>17688</td></tr><tr><td>17691</td><td>17717</td><td>17718</td><td>17734</td><td>17738</td><td>17740</td></tr><tr><td>M0T60081ZC</td><td>M0T60082</td><td>M0T60181</td><td></td><td></td><td></td></tr><tr><td>M0T60186ZC</td><td>M0T60187ZC</td><td>M0T60481</td><td></td><td></td><td></td></tr><tr><td>M0T60581</td><td>M0T60781</td><td>M0T65381</td><td></td><td></td><td></td></tr></table>63.8mm OD, 57mm OD OVER THE STATIONARY GEAR PMGR, SHOWN AS INSTALLED ON THE STATIONARY GEAR W485-166	CHEVROLET	CHRYSLER	DODGE	EAGLE	FORD	HYSTER	17214	17450	17592	17683	17685	17688	17691	17717	17718	17734	17738	17740	M0T60081ZC	M0T60082	M0T60181				M0T60186ZC	M0T60187ZC	M0T60481				M0T60581	M0T60781	M0T65381			
ALLIS-CHALMERS	AMC	AUDI																																																																																																												
BLUE BIRD	BUICK	CADILLAC																																																																																																												
16514	16520	16522	16527	16569	16584																																																																																																									
16671	16717	16720	16728	16742	16744																																																																																																									
M1T50071	M1T50471	M1T60281																																																																																																												
M1T70281	M1T70283	M1T70381																																																																																																												
M1T70481	M1T70482	M1T71081																																																																																																												
CHEVROLET	CHRYSLER	CLARK																																																																																																												
DODGE	EAGLE	FORD																																																																																																												
16874	16889	16932	16933	17006	17131																																																																																																									
17132	17133	17142	17151	17176	17180																																																																																																									
M0T71981	M1T60081	M1T60281																																																																																																												
M1T60285	M1T60381	M1T64285																																																																																																												
M1T70283	M1T70685	M1T70685A																																																																																																												
CHEVROLET	CHRYSLER	DODGE																																																																																																												
EAGLE	FORD	HYSTER																																																																																																												
17214	17450	17592	17683	17685	17688																																																																																																									
17691	17717	17718	17734	17738	17740																																																																																																									
M0T60081ZC	M0T60082	M0T60181																																																																																																												
M0T60186ZC	M0T60187ZC	M0T60481																																																																																																												
M0T60581	M0T60781	M0T65381																																																																																																												

HITACHI MITSUBISHI NIPPONDENSO  W485-21 NIPPONDENSO PAPER WASHER GRAVELY JOHN DEERE KAWASAKI KUBOTA 85-7400 18266 228000-7990 228000-7991 W455-00 W455-02 W455-03 W455-09 W455-10 W455-12 W455-13 8.3mm ID x 12.7mm OD x 0.8mm THICK SPACER/SEAL, FITS MOST SOLENOID CAP POSTS WITH 8mm POSTS, ALSO FITS COMMON BOSCH, SEE W480-11	MITSUBISHI  W485-52 MITSUBISHI SOLENOID MOBILE CONTACT ALLIS-CHALMERS AUDI CASE CATERPILLAR CHRYSLER CLARK 03925 66-83703 16514 16520 16522 16527 16584 16671 16717 16720 16728 16742 16775 16780 M1T50071 M1T50471 M2T23181 M2T50181 M2T50281 M2T50285 M2T50371 M2T50381 M2T50581 41mm CONTACT HEIGHT LONG BODY SOLENOID, USED IN SOLENOID W455-04, W455-11, W455-15, W455-39, FOR CONTACT PLATE USE W485-139	MITSUBISHI  W485-59 MITSUBISHI SOLENOID CONTACT STUD AUDI CASE CATERPILLAR CHRYSLER DODGE FORD 66-83351 16514 16527 16584 16671 16717 16720 16775 16780 16855 16856 16859 16866 M1T50071 M1T50471 M1T95681 M2T23181 M2T24181 M2T25581 M2T25981 M2T50181 M2T50281 8mm x 27mm, 34.8mm LENGTH, 10.5mm x 10.5mm x 6.3mm HEAD USED ON SOLENOID CAPS W465-04, W465-11, W465- 17, W465-22, W465-31, W465-40, METAL WASHER W485-115, CONTACT GASKET W485-120, FOR LOW
MANDO MITSUBISHI  W485-35 MITSUBISHI GEAR TRACK ASSEMBLY AMC CHEVROLET DODGE EAGLE FORD GEO 14548 222-48019 76-83810 M135C00171 M135X00771 16874 16888 16889 16900 16930 16931 16933 16939 16998 17006 17046 17131 M1T70281 M1T70381 M1T70481 M1T70482 M1T70483 M1T70485 M1T70686 M1T70781 M1T70881 43TH, 19mm ID, 65mm OD BLACK	MITSUBISHI  W485-54 MITSUBISHI STARTER BRUSH SPRING CHEVROLET CHRYSLER CLARK DODGE EAGLE FORD 156-48005 69-83701 M391C03301 16874 16888 16900 16930 16931 16932 16933 16939 16941 16998 17046 17131 M0T70381 M0T71681 M0T71981 M1T60081 M1T60381 M1T64285 M1T70281 M1T70283 M1T70381 CW TWIST PMGR AND DD STARTERS, SET WITH W485-56	MITSUBISHI  W485-71 MITSUBISHI STARTER DE HOUSING SEAL FORD 14587 180-48000 71-83500 E5PZ-11217-A S-1723 17037 M3T90071 M3T90072 USED WITH W485-72.
MITSUBISHI  W485-44 MITSUBISHI SHIFT LEVER FORK CHRYSLER DODGE MAZDA MITSUBISHI MOTOR NISSAN ONAN 355-48010 55-8303 M863D02271 16203 16209 16210 16500 16514 16519 16520 16522 16527 16742 16805 17332 M3T10071 M3T10072 M3T10172 M3T10272 M3T10371 M3T10372 M3T10672 M3T11272 M3T12572 22mm FOR OPENING SIMILAR TO W485-89	MITSUBISHI  W485-56 MITSUBISHI STARTER BRUSH SPRING CHEVROLET CHRYSLER CLARK DODGE EAGLE FORD 156-48004 69-83702 M391C03201 16874 16888 16900 16930 16931 16932 16933 16939 16941 16998 17046 17131 M0T70381 M0T71681 M0T71981 M1T60081 M1T60381 M1T64285 M1T70281 M1T70283 M1T70381 CCW TWIST PMGR AND DD STARTERS, SET WITH W485-54	MITSUBISHI  W485-72 MITSUBISHI FIELD COIL HOUSING SEAL SET FORD 14588 180-48001 71-83300 79-83300 17037 M3T90071 M3T90072 2 SEAL SET, USED WITH W485-71.

MITSUBISHI  W485-76 MITSUBISHI STARTER BRUSH SPRING AUDI BUICK OLDSMOBILE 16780 16868 M1T50071 M1T50371 OSGR	MITSUBISHI  W485-88 MITSUBISHI SHIFT LEVER FORK BLUE BIRD CHEVROLET CLARK DODGE EAGLE EATON 355-48018 55-8309 M864X09571 16514 16569 16774 16793 16794 16798 16805 16858 16922 16924 16938 16940 0-001-107-070 191-1682-04 M3T10476D M3T21882D M3T24482H M3T24483 M3T24485 M3T27686H M3T30581 22.4mm FORK OPENING, 82mm OAL M2T, M3T STARTERS	MITSUBISHI UNIVERSAL  WAS1.725B STARTER DRIVE CAP ONAN 17332 MEA10-7 W475-29 43.8mm ID, 40.1mm HOLE, 17.5mm L (1.725", 1.580", 0.687") USED ON W475-29 DRIVE
MITSUBISHI  W485-81 MITSUBISHI SOLENOID MOBILE CONTACT AMC BLUE BIRD CHEVROLET DODGE EAGLE FORD 03924 248-48000 66-83701 16514 16569 16774 16775 16791 16798 16858 16874 16888 16889 16922 16933 M1T60281 M1T70281 M1T70283 M1T70381 M1T70481 M1T70482 M1T71081 M1T71281 M1T71281B 25.5mm CONTACT HEIGHT, 16mm x 30mm CONTACT SURFACE SHORT, FOR CONTACT PLATE USE W485-139, NOTICE W485-124	MITSUBISHI  W485-89 MITSUBISHI SHIFT LEVER FORK ALLIS-CHALMERS CLARK DODGE HYSTER MAZDA MITSUBISHI MOTOR 355-48011 55-8307 M864X07071 16268 16514 16527 16708 16728 16742 16774 16793 16794 16795 16796 16858 M3T10473 M3T10475 M3T10476 M3T11174 M3T20181 M3T20381 M3T20781 M3T21281 M3T21282 23mm FORK OPENING x 81mm OAL SIMILAR AND NOT INTERCHANGEABLE WITH W485-44	MITSUBISHI UNIVERSAL  WAS1.725C STARTER DRIVE CAP HYSTER MAZDA 54-83707 16795 16856 M3T10473 M3T10475 M3T10476 M3T36081 M3T36481 W475-18 W475-24 43.8mm ID, 36.1mm HOLE, 17.5mm L (1.725", 1.422", 0.687") FITS W475-18, W475-24 DRIVES
MITSUBISHI  W485-86 MITSUBISHI SOLENOID CONTACT STUD ALLIS-CHALMERS AMC BLUE BIRD CHEVROLET CHRYSLER CLARK 66-83350 16514 16569 16774 16775 16791 16792 16793 16798 16858 16859 16874 16888 M0T60081ZC M1T60281 M1T60381 M1T70281 M1T70283 M1T70381 M1T70481 M1T70482 M1T70485 8mm x 24mm, 5mm HEAD THICKNESS, 10.6mm SQUARE LATE STYLE CAP WITH SHALLOW CONTACTS, FITS SOLENOID CAPS: W465-20, W465-21, W465-22, W465-23, W465-25, W465-30, W465-33, W465-37, W465-39,	MITSUBISHI UNIVERSAL  WAS1.725 STARTER DRIVE CAP CHEVROLET DODGE EAGLE FORD GEO MAZDA 54-83703 16514 16527 16569 16579 16708 16728 16742 16859 16922 16938 16940 16966 M191T27571 M2T10071 M2T20181 M2T20182 M3T10172 M3T25781 M3T25782 M3T25783 M3T25882 43.8mm ID, 32.4mm HOLE, 17.5mm L (1.725", 1.275", 0.687") FITS W475-12, W475-31 DRIVES, FOR SPRINGS USE WAS10	BOSCH MITSUBISHI UNIVERSAL  WAS1.815 STARTER DRIVE CAP ALFA ROMEO BMW FIAT MERCEDES MERCURY MITSUBISHI MOTOR 54-91700 16299 16353 16462 16531 16539 16550 16557 16593 16616 16619 16683 17236 0-001-108-054 0-001-108-065 0-001-108-115 0-001-108-145 0-001-208-211 0-001-208-405 0-001-211-207 0-001-211-242 0-001-311-100 46.0mm ID, 31.8mm HOLE, 18.8mm L (1.815", 1.250", 0.740") FOR COMMON 6 ROLLER DRIVES: W470-20, W470-30, W470-36

HITACHI MITSUBISHI UNIVERSAL  WAS10 STARTER DRIVE SPRING CHEVROLET FORD DODGE GEO EAGLE HYSTER 16194 16246 16514 16527 16569 16579 16708 16728 16742 16795 16856 16859 2114-55100 M0T20672ZC M191T27571 M2T10071 M2T20181 M2T20182 M3T10172 M3T10473 M3T10475 4.5 x 8.9 x 11.7mm L, (.178" x .354" x .460" L) FOR MOST COMMON SMALL MITSUBISHI DRIVES	MITSUBISHI UNIVERSAL  WAS2.535L STARTER DRIVE CAP BUICK OLDSMOBILE 16868 M1T50371 64.4mm ID, 47.9mm HOLE, 4.4mm L (2.535", 1.885", 0.174")	HITACHI MITSUBISHI UNIVERSAL  WAS238-540 STARTER DRIVE ROLLER AUDI CATERPILLAR BUICK CHRYSLER CASE CLARK 16584 16720 16780 16815 16817 16866 16868 16875 16947 17097 17110 17141 M191T70771 M191T70971 M1T50071 M1T50371 M1T50471 M1T60381 M2T25281 M2T25282 M2T25581 6.05mm OD, 13.72mm L, (.238" x .540" L) SPRINGS WAS70-4, WAS40
MITSUBISHI UNIVERSAL  WAS16815 STARTER DRIVE CAP FORD NISSAN INFINITI MAZDA 16815 17179 17471 17544 M2T25281 M2T25282 M2T25581 M2T25681 M3T26685 54.0mm ID, 50.7mm HOLE, 7.6mm L (2.125", 1.994", 0.300") FOR SPRINGS USE WAS40, ROLLERS WAS238-540 (5) EACH	MITSUBISHI UNIVERSAL  WAS2.535S STARTER DRIVE CAP CATERPILLAR MAZDA FORD MITSUBISHI MOTOR HYSTER ONAN 16744 16799 17008 18164 18171 18173 18174 19605 M2T54271 M2T54371 M2T54372 M2T54571 M2T54572 M2T56071 M2T60071 M2T60072 M2T60073 64.4mm ID, 34.3mm HOLE, 4.4mm L (2.535", 1.350", 0.174") FITS DRIVE W475-79 16744	MITSUBISHI NIPPONDENSO UNIVERSAL  WAS302-510 STARTER DRIVE ROLLER ACURA BLUE BIRD ALLIS-CHALMERS BOBCAT BARKO CASE 028306-0070 54-82500 16248 16251 16578 16586 16600 16612 16614 16650 16651 16656 16658 16674 023800-5380 028000-4010 028000-4240 028000-4250 028000-4320 028000-4340 028000-4510 028000-4540 028000-4551 7.67mm OD, 12.95mm L, (.302" x .510" L) 1.1KW, 1.2KW, 1.3KW, 1.4KW, 1.9KW, 2.5KW. MOST COMMON GEAR REDUCTION DRIVE CLUTCH, SPRINGS WAS102, WAS38, WAS40
MITSUBISHI UNIVERSAL  WAS2.125 STARTER DRIVE CAP AUDI CHRYSLER CASE CLARK CATERPILLAR DODGE 16584 16720 16780 16866 16875 16935 16947 17097 17110 17141 17172 17173 M191T70771 M191T70971 M1T50071 M1T50471 M2T50181 M2T50281 M2T50285 M2T50371 M2T50381 54.0mm ID, 21.3mm HOLE, 4.6mm L (2.125", 0.837", 0.180") FITS W475-74, W475-90 DRIVES, SPRINGS WAS40, WAS70-4, ROLLERS WAS238-540.	BOSCH MITSUBISHI UNIVERSAL  WAS238-355 STARTER DRIVE ROLLER ALFA ROMEO DODGE CHEVROLET EAGLE CLARK FORD 16194 16246 16339 16450 16514 16527 16551 16569 16579 16708 16728 16742 0-001-211-001 0-001-211-004 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 M0T20672ZC M191T27571 M2T10071 6.05mm OD, 9.02mm L (.238" x .355" L) FITS DRIVES: W470-28, W475-12, W475-18	MITSUBISHI NIPPONDENSO UNIVERSAL  WAS306-510 STARTER DRIVE ROLLER 7.77mm OD, 12.95mm L (.306" x .510" L) NIPPONDENSO OSGR STARTERS, FOR WORN DRIVE RACES AND A TIGHTER FIT THAN WAS302-510

HITACHI
MITSUBA
MITSUBISHI
NIPPONDENSO
UNIVERSAL



WAS70-4
STARTER DRIVE SPRING

ACURA AUDI CHEVROLET
CHRYSLER DODGE HONDA

54-81600

16540	16584	16611	16694	16720	16740
16780	16803	16806	16807	16811	16814
028301-0010	428000-0870	428000-1520			
M1T50071	M1T50471	M2T50181			
M2T52071	M2T52081	M2T52172			
4.14mm x 11.33mm x 12.7mm L, (.163" x .446" x .500" L)					

GEAR REDUCTION DRIVE CLUTCHES, W475-74, W475-90 USED FOR MANY GASOLINE APPLICATIONS WITH SMALL PINIONS



W485-02
NIPPONDENSO TERMINAL BOOT

ACURA ALLIS-CHALMERS BOBCAT
CADILLAC CARRIER CASE

028062-5060	028062-5740	028062-5960
028062-6170	028062-6180	028062-6530
16248	16251	16586
16657	16676	16600
		16736
028000-3600	028000-4010	028000-4320
028000-4340	028000-4540	028000-4940
028000-4990	028000-5100	028000-5140
RUBBER		

(LEFT) - BLUE COLOR



W485-05
NIPPONDENSO TERMINAL BLOCK

CATERPILLAR HONDA HYSTER
TOYOTA YALE

053480-0081	14509	248-52048
76-82551	S-5235	
16248	16251	16578
		16760
		17100
		17119
028000-4000	028000-4010	028000-4020
028000-4240	028000-4250	028000-4551
028000-4940	028000-5820	028000-6620
4mm ID THREADS		

"R" TERMINAL, USED WITH SPRING CONTACT W485-15 AND SCREW W115-81



W485-00
NIPPONDENSO INSULATED TERMINAL BLOCK

CARRIER CHRYSLER DODGE
KUBOTA PLYMOUTH SUBARU

14503	76-82550	S-5233
16248	16578	16586
16696	16730	16650
		16674
		16676
		17027
		17029
028000-3600	028000-4000	028000-4020
028000-4240	028000-4250	028000-4320
028000-4340	028000-4510	028000-4540
1/4" SPADE, BAKELITE		

"S" TERMINAL, LOW PROFILE EARLY OSGR STARTERS, ALTERNATE HIGH PROFILE USE W485-14



W485-03
NIPPONDENSO TERMINAL BOOT

ACURA ALLIS-CHALMERS CARRIER
CASE CATERPILLAR CHEVROLET

028062-5390	028062-6190	028062-6200
028062-6240	028062-6500	14502
16578	16674	16737
16825	16828	16739
		16831
028000-4510	028000-5820	028000-5900
028000-5910	028000-6350	028000-7000
028000-7550	028000-7560	028000-7740
RUBBER		

(RIGHT) - GRAY COLOR

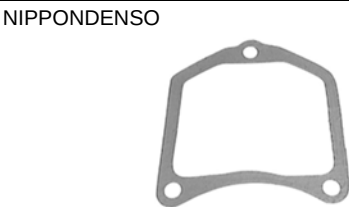


W485-06
NIPPONDENSO TERMINAL POST INSULATOR

CHRYSLER DODGE HONDA
JOHN DEERE KUBOTA PLYMOUTH

72-82400					
16248	16251	16578	16586	16600	16645
16647	16657	16674	16676	16696	16730
028000-4010	028000-4020	028000-4201			
028000-4320	028000-4340	028000-4510			
028000-4551	028000-4730	028000-4940			
12mm - 15/32" ID					

LOW PROFILE, OSGR STARTERS, ALTERNATE W485-47



W485-01
NIPPONDENSO SOLENOID GASKET

ALLIS-CHALMERS CARRIER CATERPILLAR
CHRYSLER DODGE FORD

053404-0210	66-82400				
16248	16251	16578	16586	16600	16645
16647	16650	16657	16674	16676	16696
028000-3600	028000-4000	028000-4010			
028000-4020	028000-4201	028000-4240			
028000-4250	028000-4320	028000-4340			

PAPER GASKET FOR EARLY OSGR SOLENOIDS, FOR RUBBER STYLE SEE W485-58



W485-04
NIPPONDENSO TERMINAL BLOCK

CATERPILLAR CHEVROLET GEO
GM GMC HONDA

053480-0090	14508	248-52033
76-82552	S-5237	
16251	16586	16600
16822	16878	17101
		17119
028000-3600	028000-4010	028000-4551
028000-5140	028000-5240	028000-6040
028000-6620	028000-6710	028000-7000
4mm ID THREAD		

"S" TERMINAL, OSGR 1.0-1.6KW



W485-07
NIPPONDENSO TERMINAL POST INSULATOR

TOYOTA

72-82402	S-5228				
16248	16578	16586	16760		
028000-3600	028000-4000	028000-4020			
028000-4240	028000-4250				

8mm ID

LOW PROFILE FOR EARLY OSGR 1.0, 1.4KW, NOTICE GUIDE LIP

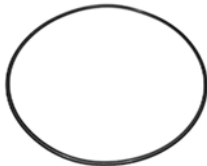
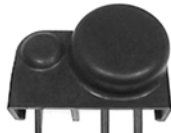
NIPPONDENSO  W485-09 NIPPONDENSO INSULATED TERMINAL BLOCK <table><tr><td>ACURA STERLING</td><td>DAIHATSU</td><td>HONDA</td></tr><tr><td>053480-7420 14533</td><td>053480-7710 248-52049</td><td>053480-7730 76-82561</td></tr><tr><td>16600 16736 16906 16913</td><td>16839 16884 17264 17273</td><td>16890 16905 17274 17285</td></tr><tr><td>028000-7700</td><td>028000-7990</td><td>028000-8000</td></tr><tr><td>028000-8670</td><td>028000-9320</td><td>128000-0130</td></tr><tr><td>128000-0280</td><td>128000-0300</td><td>128000-2190</td></tr></table> BAKELITE, 1/4" SPADE ROUND PLUG	ACURA STERLING	DAIHATSU	HONDA	053480-7420 14533	053480-7710 248-52049	053480-7730 76-82561	16600 16736 16906 16913	16839 16884 17264 17273	16890 16905 17274 17285	028000-7700	028000-7990	028000-8000	028000-8670	028000-9320	128000-0130	128000-0280	128000-0300	128000-2190	NIPPONDENSO  W485-102 NIPPONDENSO CONTACT STRIKER DISK <table><tr><td>ACURA CARRIER</td><td>BOBCAT CASE</td><td>CADILLAC CHEVROLET</td></tr><tr><td>248-52043</td><td>66-82650</td><td></td></tr><tr><td>16248 16251 16674 16676</td><td>16578 16586 16696 16730</td><td>16600 16612 16736 16737</td></tr><tr><td>028000-3600</td><td>028000-4000</td><td>028000-4010</td></tr><tr><td>028000-4020</td><td>028000-4240</td><td>028000-4250</td></tr><tr><td>028000-4320</td><td>028000-4340</td><td>028000-4510</td></tr></table> 17.6mm ID x 36.75mm OD x 2mm THICK USED TO REPAIR PLUNGER W485-34	ACURA CARRIER	BOBCAT CASE	CADILLAC CHEVROLET	248-52043	66-82650		16248 16251 16674 16676	16578 16586 16696 16730	16600 16612 16736 16737	028000-3600	028000-4000	028000-4010	028000-4020	028000-4240	028000-4250	028000-4320	028000-4340	028000-4510	NIPPONDENSO  W485-105 NIPPONDENSO BATTERY TERMINAL EXTENSION <table><tr><td>CHRYSLER EAGLE</td><td>DAEWOO FORD</td><td>DODGE PLYMOUTH</td></tr><tr><td>028008-5331</td><td>028008-5520</td><td>76-82566</td></tr><tr><td>17278 17379 17735 17809</td><td>17460 17562 18273 18274</td><td>17570 17571</td></tr><tr><td>128000-5350</td><td>228000-0360</td><td>228000-3010</td></tr><tr><td>228000-3013</td><td>228000-3020</td><td>228000-3030</td></tr><tr><td>228000-3033</td><td>228000-5061</td><td>228000-6112</td></tr></table> 8mm THREADED POST, OVAL HOLE USED WITH W485-106 TERMINAL INSULATOR AND W485-155 COVER	CHRYSLER EAGLE	DAEWOO FORD	DODGE PLYMOUTH	028008-5331	028008-5520	76-82566	17278 17379 17735 17809	17460 17562 18273 18274	17570 17571	128000-5350	228000-0360	228000-3010	228000-3013	228000-3020	228000-3030	228000-3033	228000-5061	228000-6112
ACURA STERLING	DAIHATSU	HONDA																																																						
053480-7420 14533	053480-7710 248-52049	053480-7730 76-82561																																																						
16600 16736 16906 16913	16839 16884 17264 17273	16890 16905 17274 17285																																																						
028000-7700	028000-7990	028000-8000																																																						
028000-8670	028000-9320	128000-0130																																																						
128000-0280	128000-0300	128000-2190																																																						
ACURA CARRIER	BOBCAT CASE	CADILLAC CHEVROLET																																																						
248-52043	66-82650																																																							
16248 16251 16674 16676	16578 16586 16696 16730	16600 16612 16736 16737																																																						
028000-3600	028000-4000	028000-4010																																																						
028000-4020	028000-4240	028000-4250																																																						
028000-4320	028000-4340	028000-4510																																																						
CHRYSLER EAGLE	DAEWOO FORD	DODGE PLYMOUTH																																																						
028008-5331	028008-5520	76-82566																																																						
17278 17379 17735 17809	17460 17562 18273 18274	17570 17571																																																						
128000-5350	228000-0360	228000-3010																																																						
228000-3013	228000-3020	228000-3030																																																						
228000-3033	228000-5061	228000-6112																																																						
NIPPONDENSO  W485-10 NIPPONDENSO SOLENOID CONTACT SET <table><tr><td>ACURA DAIHATSU</td><td>CHEVROLET DODGE</td><td>CHRYSLER FORD</td></tr><tr><td>03951 S-5231</td><td>248-52000</td><td>66-82750</td></tr><tr><td>16248 16578 16676 16696</td><td>16586 16612 16730 16737</td><td>16647 16674 16739 16760</td></tr><tr><td>028000-3600</td><td>028000-4000</td><td>028000-4020</td></tr><tr><td>028000-4240</td><td>028000-4250</td><td>028000-4340</td></tr><tr><td>028000-4510</td><td>028000-4730</td><td>028000-4940</td></tr></table> 8mm ID SET PACKAGED, (2) W485-11S SHORT CONTACTS, ALTERNATE W485-11S, W485-46	ACURA DAIHATSU	CHEVROLET DODGE	CHRYSLER FORD	03951 S-5231	248-52000	66-82750	16248 16578 16676 16696	16586 16612 16730 16737	16647 16674 16739 16760	028000-3600	028000-4000	028000-4020	028000-4240	028000-4250	028000-4340	028000-4510	028000-4730	028000-4940	NIPPONDENSO  W485-103 NIPPONDENSO CONTACT STRIKER DISK <table><tr><td>ACURA CATERPILLAR</td><td>CARRIER CHEVROLET</td><td>CASE CHRYSLER</td></tr><tr><td>66-82651</td><td></td><td></td></tr><tr><td>16831 17098 17240 17242</td><td>17170 17197 17256 17259</td><td>17204 17216 17263 17278</td></tr><tr><td>053400-9710</td><td>053400-9922</td><td>128000-7010</td></tr><tr><td>128000-7140</td><td>128000-7390</td><td>128000-7713</td></tr><tr><td>128000-7810</td><td>128000-8030</td><td>128000-8031</td></tr></table> 17.6mm ID x 34.8mm OD x 2mm THICK FOR LATE MODEL GEAR REDUCTION, USED TO REPAIR PLUNGER W485-63	ACURA CATERPILLAR	CARRIER CHEVROLET	CASE CHRYSLER	66-82651			16831 17098 17240 17242	17170 17197 17256 17259	17204 17216 17263 17278	053400-9710	053400-9922	128000-7010	128000-7140	128000-7390	128000-7713	128000-7810	128000-8030	128000-8031	NIPPONDENSO  W485-106 NIPPONDENSO BATTERY TERMINAL INSULATOR <table><tr><td>CHRYSLER EAGLE</td><td>DAEWOO FORD</td><td>DODGE PLYMOUTH</td></tr><tr><td>028033-5270</td><td>028033-5380</td><td>72-82104</td></tr><tr><td>17278 17379 17735 17809</td><td>17460 17562 18273 18274</td><td>17570 17571</td></tr><tr><td>128000-5350</td><td>228000-0360</td><td>228000-3010</td></tr><tr><td>228000-3013</td><td>228000-3020</td><td>228000-3030</td></tr><tr><td>228000-3033</td><td>228000-5061</td><td>228000-6112</td></tr></table> PLASTIC USED WITH W485-105 TERMINAL EXTENSION AND W485-155 COVER	CHRYSLER EAGLE	DAEWOO FORD	DODGE PLYMOUTH	028033-5270	028033-5380	72-82104	17278 17379 17735 17809	17460 17562 18273 18274	17570 17571	128000-5350	228000-0360	228000-3010	228000-3013	228000-3020	228000-3030	228000-3033	228000-5061	228000-6112
ACURA DAIHATSU	CHEVROLET DODGE	CHRYSLER FORD																																																						
03951 S-5231	248-52000	66-82750																																																						
16248 16578 16676 16696	16586 16612 16730 16737	16647 16674 16739 16760																																																						
028000-3600	028000-4000	028000-4020																																																						
028000-4240	028000-4250	028000-4340																																																						
028000-4510	028000-4730	028000-4940																																																						
ACURA CATERPILLAR	CARRIER CHEVROLET	CASE CHRYSLER																																																						
66-82651																																																								
16831 17098 17240 17242	17170 17197 17256 17259	17204 17216 17263 17278																																																						
053400-9710	053400-9922	128000-7010																																																						
128000-7140	128000-7390	128000-7713																																																						
128000-7810	128000-8030	128000-8031																																																						
CHRYSLER EAGLE	DAEWOO FORD	DODGE PLYMOUTH																																																						
028033-5270	028033-5380	72-82104																																																						
17278 17379 17735 17809	17460 17562 18273 18274	17570 17571																																																						
128000-5350	228000-0360	228000-3010																																																						
228000-3013	228000-3020	228000-3030																																																						
228000-3033	228000-5061	228000-6112																																																						
NIPPONDENSO  W485-100 NIPPONDENSO SOLENOID CONTACT <table><tr><td>ALLIS-CHALMERS CASE</td><td>BLUE BIRD CATERPILLAR</td><td>BOBCAT CHAMPION</td></tr><tr><td>248-52009</td><td>66-82767</td><td></td></tr><tr><td>16614 16651 17198 17250</td><td>16824 16830 17283 17286</td><td>16896 16967 17292 17302</td></tr><tr><td>028000-5000</td><td>028000-5300</td><td>028000-5530</td></tr><tr><td>028000-5550</td><td>028000-5560</td><td>028000-5570</td></tr><tr><td>028000-5860</td><td>028000-6200</td><td>028000-6560</td></tr></table> 10mm ID 2.5, 3.0, 4.0, 4.5, 5.5KW STARTERS, USED WITH W485-49 INSULATOR & W485-48 INSULATOR, ALTERNATE W485-13	ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHAMPION	248-52009	66-82767		16614 16651 17198 17250	16824 16830 17283 17286	16896 16967 17292 17302	028000-5000	028000-5300	028000-5530	028000-5550	028000-5560	028000-5570	028000-5860	028000-6200	028000-6560	NIPPONDENSO  W485-104 NIPPONDENSO IGNITION SWITCH TERMINAL <table><tr><td>CHRYSLER</td><td>DODGE</td><td>PLYMOUTH</td></tr><tr><td>028008-5270</td><td>463-52002</td><td>76-82567</td></tr><tr><td>17216</td><td></td><td></td></tr><tr><td>128000-8030</td><td>128000-8031</td><td></td></tr></table> 5mm x 8mm THREADED POST USED WITH W485-36 TERMINAL EXTENSION	CHRYSLER	DODGE	PLYMOUTH	028008-5270	463-52002	76-82567	17216			128000-8030	128000-8031		NIPPONDENSO  W485-107 NIPPONDENSO TERMINAL BOOT <table><tr><td>HONDA</td><td>KUBOTA</td></tr><tr><td>028062-5050</td><td>71-82321</td></tr><tr><td>16913 17028</td><td>18003</td></tr><tr><td>128000-0280 228000-0790</td><td>128000-5080 228000-0960</td></tr><tr><td></td><td>228000-0211</td></tr></table> RUBBER RIGHT, OPPOSITE OF W485-53	HONDA	KUBOTA	028062-5050	71-82321	16913 17028	18003	128000-0280 228000-0790	128000-5080 228000-0960		228000-0211														
ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHAMPION																																																						
248-52009	66-82767																																																							
16614 16651 17198 17250	16824 16830 17283 17286	16896 16967 17292 17302																																																						
028000-5000	028000-5300	028000-5530																																																						
028000-5550	028000-5560	028000-5570																																																						
028000-5860	028000-6200	028000-6560																																																						
CHRYSLER	DODGE	PLYMOUTH																																																						
028008-5270	463-52002	76-82567																																																						
17216																																																								
128000-8030	128000-8031																																																							
HONDA	KUBOTA																																																							
028062-5050	71-82321																																																							
16913 17028	18003																																																							
128000-0280 228000-0790	128000-5080 228000-0960																																																							
	228000-0211																																																							

NIPPONDENSO  W485-11 NIPPONDENSO SOLENOID CONTACT SET <table><tr><td>ACURA HARLEY DAVIDSON</td><td>CASE HONDA</td><td>CUMMINS JOHN DEERE</td><td></td><td></td><td></td></tr><tr><td>03950 S-5232</td><td>248-52001</td><td>66-82751</td><td></td><td></td><td></td></tr><tr><td>16248 16251 16761 16905</td><td>16600 16736 16906 16913</td><td>16759 16760 16990 17352</td><td></td><td></td><td></td></tr><tr><td>028000-4010 028000-4551 028000-5240 8mm ID</td><td>028000-4320 028000-4950 028000-6040</td><td>028000-4540 028000-5100 028000-6620</td><td></td><td></td><td></td></tr><tr><td colspan="6">SET, 1 LONG W485-11L & 1 SHORT W485-11S</td></tr></table>	ACURA HARLEY DAVIDSON	CASE HONDA	CUMMINS JOHN DEERE				03950 S-5232	248-52001	66-82751				16248 16251 16761 16905	16600 16736 16906 16913	16759 16760 16990 17352				028000-4010 028000-4551 028000-5240 8mm ID	028000-4320 028000-4950 028000-6040	028000-4540 028000-5100 028000-6620				SET, 1 LONG W485-11L & 1 SHORT W485-11S						NIPPONDENSO  W485-117 NIPPONDENSO TERMINAL BLOCK DODGE <table><tr><td>053480-7350 76-82568</td><td>14920</td><td>463-52003</td></tr><tr><td>17466 17549</td><td></td><td></td></tr><tr><td>128000-7810</td><td>228000-1800</td><td>228000-1801</td></tr></table> 8mm B+, 5mm "S" TERMINAL FOR 4mm TERMINAL USE W485-67	053480-7350 76-82568	14920	463-52003	17466 17549			128000-7810	228000-1800	228000-1801	NIPPONDENSO  W485-11S NIPPONDENSO SOLENOID CONTACT <table><tr><td>ACURA CADILLAC</td><td>ALLIS-CHALMERS CARRIER</td><td>BOBCAT CASE</td></tr><tr><td>03951S 66-82756</td><td>053513-0241 S-5231-B</td><td>248-52017 S-5292</td></tr><tr><td>16248 16251 16647 16650</td><td>16578 16586 16657 16674</td><td>16600 16612 16676 16696</td></tr><tr><td>028000-3600 028000-4020 028000-4320 8mm ID</td><td>028000-4000 028000-4240 028000-4340</td><td>028000-4010 028000-4250 028000-4510</td></tr><tr><td colspan="3">SHORT, ALTERNATE W485-10, W485-46, SET WITH W485-45, W485-46, W485-57, W485-64.</td></tr></table>	ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE	03951S 66-82756	053513-0241 S-5231-B	248-52017 S-5292	16248 16251 16647 16650	16578 16586 16657 16674	16600 16612 16676 16696	028000-3600 028000-4020 028000-4320 8mm ID	028000-4000 028000-4240 028000-4340	028000-4010 028000-4250 028000-4510	SHORT, ALTERNATE W485-10, W485-46, SET WITH W485-45, W485-46, W485-57, W485-64.		
ACURA HARLEY DAVIDSON	CASE HONDA	CUMMINS JOHN DEERE																																																						
03950 S-5232	248-52001	66-82751																																																						
16248 16251 16761 16905	16600 16736 16906 16913	16759 16760 16990 17352																																																						
028000-4010 028000-4551 028000-5240 8mm ID	028000-4320 028000-4950 028000-6040	028000-4540 028000-5100 028000-6620																																																						
SET, 1 LONG W485-11L & 1 SHORT W485-11S																																																								
053480-7350 76-82568	14920	463-52003																																																						
17466 17549																																																								
128000-7810	228000-1800	228000-1801																																																						
ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE																																																						
03951S 66-82756	053513-0241 S-5231-B	248-52017 S-5292																																																						
16248 16251 16647 16650	16578 16586 16657 16674	16600 16612 16676 16696																																																						
028000-3600 028000-4020 028000-4320 8mm ID	028000-4000 028000-4240 028000-4340	028000-4010 028000-4250 028000-4510																																																						
SHORT, ALTERNATE W485-10, W485-46, SET WITH W485-45, W485-46, W485-57, W485-64.																																																								
NIPPONDENSO  W485-111 NIPPONDENSO SOLENOID STRIKER PLATE <table><tr><td>BOBCAT CUSHMAN</td><td>CHEVROLET DAIHATSU</td><td>CHRYSLER DODGE</td></tr><tr><td>03978</td><td>66-82654</td><td></td></tr><tr><td>16218 16245 16880 16883</td><td>16468 16727 16971 16974</td><td>16766 16879 17000 17058</td></tr><tr><td>028000-6520 028000-7131 028000-7460 25.3mm x 12.4mm x 4mm THICK, 8mm ID</td><td>028000-6650 028000-7172 028000-7470</td><td>028000-6810 028000-7330 028000-7480</td></tr><tr><td colspan="3">USED ON SOLENOIDS: W455-28, W455-29, W455-30 & W455-52. *UPDATED TO USE WITH ALSO THE "R" TERMINAL CAPS ALSO, NOTICE TAB</td></tr></table>	BOBCAT CUSHMAN	CHEVROLET DAIHATSU	CHRYSLER DODGE	03978	66-82654		16218 16245 16880 16883	16468 16727 16971 16974	16766 16879 17000 17058	028000-6520 028000-7131 028000-7460 25.3mm x 12.4mm x 4mm THICK, 8mm ID	028000-6650 028000-7172 028000-7470	028000-6810 028000-7330 028000-7480	USED ON SOLENOIDS: W455-28, W455-29, W455-30 & W455-52. *UPDATED TO USE WITH ALSO THE "R" TERMINAL CAPS ALSO, NOTICE TAB			NIPPONDENSO  W485-118 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CHEVROLET TOYOTA</td><td>GEO</td><td>LEXUS</td></tr><tr><td>053480-7510 76-82576</td><td>053480-7550</td><td>248-52058</td></tr><tr><td>17495 17519 17535 17536</td><td>17531 17532 17581 17666</td><td>17533 17534 17668 17687</td></tr><tr><td>228000-0820 228000-1100 228000-2570 BAKELITE</td><td>228000-0830 228000-1690 228000-2610</td><td>228000-0900 228000-2500 228000-2940</td></tr><tr><td colspan="3">SIMILAR TO W485-172, NOTICE CLIP, ALTERNATE W485-125</td></tr></table>	CHEVROLET TOYOTA	GEO	LEXUS	053480-7510 76-82576	053480-7550	248-52058	17495 17519 17535 17536	17531 17532 17581 17666	17533 17534 17668 17687	228000-0820 228000-1100 228000-2570 BAKELITE	228000-0830 228000-1690 228000-2610	228000-0900 228000-2500 228000-2940	SIMILAR TO W485-172, NOTICE CLIP, ALTERNATE W485-125			NIPPONDENSO  W485-12 NIPPONDENSO SOLENOID CONTACT SET <table><tr><td>BOBCAT FORD</td><td>CASE ISUZU</td><td>CLARK JOHN DEERE</td></tr><tr><td>028099-3170 248-52002</td><td>028099-3190 248-52013</td><td>03952 66-82752</td></tr><tr><td>16658 17301</td><td>17302 17304</td><td>17362 18138</td></tr><tr><td>028000-5490 028000-6561 028000-8402 10mm ID</td><td>028000-5880 028000-6640 028000-8403</td><td>028000-6560 028000-8400 028099-3170</td></tr><tr><td colspan="3">2.5KW OSGR, SET. USED WITH W485-48, W485-49, W485-50 INSULATORS</td></tr></table>	BOBCAT FORD	CASE ISUZU	CLARK JOHN DEERE	028099-3170 248-52002	028099-3190 248-52013	03952 66-82752	16658 17301	17302 17304	17362 18138	028000-5490 028000-6561 028000-8402 10mm ID	028000-5880 028000-6640 028000-8403	028000-6560 028000-8400 028099-3170	2.5KW OSGR, SET. USED WITH W485-48, W485-49, W485-50 INSULATORS											
BOBCAT CUSHMAN	CHEVROLET DAIHATSU	CHRYSLER DODGE																																																						
03978	66-82654																																																							
16218 16245 16880 16883	16468 16727 16971 16974	16766 16879 17000 17058																																																						
028000-6520 028000-7131 028000-7460 25.3mm x 12.4mm x 4mm THICK, 8mm ID	028000-6650 028000-7172 028000-7470	028000-6810 028000-7330 028000-7480																																																						
USED ON SOLENOIDS: W455-28, W455-29, W455-30 & W455-52. *UPDATED TO USE WITH ALSO THE "R" TERMINAL CAPS ALSO, NOTICE TAB																																																								
CHEVROLET TOYOTA	GEO	LEXUS																																																						
053480-7510 76-82576	053480-7550	248-52058																																																						
17495 17519 17535 17536	17531 17532 17581 17666	17533 17534 17668 17687																																																						
228000-0820 228000-1100 228000-2570 BAKELITE	228000-0830 228000-1690 228000-2610	228000-0900 228000-2500 228000-2940																																																						
SIMILAR TO W485-172, NOTICE CLIP, ALTERNATE W485-125																																																								
BOBCAT FORD	CASE ISUZU	CLARK JOHN DEERE																																																						
028099-3170 248-52002	028099-3190 248-52013	03952 66-82752																																																						
16658 17301	17302 17304	17362 18138																																																						
028000-5490 028000-6561 028000-8402 10mm ID	028000-5880 028000-6640 028000-8403	028000-6560 028000-8400 028099-3170																																																						
2.5KW OSGR, SET. USED WITH W485-48, W485-49, W485-50 INSULATORS																																																								
HITACHI MITSUBA MITSUBISHI NIPPONDENSO  W485-115 HITACHI SOLENOID LOCKING WASHER <table><tr><td>ACURA AUDI</td><td>ALLIS-CHALMERS BLUE BIRD</td><td>AMC BOBCAT</td></tr><tr><td>16211 16215 16514 16519</td><td>16218 16245 16520 16522</td><td>16468 16500 16527 16584</td></tr><tr><td>028000-2000 028000-6520 028000-7131 8mm ID</td><td>028000-2240 028000-6650 028000-7172</td><td>028000-4210 028000-6810 028000-7330</td></tr><tr><td colspan="3">USED FOR LOCKING CONTACT STUDS INTO PLACE ON SOLENOID STUDS, JUST FLATTEN IN PLACE, ALTERNATE W480-83</td></tr></table>	ACURA AUDI	ALLIS-CHALMERS BLUE BIRD	AMC BOBCAT	16211 16215 16514 16519	16218 16245 16520 16522	16468 16500 16527 16584	028000-2000 028000-6520 028000-7131 8mm ID	028000-2240 028000-6650 028000-7172	028000-4210 028000-6810 028000-7330	USED FOR LOCKING CONTACT STUDS INTO PLACE ON SOLENOID STUDS, JUST FLATTEN IN PLACE, ALTERNATE W480-83			NIPPONDENSO  W485-11L NIPPONDENSO SOLENOID CONTACT <table><tr><td>ACURA JOHN DEERE</td><td>HARLEY DAVIDSON THERMO KING</td><td>HONDA TOYOTA</td></tr><tr><td>03951L S-5232-B</td><td>248-52014 S-5291</td><td>66-82757</td></tr><tr><td>16248 16251 16761 16905</td><td>16600 16736 16906 16913</td><td>16759 16760 17352 17375</td></tr><tr><td>028000-4010 028000-4551 028000-5240 8mm ID</td><td>028000-4320 028000-4950 028000-6040</td><td>028000-4540 028000-5100 028000-6620</td></tr><tr><td colspan="3">LONG, SET WITH W485-11S OR W485-46</td></tr></table>	ACURA JOHN DEERE	HARLEY DAVIDSON THERMO KING	HONDA TOYOTA	03951L S-5232-B	248-52014 S-5291	66-82757	16248 16251 16761 16905	16600 16736 16906 16913	16759 16760 17352 17375	028000-4010 028000-4551 028000-5240 8mm ID	028000-4320 028000-4950 028000-6040	028000-4540 028000-5100 028000-6620	LONG, SET WITH W485-11S OR W485-46			NIPPONDENSO  W485-121 NIPPONDENSO TERMINAL SWITCH <table><tr><td>CASE CHRYSLER</td><td>CATERPILLAR DAEWOO</td><td>CHEVROLET DODGE</td></tr><tr><td>053480-7410 053480-8380</td><td>053480-7830 248-52031</td><td>053480-8170 76-82564</td></tr><tr><td>17020 17216 17880 18495</td><td>17379 17466 19911 19912</td><td>17549 17579 19913</td></tr><tr><td>053400-9922 128000-8030 153400-2780 4mm x 0.7mm STUD</td><td>128000-7500 128000-8031 228000-1800</td><td>128000-7810 128000-8111 228000-1801</td></tr><tr><td colspan="3">ALSO SEE W485-151</td></tr></table>	CASE CHRYSLER	CATERPILLAR DAEWOO	CHEVROLET DODGE	053480-7410 053480-8380	053480-7830 248-52031	053480-8170 76-82564	17020 17216 17880 18495	17379 17466 19911 19912	17549 17579 19913	053400-9922 128000-8030 153400-2780 4mm x 0.7mm STUD	128000-7500 128000-8031 228000-1800	128000-7810 128000-8111 228000-1801	ALSO SEE W485-151														
ACURA AUDI	ALLIS-CHALMERS BLUE BIRD	AMC BOBCAT																																																						
16211 16215 16514 16519	16218 16245 16520 16522	16468 16500 16527 16584																																																						
028000-2000 028000-6520 028000-7131 8mm ID	028000-2240 028000-6650 028000-7172	028000-4210 028000-6810 028000-7330																																																						
USED FOR LOCKING CONTACT STUDS INTO PLACE ON SOLENOID STUDS, JUST FLATTEN IN PLACE, ALTERNATE W480-83																																																								
ACURA JOHN DEERE	HARLEY DAVIDSON THERMO KING	HONDA TOYOTA																																																						
03951L S-5232-B	248-52014 S-5291	66-82757																																																						
16248 16251 16761 16905	16600 16736 16906 16913	16759 16760 17352 17375																																																						
028000-4010 028000-4551 028000-5240 8mm ID	028000-4320 028000-4950 028000-6040	028000-4540 028000-5100 028000-6620																																																						
LONG, SET WITH W485-11S OR W485-46																																																								
CASE CHRYSLER	CATERPILLAR DAEWOO	CHEVROLET DODGE																																																						
053480-7410 053480-8380	053480-7830 248-52031	053480-8170 76-82564																																																						
17020 17216 17880 18495	17379 17466 19911 19912	17549 17579 19913																																																						
053400-9922 128000-8030 153400-2780 4mm x 0.7mm STUD	128000-7500 128000-8031 228000-1800	128000-7810 128000-8111 228000-1801																																																						
ALSO SEE W485-151																																																								


NIPPONDENSO  W485-122 NIPPONDENSO RUBBER FIELD COIL TUBE <table><tr><td>CHRYSLER</td><td>DODGE</td><td>HONDA</td></tr><tr><td>ISUZU</td><td>KUBOTA</td><td>PLYMOUTH</td></tr></table> 71-82309 166761687816913171701736317421 028000-6960028100-6140028100-6210 128000-5080128000-5630128000-5690 128000-6841128000-7190 7mm ID, 68mm OAL GRAY, FOR USE WITH FLAT WIRE FIELD COILS, SEE W485-20	CHRYSLER	DODGE	HONDA	ISUZU	KUBOTA	PLYMOUTH	NIPPONDENSO  W485-127 NIPPONDENSO SOLENOID CONTACT LEXUS 248-5204466-82771 17189 128000-7382 8mm ID USED WITH W485-11S	NIPPONDENSO  W485-13 NIPPONDENSO SOLENOID CONTACT SET <table><tr><td>ALLIS-CHALMERS</td><td>BLUE BIRD</td><td>BOBCAT</td></tr><tr><td>CASE</td><td>CATERPILLAR</td><td>CHAMPION</td></tr></table> 03953128099-5380248-52011 66-8275366-82770S-5261 166511682416830168961719817215 172501728317286172921736217376 028000-5000028000-5300028000-5530 028000-5560028000-5570028000-6060 028000-6200028000-6410028000-6870 10mm ID, EXTRA CONTACT SURFACE SET OF 2 CONTACTS AND 1 INSULATOR, 2.5KW > OSGR, FOR NORMAL SINGLE STYLE SEE W485-100, INSULATOR W485-48	ALLIS-CHALMERS	BLUE BIRD	BOBCAT	CASE	CATERPILLAR	CHAMPION						
CHRYSLER	DODGE	HONDA																		
ISUZU	KUBOTA	PLYMOUTH																		
ALLIS-CHALMERS	BLUE BIRD	BOBCAT																		
CASE	CATERPILLAR	CHAMPION																		
NIPPONDENSO  W485-125 NIPPONDENSO TERMINAL BLOCK <table><tr><td>LEXUS</td><td>TOYOTA</td></tr></table> 19555248-5205976-82571 175211752317530175371767117672 176971777417777 228000-1620228000-2520228000-2730 228000-2740228000-2750228000-3750 228000-3961228000-4080228000-5300 BAKELITE FITS MANY APPLICATIONS WITH DIFFERENT TERMINAL LOCATIONS, SEE W485-118, W485-172	LEXUS	TOYOTA	NIPPONDENSO  W485-128 NIPPONDENSO SOLENOID PLUNGER <table><tr><td>ACURA</td><td>DODGE</td><td>LEXUS</td></tr><tr><td>SUBARU</td><td>TOYOTA</td><td></td></tr></table> 248-5204066-82608 171701726317534175491757417676 176871771517716177741777717788 128000-7390128000-8311128000-9710 128000-9720228000-0820228000-0830 228000-1800228000-2500228000-3401 124mm, 34.8mm SMALL DISK 1.0 - 1.6KW OSGR, REPLACEMENT COPPER STRIKER PLATE DISK W485-103, PLUNGER SPRING W485-131	ACURA	DODGE	LEXUS	SUBARU	TOYOTA		NIPPONDENSO  W485-130 NIPPONDENSO SOLENOID PLUNGER <table><tr><td>BARKO</td><td>BLUE BIRD</td><td>CASE</td></tr><tr><td>CATERPILLAR</td><td>CHAMPION</td><td>CHEVROLET</td></tr></table> 053660-0660053660-7170248-52038 66-82606 166561665816830169901736217418 175481763117802178181813618197 028000-5880028000-6060028000-6872 028000-8402028000-8403128000-0790 128000-6441128000-7871128000-8300 119mm OAL, 42mm CONTACT HEIGHT COUNTER BORED ON END OF PLUNGER, FOR PLUNGER SPRING W485-29, STRIKER DISK W485-126, ALSO SEE W485-33 NOT INTERCHANGABLE	BARKO	BLUE BIRD	CASE	CATERPILLAR	CHAMPION	CHEVROLET				
LEXUS	TOYOTA																			
ACURA	DODGE	LEXUS																		
SUBARU	TOYOTA																			
BARKO	BLUE BIRD	CASE																		
CATERPILLAR	CHAMPION	CHEVROLET																		
NIPPONDENSO  W485-126 NIPPONDENSO SOLENOID COPPER DISK <table><tr><td>BOBCAT</td><td>CASE</td><td>CHEVROLET</td></tr><tr><td>CUMMINS</td><td>DAIHATSU</td><td>DODGE</td></tr></table> 66-82652 166141665116658168241683016896 169671725017283172861730117302 028000-5000028000-5300028000-5490 028000-5530028000-5550028000-5560 028000-5570028000-5860028000-5880 39.8mm OD x 17.6mm ID x 2.5mm THICK COPPER CONTACT DISK USED ON PLUNGER W485-33.	BOBCAT	CASE	CHEVROLET	CUMMINS	DAIHATSU	DODGE	NIPPONDENSO  W485-129 NIPPONDENSO SOLENOID PLUNGER <table><tr><td>ACURA</td><td>JOHN DEERE</td><td>LEXUS</td></tr><tr><td>SUBARU</td><td>TOYOTA</td><td></td></tr></table> 248-5203966-82607 1689316978171701727418568 053660-7270128000-3470128000-3480 128000-5940128000-5950128000-7190 128000-7770128000-7990128000-8270 123mm, 36.8mm LARGE DISK 1.0 - 1.6KW OSGR, REPLACEMENT COPPER STRIKER PLATE DISK W485-102, PLUNGER SPRING W485-131	ACURA	JOHN DEERE	LEXUS	SUBARU	TOYOTA		NIPPONDENSO  W485-131 NIPPONDENSO SOLENOID PLUNGER SPRING <table><tr><td>ACURA</td><td>BOBCAT</td><td>CLARK</td></tr><tr><td>DODGE</td><td>HYSTER</td><td>LANDROVER</td></tr></table> 053659-707066-82552949170-9770 168931697817170172631727317274 174591753417549175741766517676 128000-3470128000-3480128000-5940 128000-5950128000-7190128000-7390 128000-7770128000-7990128000-8270 89mm x 7.5mm OD RETURN SPRING USED WITH PLUNGER W485-128, W485-129.	ACURA	BOBCAT	CLARK	DODGE	HYSTER	LANDROVER
BOBCAT	CASE	CHEVROLET																		
CUMMINS	DAIHATSU	DODGE																		
ACURA	JOHN DEERE	LEXUS																		
SUBARU	TOYOTA																			
ACURA	BOBCAT	CLARK																		
DODGE	HYSTER	LANDROVER																		

NIPPONDENSO  W485-133 NIPPONDENSO ROLLER CARRIAGE <table><tr><td>ACURA CASE</td><td>BOBCAT CATERPILLAR</td><td>CARRIER CHEVROLET</td></tr></table> 028063-0040 76-82810 <table><tr><td>16831</td><td>17020</td><td>17098</td><td>17099</td><td>17170</td><td>17197</td></tr><tr><td>17202</td><td>17204</td><td>17216</td><td>17240</td><td>17242</td><td>17256</td></tr><tr><td>128000-5350</td><td>128000-7002</td><td>128000-7010</td><td></td><td></td><td></td></tr><tr><td>128000-7122</td><td>128000-7140</td><td>128000-7390</td><td></td><td></td><td></td></tr><tr><td>128000-7500</td><td>128000-7560</td><td>128000-7713</td><td></td><td></td><td></td></tr></table> 11.5mm ID x 21mm OD x 11mm H PLASTIC	ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET	16831	17020	17098	17099	17170	17197	17202	17204	17216	17240	17242	17256	128000-5350	128000-7002	128000-7010				128000-7122	128000-7140	128000-7390				128000-7500	128000-7560	128000-7713				NIPPONDENSO  W485-136 NIPPONDENSO STARTER BRUSH SPRING <table><tr><td>ACURA CADILLAC</td><td>ALLIS-CHALMERS CARRIER</td><td>BOBCAT CASE</td></tr></table> 156-52000 69-82701 949173-0461 S-5139 <table><tr><td>16248</td><td>16251</td><td>16578</td><td>16586</td><td>16600</td><td>16612</td></tr><tr><td>16645</td><td>16647</td><td>16650</td><td>16657</td><td>16674</td><td>16676</td></tr><tr><td>028000-3600</td><td>028000-4000</td><td>028000-4010</td><td></td><td></td><td></td></tr><tr><td>028000-4020</td><td>028000-4201</td><td>028000-4240</td><td></td><td></td><td></td></tr><tr><td>028000-4250</td><td>028000-4320</td><td>028000-4340</td><td></td><td></td><td></td></tr></table> EARLY 1.0KW-1.4KW OSGR	ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE	16248	16251	16578	16586	16600	16612	16645	16647	16650	16657	16674	16676	028000-3600	028000-4000	028000-4010				028000-4020	028000-4201	028000-4240				028000-4250	028000-4320	028000-4340				NIPPONDENSO  W485-143 NIPPONDENSO FIELD COIL TERMINAL 76-82577 8mm ID HOLE COPPER, FOR 1.0, 1.2, 1.4KW OSGR STARTERS TO COMPENSATE FOR WIRE LOSS																																	
ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET																																																																																																			
16831	17020	17098	17099	17170	17197																																																																																																
17202	17204	17216	17240	17242	17256																																																																																																
128000-5350	128000-7002	128000-7010																																																																																																			
128000-7122	128000-7140	128000-7390																																																																																																			
128000-7500	128000-7560	128000-7713																																																																																																			
ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE																																																																																																			
16248	16251	16578	16586	16600	16612																																																																																																
16645	16647	16650	16657	16674	16676																																																																																																
028000-3600	028000-4000	028000-4010																																																																																																			
028000-4020	028000-4201	028000-4240																																																																																																			
028000-4250	028000-4320	028000-4340																																																																																																			
NIPPONDENSO  W485-134 NIPPONDENSO SOLENOID CONTACT STUD <table><tr><td>ALLIS-CHALMERS CLARK</td><td>BOBCAT FORD</td><td>CASE FREIGHTLINER</td></tr></table> 452-52004 66-82353 <table><tr><td>16658</td><td>16824</td><td>16830</td><td>16896</td><td>17250</td><td>17283</td></tr><tr><td>17286</td><td>17292</td><td>17301</td><td>17302</td><td>17348</td><td>17362</td></tr><tr><td>028000-5300</td><td>028000-5490</td><td>028000-5530</td><td></td><td></td><td></td></tr><tr><td>028000-5560</td><td>028000-5570</td><td>028000-5880</td><td></td><td></td><td></td></tr><tr><td>028000-6200</td><td>028000-6410</td><td>028000-6560</td><td></td><td></td><td></td></tr></table> 10mm x 1.5mm x 45mm L WITH KNURL BATTERY, USED IN KIT W485-27.	ALLIS-CHALMERS CLARK	BOBCAT FORD	CASE FREIGHTLINER	16658	16824	16830	16896	17250	17283	17286	17292	17301	17302	17348	17362	028000-5300	028000-5490	028000-5530				028000-5560	028000-5570	028000-5880				028000-6200	028000-6410	028000-6560				NIPPONDENSO  W485-14 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CARRIER CUB CADET</td><td>CASE DAIHATSU</td><td>CHEVROLET FORD</td></tr></table> 053480-0360 053480-0380 053480-7140 053480-7430 14532 248-52050 <table><tr><td>16586</td><td>16612</td><td>16650</td><td>16696</td><td>16730</td><td>16737</td></tr><tr><td>16739</td><td>16761</td><td>16786</td><td>16790</td><td>16802</td><td>16821</td></tr><tr><td>028000-5800</td><td>028000-5900</td><td>028000-5910</td><td></td><td></td><td></td></tr><tr><td>028000-6000</td><td>028000-6360</td><td>028000-6930</td><td></td><td></td><td></td></tr><tr><td>028000-7321</td><td>028000-7390</td><td>028000-7560</td><td></td><td></td><td></td></tr></table> 1/4" SPADE HIGH PROFILE "S" TERMINAL, OSGR, COMMONLY USED ON SOLENOIDS WITH THE RUBBER GASKET UNDER COVER	CARRIER CUB CADET	CASE DAIHATSU	CHEVROLET FORD	16586	16612	16650	16696	16730	16737	16739	16761	16786	16790	16802	16821	028000-5800	028000-5900	028000-5910				028000-6000	028000-6360	028000-6930				028000-7321	028000-7390	028000-7560				NIPPONDENSO  W485-144 NIPPONDENSO TERMINAL POST INSULATOR <table><tr><td>CHEVROLET LEXUS</td><td>GEO TOYOTA</td><td>LANDROVER</td></tr></table> 185-52005 72-82415 <table><tr><td>17485</td><td>17493</td><td>17495</td><td>17519</td><td>17520</td><td>17521</td></tr><tr><td>17523</td><td>17524</td><td>17525</td><td>17529</td><td>17530</td><td>17531</td></tr><tr><td>028099-7810</td><td>228000-0820</td><td>228000-0830</td><td></td><td></td><td></td></tr><tr><td>228000-0900</td><td>228000-1100</td><td>228000-1560</td><td></td><td></td><td></td></tr><tr><td>228000-1620</td><td>228000-1690</td><td>228000-1960</td><td></td><td></td><td></td></tr></table> 2mm HIGH LOCKING TAB BATTERY TERMINAL INSULATOR	CHEVROLET LEXUS	GEO TOYOTA	LANDROVER	17485	17493	17495	17519	17520	17521	17523	17524	17525	17529	17530	17531	028099-7810	228000-0820	228000-0830				228000-0900	228000-1100	228000-1560				228000-1620	228000-1690	228000-1960			
ALLIS-CHALMERS CLARK	BOBCAT FORD	CASE FREIGHTLINER																																																																																																			
16658	16824	16830	16896	17250	17283																																																																																																
17286	17292	17301	17302	17348	17362																																																																																																
028000-5300	028000-5490	028000-5530																																																																																																			
028000-5560	028000-5570	028000-5880																																																																																																			
028000-6200	028000-6410	028000-6560																																																																																																			
CARRIER CUB CADET	CASE DAIHATSU	CHEVROLET FORD																																																																																																			
16586	16612	16650	16696	16730	16737																																																																																																
16739	16761	16786	16790	16802	16821																																																																																																
028000-5800	028000-5900	028000-5910																																																																																																			
028000-6000	028000-6360	028000-6930																																																																																																			
028000-7321	028000-7390	028000-7560																																																																																																			
CHEVROLET LEXUS	GEO TOYOTA	LANDROVER																																																																																																			
17485	17493	17495	17519	17520	17521																																																																																																
17523	17524	17525	17529	17530	17531																																																																																																
028099-7810	228000-0820	228000-0830																																																																																																			
228000-0900	228000-1100	228000-1560																																																																																																			
228000-1620	228000-1690	228000-1960																																																																																																			
NIPPONDENSO  W485-135 NIPPONDENSO SOLENOID CONTACT STUD <table><tr><td>ALLIS-CHALMERS CASE</td><td>BLUE BIRD CATERPILLAR</td><td>BOBCAT CHEVROLET</td></tr></table> 66-82354 <table><tr><td>16614</td><td>16658</td><td>16824</td><td>16830</td><td>16896</td><td>16967</td></tr><tr><td>17250</td><td>17283</td><td>17286</td><td>17292</td><td>17311</td><td>17348</td></tr><tr><td>028000-5300</td><td>028000-5530</td><td>028000-5550</td><td></td><td></td><td></td></tr><tr><td>028000-5560</td><td>028000-5570</td><td>028000-5860</td><td></td><td></td><td></td></tr><tr><td>028000-5880</td><td>028000-6200</td><td>028000-6410</td><td></td><td></td><td></td></tr></table> 10mm x 1.5mm x 28mm L MOTOR, USED IN KIT W485-80.	ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHEVROLET	16614	16658	16824	16830	16896	16967	17250	17283	17286	17292	17311	17348	028000-5300	028000-5530	028000-5550				028000-5560	028000-5570	028000-5860				028000-5880	028000-6200	028000-6410				NIPPONDENSO  W485-142 NIPPONDENSO TERMINAL BOOT <table><tr><td>ACURA KUBOTA</td><td>CARRIER</td><td>HONDA</td></tr></table> 028062-0660 028062-6150 25552 71-82320 <table><tr><td>16890</td><td>16905</td><td>17274</td><td>17285</td><td>17464</td><td>17494</td></tr><tr><td>17517</td><td>17584</td><td>17676</td><td>18019</td><td>18144</td><td>18277</td></tr><tr><td>128000-0300</td><td>128000-2190</td><td>128000-7080</td><td></td><td></td><td></td></tr><tr><td>128000-7470</td><td>128000-7471</td><td>128000-7713</td><td></td><td></td><td></td></tr><tr><td>128000-7770</td><td>128000-9751</td><td>228000-0661</td><td></td><td></td><td></td></tr></table> RUBBER LEFT, NOTICE W485-53	ACURA KUBOTA	CARRIER	HONDA	16890	16905	17274	17285	17464	17494	17517	17584	17676	18019	18144	18277	128000-0300	128000-2190	128000-7080				128000-7470	128000-7471	128000-7713				128000-7770	128000-9751	228000-0661				NIPPONDENSO  W485-145 NIPPONDENSO FIELD COIL WIRE INSULATOR <table><tr><td>CARRIER HONDA</td><td>CATERPILLAR HYSTER</td><td>FORD ISHIKAWAJIMA</td></tr></table> 16248 16251 16578 16586 16645 16647 16650 16657 16674 16739 16759 16760 <table><tr><td>028000-3600</td><td>028000-4010</td><td>028000-4020</td></tr><tr><td>028000-4201</td><td>028000-4240</td><td>028000-4250</td></tr><tr><td>028000-4320</td><td>028000-4340</td><td>028000-4510</td></tr></table> 73mm OAL, OVAL END, 8mm ID HOLE FITS 1.0, 1.2, 1.4KW STARTERS, SHORTER THAN W485-19, BLUE COLOR	CARRIER HONDA	CATERPILLAR HYSTER	FORD ISHIKAWAJIMA	028000-3600	028000-4010	028000-4020	028000-4201	028000-4240	028000-4250	028000-4320	028000-4340	028000-4510																					
ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHEVROLET																																																																																																			
16614	16658	16824	16830	16896	16967																																																																																																
17250	17283	17286	17292	17311	17348																																																																																																
028000-5300	028000-5530	028000-5550																																																																																																			
028000-5560	028000-5570	028000-5860																																																																																																			
028000-5880	028000-6200	028000-6410																																																																																																			
ACURA KUBOTA	CARRIER	HONDA																																																																																																			
16890	16905	17274	17285	17464	17494																																																																																																
17517	17584	17676	18019	18144	18277																																																																																																
128000-0300	128000-2190	128000-7080																																																																																																			
128000-7470	128000-7471	128000-7713																																																																																																			
128000-7770	128000-9751	228000-0661																																																																																																			
CARRIER HONDA	CATERPILLAR HYSTER	FORD ISHIKAWAJIMA																																																																																																			
028000-3600	028000-4010	028000-4020																																																																																																			
028000-4201	028000-4240	028000-4250																																																																																																			
028000-4320	028000-4340	028000-4510																																																																																																			

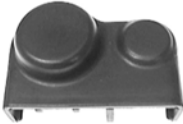
NIPPONDENSO  W485-146 NIPPONDENSO FIELD COIL TERMINAL 8mm ID HOLE COPPER	NIPPONDENSO  W485-15 NIPPONDENSO SOLENOID RELAY TERMINAL <table> <tr> <td>CATERPILLAR HYSTER</td><td>HANOMAG MERCEDES</td><td>HONDA TOYOTA</td></tr> <tr> <td>248-52012</td><td>66-82754</td><td>S-5622</td></tr> <tr> <td>16248 16251 17119 32020</td><td>16578 16586</td><td>16760 17100</td></tr> <tr> <td>0-001-208-004</td><td>028000-3600</td><td>028000-4020</td></tr> <tr> <td>028000-4240</td><td>028000-4250</td><td>028000-4551</td></tr> <tr> <td>028000-4940</td><td>028000-5140</td><td>028000-5240</td></tr> <tr> <td>4mm HOLE</td><td></td><td></td></tr> </table> "R" TERMINAL FOR, 1.0, 1.4KW STARTERS, USED WITH TERMINAL BLOCK W485-05 AND SCREW W115-81	CATERPILLAR HYSTER	HANOMAG MERCEDES	HONDA TOYOTA	248-52012	66-82754	S-5622	16248 16251 17119 32020	16578 16586	16760 17100	0-001-208-004	028000-3600	028000-4020	028000-4240	028000-4250	028000-4551	028000-4940	028000-5140	028000-5240	4mm HOLE			NIPPONDENSO  W485-152 NIPPONDENSO TERMINAL BLOCK CHEVROLET <table> <tr> <td>053480-7150</td><td>19559</td><td>76-82573</td></tr> <tr> <td>17129</td><td></td><td></td></tr> <tr> <td>128000-5430</td><td>128000-8280</td><td></td></tr> </table> 9.2mm OD MOUNT, SQUARE "S" TERMINAL	053480-7150	19559	76-82573	17129			128000-5430	128000-8280																									
CATERPILLAR HYSTER	HANOMAG MERCEDES	HONDA TOYOTA																																																						
248-52012	66-82754	S-5622																																																						
16248 16251 17119 32020	16578 16586	16760 17100																																																						
0-001-208-004	028000-3600	028000-4020																																																						
028000-4240	028000-4250	028000-4551																																																						
028000-4940	028000-5140	028000-5240																																																						
4mm HOLE																																																								
053480-7150	19559	76-82573																																																						
17129																																																								
128000-5430	128000-8280																																																							
NIPPONDENSO  W485-148 NIPPONDENSO PLUNGER REPAIR CAP <table> <tr> <td>ACURA CHEVROLET</td><td>CARRIER CHRYSLER</td><td>CASE DAEWOO</td></tr> <tr> <td>66-82760</td><td></td><td></td></tr> </table> <table> <tr> <td>16248 16251 16674 16676</td><td>16578 16586 16696 16730</td><td>16600 16612 16736 16737</td></tr> <tr> <td>028000-3600</td><td>028000-4000</td><td>028000-4010</td></tr> <tr> <td>028000-4020</td><td>028000-4240</td><td>028000-4250</td></tr> <tr> <td>028000-4320</td><td>028000-4340</td><td>028000-4510</td></tr> </table> 1/8" ID HOLE x 18.7mm OD WITH STEP FOR REPLACING THE MOBILE CONTACT PLATES ON OSGR STARTERS, SEE COPPER PLATES W485-102, W485-103, NOTICE W485-149	ACURA CHEVROLET	CARRIER CHRYSLER	CASE DAEWOO	66-82760			16248 16251 16674 16676	16578 16586 16696 16730	16600 16612 16736 16737	028000-3600	028000-4000	028000-4010	028000-4020	028000-4240	028000-4250	028000-4320	028000-4340	028000-4510	NIPPONDENSO  W485-150 NIPPONDENSO TERMINAL BLOCK <table> <tr> <td>BLUE BIRD CUMMINS</td><td>CASE FORD</td><td>CLARK JOHN DEERE</td></tr> <tr> <td>053480-7560</td><td>76-82598</td><td></td></tr> </table> <table> <tr> <td>16658 16990 18342 18405</td><td>17362 17391 18408 18412</td><td>17630 18007 18456 18510</td></tr> <tr> <td>028000-5881</td><td>028000-8402</td><td>028000-8403</td></tr> <tr> <td>128000-0212</td><td>128000-0542</td><td>128000-2560</td></tr> <tr> <td>128000-2561</td><td>128000-8291</td><td>128000-8292</td></tr> </table> 5mm THREAD, 11.2mm OD PRESS FIT 2.5KW, REPLACES W485-69	BLUE BIRD CUMMINS	CASE FORD	CLARK JOHN DEERE	053480-7560	76-82598		16658 16990 18342 18405	17362 17391 18408 18412	17630 18007 18456 18510	028000-5881	028000-8402	028000-8403	128000-0212	128000-0542	128000-2560	128000-2561	128000-8291	128000-8292	NIPPONDENSO  W485-153 NIPPONDENSO SOLENOID CONTACT <table> <tr> <td>ACURA GEHL</td><td>CASE HYSTER</td><td>FORD JOHN DEERE</td></tr> <tr> <td>053513-7710</td><td>66-82780</td><td></td></tr> </table> <table> <tr> <td>17533 17665 18273 18274</td><td>17876 18004 19017</td><td>18014 18198</td></tr> <tr> <td>028099-7810</td><td>028099-7820</td><td>028099-7821</td></tr> <tr> <td>028099-8710</td><td>028099-8721</td><td>153400-4020</td></tr> <tr> <td>228000-3260</td><td>228000-3732</td><td>228000-4570</td></tr> </table> 8mm ID LATE MODEL 2.0KW>, LARGER CONTACT SURFACE THAN W485-57	ACURA GEHL	CASE HYSTER	FORD JOHN DEERE	053513-7710	66-82780		17533 17665 18273 18274	17876 18004 19017	18014 18198	028099-7810	028099-7820	028099-7821	028099-8710	028099-8721	153400-4020	228000-3260	228000-3732	228000-4570
ACURA CHEVROLET	CARRIER CHRYSLER	CASE DAEWOO																																																						
66-82760																																																								
16248 16251 16674 16676	16578 16586 16696 16730	16600 16612 16736 16737																																																						
028000-3600	028000-4000	028000-4010																																																						
028000-4020	028000-4240	028000-4250																																																						
028000-4320	028000-4340	028000-4510																																																						
BLUE BIRD CUMMINS	CASE FORD	CLARK JOHN DEERE																																																						
053480-7560	76-82598																																																							
16658 16990 18342 18405	17362 17391 18408 18412	17630 18007 18456 18510																																																						
028000-5881	028000-8402	028000-8403																																																						
128000-0212	128000-0542	128000-2560																																																						
128000-2561	128000-8291	128000-8292																																																						
ACURA GEHL	CASE HYSTER	FORD JOHN DEERE																																																						
053513-7710	66-82780																																																							
17533 17665 18273 18274	17876 18004 19017	18014 18198																																																						
028099-7810	028099-7820	028099-7821																																																						
028099-8710	028099-8721	153400-4020																																																						
228000-3260	228000-3732	228000-4570																																																						
NIPPONDENSO  W485-149 NIPPONDENSO PLUNGER REPAIR CAP <table> <tr> <td>ACURA CASE</td><td>BOBCAT CATERPILLAR</td><td>CARRIER CHEVROLET</td></tr> <tr> <td>66-82765</td><td></td><td></td></tr> </table> <table> <tr> <td>16614 16651 16896 16967</td><td>16824 16830 17020 17084</td><td>16831 16878 17091 17098</td></tr> <tr> <td>028000-5000</td><td>028000-5300</td><td>028000-5490</td></tr> <tr> <td>028000-5530</td><td>028000-5550</td><td>028000-5560</td></tr> <tr> <td>028000-5570</td><td>028000-5860</td><td>028000-6200</td></tr> </table> 3/16" ID HOLE x 18.5mm OD WITH STEP FOR REPLACING THE MOBILE CONTACT PLATES ON OSGR STARTERS, SEE COPPER PLATES W485-102, W485-103, NOTICE W485-148	ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET	66-82765			16614 16651 16896 16967	16824 16830 17020 17084	16831 16878 17091 17098	028000-5000	028000-5300	028000-5490	028000-5530	028000-5550	028000-5560	028000-5570	028000-5860	028000-6200	NIPPONDENSO  W485-151 NIPPONDENSO TERMINAL BLOCK <table> <tr> <td>BOBCAT JAGUAR</td><td>CLARK MELROE</td><td>DODGE</td></tr> <tr> <td>053480-7842 76-82578</td><td>053480-7960</td><td>248-52056</td></tr> <tr> <td>17459 17573</td><td>17574 17714</td><td>18448</td></tr> <tr> <td>228000-3391</td><td>228000-3392</td><td>228000-3400</td></tr> <tr> <td>228000-3401</td><td>228000-5090</td><td>228000-5740</td></tr> <tr> <td>228000-6650</td><td>228000-6920</td><td>428000-2070</td></tr> </table> M5 x 0.80 x 16mm THREAD ALSO SEE W485-121	BOBCAT JAGUAR	CLARK MELROE	DODGE	053480-7842 76-82578	053480-7960	248-52056	17459 17573	17574 17714	18448	228000-3391	228000-3392	228000-3400	228000-3401	228000-5090	228000-5740	228000-6650	228000-6920	428000-2070	NIPPONDENSO  W485-154 NIPPONDENSO SOLENOID CONTACT <table> <tr> <td>DODGE KUBOTA</td><td>ISHIKAWAJIMA LANDROVER</td><td>ISUZU LEXUS</td></tr> <tr> <td>028099-7850 053513-7690</td><td>028099-9110</td><td>028099-9150</td></tr> <tr> <td>17535 17581 17851 18139</td><td>17672 17706 18411 19907</td><td>17711 17748 19908</td></tr> <tr> <td>028099-7850</td><td>028099-8410</td><td>028099-8411</td></tr> <tr> <td>228000-2990</td><td>228000-3040</td><td>228000-3850</td></tr> <tr> <td>228000-3851</td><td>228000-3852</td><td>228000-4080</td></tr> </table> 8mm ID LATE MODEL 2.0KW>, LARGER CONTACT SURFACE THAN W485-45	DODGE KUBOTA	ISHIKAWAJIMA LANDROVER	ISUZU LEXUS	028099-7850 053513-7690	028099-9110	028099-9150	17535 17581 17851 18139	17672 17706 18411 19907	17711 17748 19908	028099-7850	028099-8410	028099-8411	228000-2990	228000-3040	228000-3850	228000-3851	228000-3852	228000-4080
ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET																																																						
66-82765																																																								
16614 16651 16896 16967	16824 16830 17020 17084	16831 16878 17091 17098																																																						
028000-5000	028000-5300	028000-5490																																																						
028000-5530	028000-5550	028000-5560																																																						
028000-5570	028000-5860	028000-6200																																																						
BOBCAT JAGUAR	CLARK MELROE	DODGE																																																						
053480-7842 76-82578	053480-7960	248-52056																																																						
17459 17573	17574 17714	18448																																																						
228000-3391	228000-3392	228000-3400																																																						
228000-3401	228000-5090	228000-5740																																																						
228000-6650	228000-6920	428000-2070																																																						
DODGE KUBOTA	ISHIKAWAJIMA LANDROVER	ISUZU LEXUS																																																						
028099-7850 053513-7690	028099-9110	028099-9150																																																						
17535 17581 17851 18139	17672 17706 18411 19907	17711 17748 19908																																																						
028099-7850	028099-8410	028099-8411																																																						
228000-2990	228000-3040	228000-3850																																																						
228000-3851	228000-3852	228000-4080																																																						

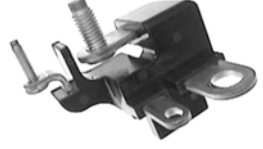
NIPPONDENSO  W485-155 NIPPONDENSO TERMINAL COVER <table><tr><td>ACURA EAGLE</td><td>CHRYSLER FORD</td><td>DODGE PLYMOUTH</td></tr></table> 028062-5990 72-82103 17278 17460 17735 17809 128000-5350 228000-3013 228000-3033 PLASTIC 17562 17570 18273 18274 17571 17665 228000-3010 228000-3030 228000-5041 FOR TERMINAL INSULATOR USE W485-106, FOR BATTERY POST USE W485-105	ACURA EAGLE	CHRYSLER FORD	DODGE PLYMOUTH	NIPPONDENSO  W485-159 NIPPONDENSO STARTER RUBBER O-RING <table><tr><td>ACURA CARRIER</td><td>BOBCAT CASE</td><td>CADILLAC CATERPILLAR</td></tr></table> 180-52003 71-82510 949140-3700 16650 16696 17083 17084 16890 16946 17091 17098 17014 17020 17099 17101 028000-8390 028100-3770 128000-0140 68.5mm ID x 72mm OD x 1.7mm W 028000-9800 128000-0050 128000-0141 028000-9820 128000-0071 128000-0170 FOR OSGR 1.2, 1.4, 1.6 WITH ALUMINUM CE FRAME	ACURA CARRIER	BOBCAT CASE	CADILLAC CATERPILLAR	NIPPONDENSO  W485-161 NIPPONDENSO BATTERY TERMINAL EXTENSION <table><tr><td>CHEVROLET</td><td>GMC</td></tr></table> 028008-5290 028008-5680 17579 17880 18495 128000-8111 428000-0460 428000-2440 8mm x 1.25 THREADED POST SET WITH W485-160, W485-162 AND W485-163	CHEVROLET	GMC
ACURA EAGLE	CHRYSLER FORD	DODGE PLYMOUTH								
ACURA CARRIER	BOBCAT CASE	CADILLAC CATERPILLAR								
CHEVROLET	GMC									
NIPPONDENSO  W485-157 NIPPONDENSO TERMINAL POST <table><tr><td>CADILLAC</td><td>CHEVROLET</td></tr></table> 053480-7060 76-82572 17083 17091 128000-3181 128000-4950 128000-4951 M5 THREAD SHORT BASE	CADILLAC	CHEVROLET	NIPPONDENSO  W485-16 NIPPONDENSO RUBBER DRAIN PLUG <table><tr><td>ACURA BOMBARDIER</td><td>ALLIS-CHALMERS CADILLAC</td><td>BOBCAT CARRIER</td></tr></table> 028062-0011 028062-0480 028062-0200 028062-5400 028062-0360 028062-5401 16218 16221 16614 16637 16334 16468 16651 16656 16583 16600 16658 16696 0-001-209-001 028000-3501 028000-5300 0-001-223-507 028000-3611 028000-5330 028000-3361 028000-5000 028000-5490 FOR 10mm HOLE WITH 2mm THICKNESS WALL HOUSING COMMONLY USED IN D/D STARTER CE COVERS. FOR 4mm WALL VERSION W485-78.	ACURA BOMBARDIER	ALLIS-CHALMERS CADILLAC	BOBCAT CARRIER	NIPPONDENSO  W485-162 NIPPONDENSO STARTER TERMINAL INSULATOR <table><tr><td>CHEVROLET</td><td>GMC</td></tr></table> 028033-5250 028033-5251 17579 17880 18495 128000-8111 428000-0460 428000-2440 USED WITH W485-160, W485-161 W485-163	CHEVROLET	GMC	
CADILLAC	CHEVROLET									
ACURA BOMBARDIER	ALLIS-CHALMERS CADILLAC	BOBCAT CARRIER								
CHEVROLET	GMC									
NIPPONDENSO  W485-158 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CHRYSLER</td><td>DODGE</td></tr></table> 053480-8080 76-82560 76-82579 17785 17788 17800 17823 17875 17895 128000-5350 228000-7432 428000-0730 SMALL PIN 228000-7420 228000-7730 428000-0990 228000-7421 428000-0100 NOTICE CLIP LOCATION ON BACKSIDE, SIMILAR TO W485-170	CHRYSLER	DODGE	NIPPONDENSO  W485-160 NIPPONDENSO IGN TERMINAL EXTENDER <table><tr><td>CHEVROLET</td><td>GMC</td></tr></table> 028008-5310 17579 17880 18495 128000-8111 428000-0460 428000-2440 4mm 0.7 THREADED POST SET WITH W485-161, W485-162, W485-163	CHEVROLET	GMC	NIPPONDENSO  W485-163 NIPPONDENSO TERMINAL COVER <table><tr><td>CHEVROLET</td><td>GMC</td></tr></table> 028062-5860 028062-5862 17579 17880 18495 128000-8111 428000-0460 428000-2440 PLASTIC SET WITH W485-160, W485-161 AND W485-162	CHEVROLET	GMC		
CHRYSLER	DODGE									
CHEVROLET	GMC									
CHEVROLET	GMC									

NIPPONDENSO  W485-164 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CARRIER NEW HOLLAND</td><td>KUBOTA SUBARU</td><td>LISTER PETTER TOYOTA</td></tr></table> 053480-7300 053480-7690 76-82574 16821 17170 18142 18144 028000-8060 228000-0661 228000-1000 1/4" PUSH ON 17242 18001 18147 18158 128000-8311 228000-0662 228000-1020 18002 18140 18277 18557 128000-8321 228000-0760 228000-1030 SMALL CASE VERSION	CARRIER NEW HOLLAND	KUBOTA SUBARU	LISTER PETTER TOYOTA	NIPPONDENSO  W485-170 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CHRYSLER</td><td>DODGE</td></tr></table> 053480-8090 17784 17808 228000-7641 17809 228000-8700 228000-8731 SMALL PIN NOTICE CLIP LOCATION, SIMILAR TO W485-158	CHRYSLER	DODGE	NIPPONDENSO  W485-174 NIPPONDENSO SOLENOID CONTACT <table><tr><td>LEXUS</td><td>TOYOTA</td></tr></table> 66-82782 17748 17791 028099-9310 228000-9200 17824 228000-8800 228000-8810 8mm ID LATE MODEL, 1.4-2.0KW, LONGER THAN W485-11S	LEXUS	TOYOTA		
CARRIER NEW HOLLAND	KUBOTA SUBARU	LISTER PETTER TOYOTA									
CHRYSLER	DODGE										
LEXUS	TOYOTA										
NIPPONDENSO  W485-169 NIPPONDENSO STARTER FIELD COIL GROMMET <table><tr><td>ACURA CASE</td><td>BOBCAT CATERPILLAR</td><td>CARRIER CHEVROLET</td></tr></table> 71-82310 16831 17020 17202 17204 028100-6280 028100-7110 028108-5680 46mm OAL 17098 17099 17216 17240 028100-6350 028100-7230 028108-5930 17170 17197 17242 17256 028100-6760 028108-5650 128000-5350 GRAY, 1.2, 1.4KW, SILVER STARTERS	ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET	NIPPONDENSO  W485-171 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CUMMINS INTERNATIONAL</td><td>DODGE ONAN</td><td>FREIGHTLINER YANMAR</td></tr></table> 053480-7120 053480-7820 248-52057 76-82570 17215 17548 128000-4910 228000-2292 228000-7371 18517 19507 228000-2290 228000-4010 428000-5730 19554 228000-2291 228000-6090 5mm THREADED POST, 11mm PRESS FIT IGNITION TERMINAL FOR 2.5KW> STARTERS	CUMMINS INTERNATIONAL	DODGE ONAN	FREIGHTLINER YANMAR	NIPPONDENSO  W485-175 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CHEVROLET ISUZU</td><td>DODGE</td><td>GRAVELY</td></tr></table> 053480-7901 248-52063 76-82580 17892 18500 228000-5652 428000-1190 228000-8180 228000-8182 SPADE	CHEVROLET ISUZU	DODGE	GRAVELY
ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET									
CUMMINS INTERNATIONAL	DODGE ONAN	FREIGHTLINER YANMAR									
CHEVROLET ISUZU	DODGE	GRAVELY									
NIPPONDENSO  W485-17 NIPPONDENSO FIELD TERMINAL BOOT <table><tr><td>ALLIS-CHALMERS BOBCAT</td><td>BARKO CASE</td><td>BLUE BIRD CATERPILLAR</td></tr></table> 028062-0130 180-52005 71-82303 16651 16656 16882 16981 028000-5000 028000-5660 028000-6060 10mm POST STYLE 16658 16824 16990 17198 028000-5490 028000-5880 028000-6210 16830 16881 17199 17215 028000-5560 028000-5881 028000-6410 2.5KW> STARTERS, SMALLER VERSION SEE W485-25.	ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR	NIPPONDENSO  W485-173 NIPPONDENSO SOLENOID CONTACT <table><tr><td>LEXUS</td><td>TOYOTA</td></tr></table> 66-82781 17748 17791 028099-9300 228000-9200 17824 228000-8800 228000-8810 8mm ID LATE MODEL 1.4-2.0KW, LONG REACH, SIMILAR TO W485-154	LEXUS	TOYOTA	NIPPONDENSO  W485-19 NIPPONDENSO FIELD COIL WIRE INSULATOR <table><tr><td>ALLIS-CHALMERS THERMO KING</td><td>DODGE TOYOTA</td><td>LEXUS</td></tr></table> 19556 71-82307 S-5612 16822 17189 028000-8130 128000-0570 228000-1690 83mm OVERALL LENGTH 17360 17373 028000-8371 128000-7382 17533 17547 028100-3990 228000-0240 OVAL END, 1.9, 2.0KW STARTERS, SEE W485-145	ALLIS-CHALMERS THERMO KING	DODGE TOYOTA	LEXUS	
ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR									
LEXUS	TOYOTA										
ALLIS-CHALMERS THERMO KING	DODGE TOYOTA	LEXUS									

NIPPONDENSO  W485-20 NIPPONDENSO FIELD COIL WIRE INSULATOR <table><tr><td>CHEVROLET GEO</td><td>DAIHATSU HONDA</td><td>FORD ISHIKAWAJIMA</td></tr></table> 1457671-82306 162481625116586166121673016736 167371676116786168211682516826 028000-4540028000-4551028000-5100 028000-5900028000-5910028000-6000 028000-6360028000-6620028000-7190 6mm ID, 73mm OAL, SQUARE END 1.0, 1.3KW STARTER, SEE W485-122	CHEVROLET GEO	DAIHATSU HONDA	FORD ISHIKAWAJIMA	NIPPONDENSO  W485-23 NIPPONDENSO FIELD COIL INSULATOR <table><tr><td>CARRIER HONDA</td><td>CATERPILLAR HYSTER</td><td>FORD ISHIKAWAJIMA</td></tr></table> 72-82408 162481625116578165861660016645 166471665016657166741669616739 028000-3600028000-4010028000-4020 028000-4201028000-4240028000-4250 028000-4320028000-4340028000-4510 PLASTIC EARLY, 1.4KW, 1.9KW STARTERS WITH INTERNAL THRU-BOLTS	CARRIER HONDA	CATERPILLAR HYSTER	FORD ISHIKAWAJIMA	NIPPONDENSO  W485-26 NIPPONDENSO ROLLER CARRIAGE <table><tr><td>ACURA CARRIER</td><td>ALLIS-CHALMERS CASE</td><td>CADILLAC CATERPILLAR</td></tr></table> 028063-001176-82804 162481625116578165861660016612 166501665716674166761669616730 028000-4010028000-4020028000-4240 028000-4250028000-4340028000-4510 028000-4540028000-4551028000-4940 11mm ID x 20.5mm OD x 13mm TALL 1.0, 1.4, 1.9, 2.0KW STARTERS	ACURA CARRIER	ALLIS-CHALMERS CASE	CADILLAC CATERPILLAR
CHEVROLET GEO	DAIHATSU HONDA	FORD ISHIKAWAJIMA									
CARRIER HONDA	CATERPILLAR HYSTER	FORD ISHIKAWAJIMA									
ACURA CARRIER	ALLIS-CHALMERS CASE	CADILLAC CATERPILLAR									
HITACHI MITSUBISHI NIPPONDENSO  W485-21 NIPPONDENSO PAPER WASHER <table><tr><td>GRAVELY KUBOTA</td><td>JOHN DEERE</td><td>KAWASAKI</td></tr></table> 85-7400 18266 228000-7990228000-7991W455-00 W455-02W455-03W455-09 W455-10W455-12W455-13 8.3mm ID x 12.7mm OD x 0.8mm THICK SPACER/SEAL, FITS MOST SOLENOID CAP POSTS WITH 8mm POSTS, ALSO FITS COMMON BOSCH, SEE W480-11	GRAVELY KUBOTA	JOHN DEERE	KAWASAKI	NIPPONDENSO  W485-24 NIPPONDENSO BATTERY TERMINAL INSULATOR <table><tr><td>CASE DAEWOO</td><td>CATERPILLAR HYSTER</td><td>CLARK JOHN DEERE</td></tr></table> 72-82411 171001710117118171191736517374 173781737917384173921761217622 028000-8230028000-8380028000-8390 028000-9820028000-9830028099-3580 028099-5620128000-0590128000-1040 10mm ID 1.4, 2.0KW STARTERS	CASE DAEWOO	CATERPILLAR HYSTER	CLARK JOHN DEERE	NIPPONDENSO  W485-27 NIPPONDENSO SOLENOID CONTACT KIT <table><tr><td>ALLIS-CHALMERS BOBCAT</td><td>BARKO CASE</td><td>BLUE BIRD CATERPILLAR</td></tr></table> 028099-2790028099-3200028099-3780 028099-5090028099-7910128099-5080 168241683016896169811699017198 171991721517250172831728617292 028000-5300028000-5530028000-5560 028000-5570028000-5690028000-6200 028000-6410028000-6561028000-6640 10mm B+ BATTERY SIDE. 2.5KW, 4.0KW STARTERS, FOR CONTACT ONLY W485-13 OR W485-100, CONTACT STUD W485-134, INSULATORS W485-48, W485-50	ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR
GRAVELY KUBOTA	JOHN DEERE	KAWASAKI									
CASE DAEWOO	CATERPILLAR HYSTER	CLARK JOHN DEERE									
ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR									
NIPPONDENSO  W485-22 NIPPONDENSO BATTERY TERMINAL INSULATOR <table><tr><td>ACURA CADILLAC</td><td>ALLIS-CHALMERS CARRIER</td><td>BOBCAT CASE</td></tr></table> 14593185-5200772-82409 S-5230 162481625116578165861660016612 166451664716650166571667416676 028000-4010028000-4020028000-4201 028000-4320028000-4340028000-4510 028000-4540028000-4551028000-4730 8mm ID, SQUARE 1.0, 1.4, 1.9, 2.0KW STARTERS	ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE	NIPPONDENSO  W485-25 NIPPONDENSO TERMINAL BOOT <table><tr><td>ACURA GMC</td><td>CHEVROLET ISEKI</td><td>DODGE ISHIKAWAJIMA</td></tr></table> 028062-039014582180-52019 71-82305 167391683917189173731738717547 1813918157 028000-7001028000-7791028100-3492 128000-0020128000-0570128000-0960 128000-2070128000-2830128000-7382 8mm POST STYLE 2.0KW STARTER, FOR LARGER VERSION W485-17.	ACURA GMC	CHEVROLET ISEKI	DODGE ISHIKAWAJIMA	NIPPONDENSO  W485-28 NIPPONDENSO SOLENOID CONTACT KIT <table><tr><td>CATERPILLAR</td><td>JOHN DEERE</td><td>WHITE</td></tr></table> 028099-5650 16981173881763118456 128000-2250128000-4090128000-7040 128000-8300128000-8301228000-0842 MOTOR SIDE, 2.5KW STARTERS, INSULATORS W485-48, W485-50.	CATERPILLAR	JOHN DEERE	WHITE
ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE									
ACURA GMC	CHEVROLET ISEKI	DODGE ISHIKAWAJIMA									
CATERPILLAR	JOHN DEERE	WHITE									

NIPPONDENSO  W485-29 NIPPONDENSO SOLENOID PLUNGER SPRING <table><tr><td>ALLIS-CHALMERS CASE</td><td>BLUE BIRD CATERPILLAR</td><td>BOBCAT CHAMPION</td></tr></table> 248-52021 S-5148 <table><tr><td>66-82551</td><td>949170-4070</td></tr></table><table><tr><td>16614 16651 16656 16658 16674 16760</td><td>16824 16830 16881 16882 16896 16981</td></tr></table> 028000-5000 028000-5140 028000-5300 028000-5490 028000-5530 028000-5560 028000-5570 028000-5660 028000-5690 7.3mm OD x 70mm LONG 2.5, 3.0, 4.5, 5.5KW STARTERS, USED ON PLUNGER W485-33.	ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHAMPION	66-82551	949170-4070	16614 16651 16656 16658 16674 16760	16824 16830 16881 16882 16896 16981	NIPPONDENSO  W485-32 NIPPONDENSO TERMINAL BLOCK <table><tr><td>BOBCAT CLARK</td><td>CASE DAEWOO</td><td>CATERPILLAR FORD</td></tr></table> 053480-0251 76-82555 S-5242 <table><tr><td>16658 16981 17263 17362 17385 17388</td><td>17393 17589 17613 17630 17631 18137</td></tr></table> 028000-5880 028000-8400 053400-9280 128000-1780 128000-2250 128000-3030 128000-5600 128000-7040 128000-7390 8/32" ID THREAD 2.5KW STARTERS. FOR 5mm THREAD USE W485-69.	BOBCAT CLARK	CASE DAEWOO	CATERPILLAR FORD	16658 16981 17263 17362 17385 17388	17393 17589 17613 17630 17631 18137	NIPPONDENSO  W485-36 NIPPONDENSO BATTERY TERMINAL EXTENSION <table><tr><td>CHRYSLER</td><td>DODGE</td><td>PLYMOUTH</td></tr></table> 028008-5100 03955 463-52005 76-82556 S-5623 17020 17216 128000-3500 128000-7500 128000-8030 128000-8031 8mm POST SET WITH W485-37, FOR COVER W485-40	CHRYSLER	DODGE	PLYMOUTH
ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHAMPION															
66-82551	949170-4070																
16614 16651 16656 16658 16674 16760	16824 16830 16881 16882 16896 16981																
BOBCAT CLARK	CASE DAEWOO	CATERPILLAR FORD															
16658 16981 17263 17362 17385 17388	17393 17589 17613 17630 17631 18137																
CHRYSLER	DODGE	PLYMOUTH															
NIPPONDENSO  W485-30 NIPPONDENSO DRIVE SPRING <table><tr><td>ALLIS-CHALMERS BOBCAT</td><td>BARKO CASE</td><td>BLUE BIRD CATERPILLAR</td></tr></table> 54-82600 949170-4040 <table><tr><td>16614 16651 16656 16658 16824 16830</td><td>16881 16882 16896 16967 16981 16990</td></tr></table> 028000-5000 028000-5300 028000-5490 028000-5530 028000-5550 028000-5560 028000-5570 028000-5660 028000-5690 19.2mm OD x 87mm LONG RETURN SPRING, 2.5, 3.0, 4.5, 5.5KW STARTERS.	ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR	16614 16651 16656 16658 16824 16830	16881 16882 16896 16967 16981 16990	NIPPONDENSO  W485-33 NIPPONDENSO SOLENOID PLUNGER <table><tr><td>ALLIS-CHALMERS CASE</td><td>BLUE BIRD CATERPILLAR</td><td>BOBCAT CHEVROLET</td></tr></table> 053660-0443 14556 248-52037 66-82601 66-82605 S-5243 <table><tr><td>16614 16651 16656 16658 16824 16830</td><td>16881 16882 16896 16967 16981 16990</td></tr></table> 028000-5000 028000-5300 028000-5490 028000-5530 028000-5550 028000-5560 028000-5570 028000-5660 028000-5690 119mm OAL, 44.5mm CONTACT HEIGHT FLAT BOTTOM, 2.5, 3.0, 4.5, 5.5KW STARTERS, FOR PLUNGER SPRING W485-29, FOR STRIKER DISK W485-126, CAP W485-149, SEE W485-130 NOT	ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHEVROLET	16614 16651 16656 16658 16824 16830	16881 16882 16896 16967 16981 16990	NIPPONDENSO  W485-37 NIPPONDENSO IGNITION SWITCH TERMINAL EXTENDER <table><tr><td>CHRYSLER</td><td>DODGE</td><td>PLYMOUTH</td></tr></table> 028008-5120 03954 76-82557 S-5624 17020 128000-3500 128000-7500 4mm POST SET WITH W485-36, FOR COVER USE W485-40	CHRYSLER	DODGE	PLYMOUTH		
ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR															
16614 16651 16656 16658 16824 16830	16881 16882 16896 16967 16981 16990																
ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHEVROLET															
16614 16651 16656 16658 16824 16830	16881 16882 16896 16967 16981 16990																
CHRYSLER	DODGE	PLYMOUTH															
NIPPONDENSO  W485-31 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CHRYSLER PLYMOUTH</td><td>DODGE</td><td>FORD</td></tr></table> 053480-7050 14510 76-82559 S-5244 17007 17020 17084 <table><tr><td>128000-2570 128000-2580 128000-3500</td><td>128000-4960 128000-5270 128000-5280</td><td>128000-5670 128000-6320 128000-6500</td></tr></table> 4mm x 0.7mm THREAD GEAR REDUCTION STARTERS	CHRYSLER PLYMOUTH	DODGE	FORD	128000-2570 128000-2580 128000-3500	128000-4960 128000-5270 128000-5280	128000-5670 128000-6320 128000-6500	NIPPONDENSO  W485-34 NIPPONDENSO SOLENOID PLUNGER <table><tr><td>ACURA CASE</td><td>ALLIS-CHALMERS CATERPILLAR</td><td>CARRIER CHEVROLET</td></tr></table> 053660-0401 053660-0402 053660-7080 053660-7100 14555 195-52001 <table><tr><td>16248 16251 16578 16586 16600 16612</td><td>16650 16657 16674 16676 16696 16730</td></tr></table> 028000-3600 028000-4000 028000-4010 028000-4020 028000-4240 028000-4250 028000-4320 028000-4340 028000-4510 95.5mm OAL 1.0, 1.4, 2.0KW STARTERS, STRIKER DISK W485-102, CAP W485-148, FOR SHORT VERSION W485-63	ACURA CASE	ALLIS-CHALMERS CATERPILLAR	CARRIER CHEVROLET	16248 16251 16578 16586 16600 16612	16650 16657 16674 16676 16696 16730	NIPPONDENSO  W485-38 NIPPONDENSO IGNITION TERMINAL EXTENDER <table><tr><td>CHRYSLER</td><td>DODGE</td><td>PLYMOUTH</td></tr></table> 028008-5080 03958 76-82562 17007 128000-2570 128000-2580 4mm POST SET WITH TERMINAL W485-39, FOR COVER W485-40, HOUSING W485-42	CHRYSLER	DODGE	PLYMOUTH	
CHRYSLER PLYMOUTH	DODGE	FORD															
128000-2570 128000-2580 128000-3500	128000-4960 128000-5270 128000-5280	128000-5670 128000-6320 128000-6500															
ACURA CASE	ALLIS-CHALMERS CATERPILLAR	CARRIER CHEVROLET															
16248 16251 16578 16586 16600 16612	16650 16657 16674 16676 16696 16730																
CHRYSLER	DODGE	PLYMOUTH															

NIPPONDENSO  W485-39 NIPPONDENSO BATTERY TERMINAL EXTENSION <table> <tr> <th>CHRYSLER</th> <th>DODGE</th> <th>PLYMOUTH</th> </tr> <tr> <td>028008-5060 76-82563 17007</td> <td>028008-5061</td> <td>03957</td> </tr> <tr> <td>128000-2570</td> <td>128000-2580</td> <td></td> </tr> </table> 8mm POST SET WITH TERMINAL W485-38, COVER W485-40, HOUSING W485-42	CHRYSLER	DODGE	PLYMOUTH	028008-5060 76-82563 17007	028008-5061	03957	128000-2570	128000-2580		NIPPONDENSO  W485-42 NIPPONDENSO STARTER TERMINAL INSULATOR <table> <tr> <th>CHRYSLER</th> <th>DODGE</th> <th>PLYMOUTH</th> </tr> <tr> <td>028033-5020</td> <td>03959</td> <td>72-82102</td> </tr> <tr> <td>17007</td> <td></td> <td></td> </tr> <tr> <td>128000-2570</td> <td>128000-2580</td> <td></td> </tr> </table> PLASTIC USED WITH TERMINALS W485-38, W485-39, FOR COVER USE W485-40	CHRYSLER	DODGE	PLYMOUTH	028033-5020	03959	72-82102	17007			128000-2570	128000-2580		NIPPONDENSO  W485-47 NIPPONDENSO EXTERNAL POST INSULATOR <table> <tr> <th>ACURA CADILLAC</th> <th>ALLIS-CHALMERS CARRIER</th> <th>BOBCAT CASE</th> </tr> <tr> <td>185-52006</td> <td></td> <td></td> </tr> <tr> <td>16248 16586 16730 16736</td> <td>16600 16612 16737 16739</td> <td>16650 16696 16761 16786</td> </tr> <tr> <td>028000-4540</td> <td>028000-5390</td> <td>028000-5900</td> </tr> <tr> <td>028000-5910</td> <td>028000-6000</td> <td>028000-6360</td> </tr> <tr> <td>028000-6930</td> <td>028000-7000</td> <td>028000-7001</td> </tr> </table> 11.6mm ID, 19.5mm OD, 5.8mm THICK HIGH PROFILE, FOR INTERNAL INSULATOR USE W485-22.	ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE	185-52006			16248 16586 16730 16736	16600 16612 16737 16739	16650 16696 16761 16786	028000-4540	028000-5390	028000-5900	028000-5910	028000-6000	028000-6360	028000-6930	028000-7000	028000-7001
CHRYSLER	DODGE	PLYMOUTH																																							
028008-5060 76-82563 17007	028008-5061	03957																																							
128000-2570	128000-2580																																								
CHRYSLER	DODGE	PLYMOUTH																																							
028033-5020	03959	72-82102																																							
17007																																									
128000-2570	128000-2580																																								
ACURA CADILLAC	ALLIS-CHALMERS CARRIER	BOBCAT CASE																																							
185-52006																																									
16248 16586 16730 16736	16600 16612 16737 16739	16650 16696 16761 16786																																							
028000-4540	028000-5390	028000-5900																																							
028000-5910	028000-6000	028000-6360																																							
028000-6930	028000-7000	028000-7001																																							
NIPPONDENSO  W485-40 NIPPONDENSO TERMINAL COVER <table> <tr> <th>CHRYSLER</th> <th>DODGE</th> <th>PLYMOUTH</th> </tr> <tr> <td>028062-5260 72-82100 17007 17020</td> <td>028062-5261 S-5614</td> <td>14579</td> </tr> <tr> <td>128000-2570 128000-4960 128000-5670</td> <td>128000-2580 128000-5270 128000-6320</td> <td>128000-3500 128000-5280 128000-7500</td> </tr> </table> PLASTIC USED WITH W485-36, W485-37, W485-38, W485-39, W485-104, ALSO SEE W485-163	CHRYSLER	DODGE	PLYMOUTH	028062-5260 72-82100 17007 17020	028062-5261 S-5614	14579	128000-2570 128000-4960 128000-5670	128000-2580 128000-5270 128000-6320	128000-3500 128000-5280 128000-7500	NIPPONDENSO  W485-45 NIPPONDENSO SOLENOID CONTACT <table> <tr> <th>ACURA CASE</th> <th>BOBCAT CATERPILLAR</th> <th>CARRIER CHEVROLET</th> </tr> <tr> <td>03977 66-82759</td> <td>03977R S-5294</td> <td>248-52004</td> </tr> <tr> <td>17098 17170 17259 17273</td> <td>17197 17202 17423 17459</td> <td>17204 17242 17465 17487</td> </tr> <tr> <td>028099-7210 053400-9710 128000-7122</td> <td>028099-7450 053400-9852 128000-7140</td> <td>028099-9130 128000-7002 128000-8111</td> </tr> </table> LATE MODEL WITH SHORT FIELD CASE, SET WITH W485-11S, FOR OPPOSITE CONTACT SEE W485-57, FOR LARGER STYLE SEE W485-154.	ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET	03977 66-82759	03977R S-5294	248-52004	17098 17170 17259 17273	17197 17202 17423 17459	17204 17242 17465 17487	028099-7210 053400-9710 128000-7122	028099-7450 053400-9852 128000-7140	028099-9130 128000-7002 128000-8111	NIPPONDENSO  W485-48 NIPPONDENSO INTERNAL POST INSULATOR <table> <tr> <th>ALLIS-CHALMERS CASE</th> <th>BLUE BIRD CATERPILLAR</th> <th>BOBCAT CHEVROLET</th> </tr> <tr> <td>72-82412</td> <td></td> <td></td> </tr> <tr> <td>16614 16651 16967 17198</td> <td>16658 16824 17250 17283</td> <td>16830 16896 17286 17292</td> </tr> <tr> <td>028000-5000 028000-5530 028000-5570</td> <td>028000-5300 028000-5550 028000-5860</td> <td>028000-5490 028000-5560 028000-5880</td> </tr> </table> 10mm ID, SQUARE 2.5, 3.0, 4.0, 4.5, 5.5KW STARTERS, USED WITH W485-49, W485-50, IN KIT W485-27	ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHEVROLET	72-82412			16614 16651 16967 17198	16658 16824 17250 17283	16830 16896 17286 17292	028000-5000 028000-5530 028000-5570	028000-5300 028000-5550 028000-5860	028000-5490 028000-5560 028000-5880						
CHRYSLER	DODGE	PLYMOUTH																																							
028062-5260 72-82100 17007 17020	028062-5261 S-5614	14579																																							
128000-2570 128000-4960 128000-5670	128000-2580 128000-5270 128000-6320	128000-3500 128000-5280 128000-7500																																							
ACURA CASE	BOBCAT CATERPILLAR	CARRIER CHEVROLET																																							
03977 66-82759	03977R S-5294	248-52004																																							
17098 17170 17259 17273	17197 17202 17423 17459	17204 17242 17465 17487																																							
028099-7210 053400-9710 128000-7122	028099-7450 053400-9852 128000-7140	028099-9130 128000-7002 128000-8111																																							
ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CHEVROLET																																							
72-82412																																									
16614 16651 16967 17198	16658 16824 17250 17283	16830 16896 17286 17292																																							
028000-5000 028000-5530 028000-5570	028000-5300 028000-5550 028000-5860	028000-5490 028000-5560 028000-5880																																							
NIPPONDENSO  W485-41 NIPPONDENSO STARTER TERMINAL INSULATOR <table> <tr> <th>CHRYSLER</th> <th>DODGE</th> <th>PLYMOUTH</th> </tr> <tr> <td>028033-5070 03956 17020 17216</td> <td>028033-5180 72-82101</td> <td>028033-5220 S-5627</td> </tr> <tr> <td>128000-3500 128000-8031</td> <td>128000-7500</td> <td>128000-8030</td> </tr> </table> PLASTIC USED WITH W485-36, W485-37, W485-104, FOR COVER USE W485-40.	CHRYSLER	DODGE	PLYMOUTH	028033-5070 03956 17020 17216	028033-5180 72-82101	028033-5220 S-5627	128000-3500 128000-8031	128000-7500	128000-8030	NIPPONDENSO  W485-46 NIPPONDENSO SOLENOID CONTACT <table> <tr> <th>ALLIS-CHALMERS CATERPILLAR</th> <th>CARRIER CHEVROLET</th> <th>CASE CUB CADET</th> </tr> <tr> <td>03949 66-82758</td> <td>03976 S-5293</td> <td>248-52015</td> </tr> <tr> <td>16650 16739 17098 17101</td> <td>16822 16946 17129 17261</td> <td>17028 17091 17303 17341</td> </tr> <tr> <td>028000-4990 028000-7370 028000-8320</td> <td>028000-5390 028000-7660 028000-8371</td> <td>028000-7000 028000-8130 028000-8430</td> </tr> </table> 8mm ID HEAVY DUTY VERSION OF W485-11S, 1.0-2.0KW SERIES, SET WITH W485-11S.	ALLIS-CHALMERS CATERPILLAR	CARRIER CHEVROLET	CASE CUB CADET	03949 66-82758	03976 S-5293	248-52015	16650 16739 17098 17101	16822 16946 17129 17261	17028 17091 17303 17341	028000-4990 028000-7370 028000-8320	028000-5390 028000-7660 028000-8371	028000-7000 028000-8130 028000-8430	NIPPONDENSO  W485-49 NIPPONDENSO INTERNAL BATTERY INSULATOR <table> <tr> <th>ALLIS-CHALMERS CASE</th> <th>BLUE BIRD CATERPILLAR</th> <th>BOBCAT CLARK</th> </tr> <tr> <td>185-52009</td> <td>72-82410</td> <td></td> </tr> <tr> <td>16614 16651 16967 17100</td> <td>16658 16824 17101 17118</td> <td>16830 16896 17119 17198</td> </tr> <tr> <td>028000-5000 028000-5550 028000-5860</td> <td>028000-5300 028000-5560 028000-5880</td> <td>028000-5530 028000-5570 028000-6200</td> </tr> </table> 14mm ID 2.5, 3.0, 4.0, 4.5, 5.5KW STARTERS, USED WITH W485-48	ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CLARK	185-52009	72-82410		16614 16651 16967 17100	16658 16824 17101 17118	16830 16896 17119 17198	028000-5000 028000-5550 028000-5860	028000-5300 028000-5560 028000-5880	028000-5530 028000-5570 028000-6200						
CHRYSLER	DODGE	PLYMOUTH																																							
028033-5070 03956 17020 17216	028033-5180 72-82101	028033-5220 S-5627																																							
128000-3500 128000-8031	128000-7500	128000-8030																																							
ALLIS-CHALMERS CATERPILLAR	CARRIER CHEVROLET	CASE CUB CADET																																							
03949 66-82758	03976 S-5293	248-52015																																							
16650 16739 17098 17101	16822 16946 17129 17261	17028 17091 17303 17341																																							
028000-4990 028000-7370 028000-8320	028000-5390 028000-7660 028000-8371	028000-7000 028000-8130 028000-8430																																							
ALLIS-CHALMERS CASE	BLUE BIRD CATERPILLAR	BOBCAT CLARK																																							
185-52009	72-82410																																								
16614 16651 16967 17100	16658 16824 17101 17118	16830 16896 17119 17198																																							
028000-5000 028000-5550 028000-5860	028000-5300 028000-5560 028000-5880	028000-5530 028000-5570 028000-6200																																							

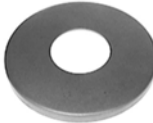
NIPPONDENSO  W485-50 NIPPONDENSO EXTERNAL TERMINAL INSULATOR <table> <tr> <td>ALLIS-CHALMERS CLARK</td> <td>BOBCAT FORD</td> <td>CASE FREIGHTLINER</td> </tr> </table> 185-52008 72-82413 <table> <tr> <td>16658 16824</td> <td>16830 16896</td> <td>17250 17283</td> </tr> <tr> <td>17286 17292</td> <td>17301 17302</td> <td>17348 17362</td> </tr> <tr> <td>028000-5300</td> <td>028000-5490</td> <td>028000-5530</td> </tr> <tr> <td>028000-5560</td> <td>028000-5570</td> <td>028000-5880</td> </tr> <tr> <td>028000-6200</td> <td>028000-6410</td> <td>028000-6560</td> </tr> </table> 14mm ID 2.5, 3.0KW STARTERS, USED WITH W485-48, IN KIT W485-27	ALLIS-CHALMERS CLARK	BOBCAT FORD	CASE FREIGHTLINER	16658 16824	16830 16896	17250 17283	17286 17292	17301 17302	17348 17362	028000-5300	028000-5490	028000-5530	028000-5560	028000-5570	028000-5880	028000-6200	028000-6410	028000-6560	NIPPONDENSO  W485-57 NIPPONDENSO SOLENOID CONTACT <table> <tr> <td>ACURA CATERPILLAR</td> <td>CARRIER CHRYSLER</td> <td>CASE DODGE</td> </tr> </table> 028099-7240 028099-7241 03975L 248-52003 66-82761 S-5263 <table> <tr> <td>16831 17020</td> <td>17098 17099</td> <td>17216 17240</td> </tr> <tr> <td>17256 17263</td> <td>17274 17278</td> <td>17285 17460</td> </tr> <tr> <td>028099-7230</td> <td>028099-8720</td> <td>028099-9380</td> </tr> <tr> <td>053400-9930</td> <td>128000-5350</td> <td>128000-7010</td> </tr> <tr> <td>128000-7390</td> <td>128000-7500</td> <td>128000-7560</td> </tr> </table> 8mm ID REVERSE OF W485-45, SET WITH W485-11S, FOR LARGER VERSION SEE W485-153.	ACURA CATERPILLAR	CARRIER CHRYSLER	CASE DODGE	16831 17020	17098 17099	17216 17240	17256 17263	17274 17278	17285 17460	028099-7230	028099-8720	028099-9380	053400-9930	128000-5350	128000-7010	128000-7390	128000-7500	128000-7560	NIPPONDENSO  W485-64 NIPPONDENSO SOLENOID CONTACT <table> <tr> <td>CASE DAEWOO</td> <td>CATERPILLAR HYSTER</td> <td>CLARK JOHN DEERE</td> </tr> </table> 03949 248-52010 66-82768 <table> <tr> <td>17100 17101</td> <td>17118 17365</td> <td>17374 17378</td> </tr> <tr> <td>17379 17384</td> <td>17392 17612</td> <td>17622</td> </tr> <tr> <td>028000-8230</td> <td>028000-8380</td> <td>028000-9820</td> </tr> <tr> <td>028000-9830</td> <td>028099-3580</td> <td>128000-0590</td> </tr> <tr> <td>128000-1040</td> <td>128000-1050</td> <td>128000-1770</td> </tr> </table> 10mm ID FOR INSULATOR USE W485-24, SET WITH W485-11S	CASE DAEWOO	CATERPILLAR HYSTER	CLARK JOHN DEERE	17100 17101	17118 17365	17374 17378	17379 17384	17392 17612	17622	028000-8230	028000-8380	028000-9820	028000-9830	028099-3580	128000-0590	128000-1040	128000-1050	128000-1770
ALLIS-CHALMERS CLARK	BOBCAT FORD	CASE FREIGHTLINER																																																						
16658 16824	16830 16896	17250 17283																																																						
17286 17292	17301 17302	17348 17362																																																						
028000-5300	028000-5490	028000-5530																																																						
028000-5560	028000-5570	028000-5880																																																						
028000-6200	028000-6410	028000-6560																																																						
ACURA CATERPILLAR	CARRIER CHRYSLER	CASE DODGE																																																						
16831 17020	17098 17099	17216 17240																																																						
17256 17263	17274 17278	17285 17460																																																						
028099-7230	028099-8720	028099-9380																																																						
053400-9930	128000-5350	128000-7010																																																						
128000-7390	128000-7500	128000-7560																																																						
CASE DAEWOO	CATERPILLAR HYSTER	CLARK JOHN DEERE																																																						
17100 17101	17118 17365	17374 17378																																																						
17379 17384	17392 17612	17622																																																						
028000-8230	028000-8380	028000-9820																																																						
028000-9830	028099-3580	128000-0590																																																						
128000-1040	128000-1050	128000-1770																																																						
NIPPONDENSO  W485-53 NIPPONDENSO TERMINAL BOOT <table> <tr> <td>CHRYSLER</td> <td>DODGE</td> <td>PLYMOUTH</td> </tr> </table> 028062-5310 71-82304 17007 128000-2570 128000-2580 LEFT RUBBER, OPPOSITE OF W485-107	CHRYSLER	DODGE	PLYMOUTH	NIPPONDENSO  W485-58 NIPPONDENSO RUBBER SOLENOID GASKET <table> <tr> <td>ACURA CARRIER</td> <td>ALLIS-CHALMERS CASE</td> <td>CADILLAC CATERPILLAR</td> </tr> </table> 053404-0320 053404-7020 180-52007 66-82401 <table> <tr> <td>16248 16586</td> <td>16600 16612</td> <td>16650 16696</td> </tr> <tr> <td>16730 16736</td> <td>16737 16739</td> <td>16761 16786</td> </tr> <tr> <td>028000-4540</td> <td>028000-5900</td> <td>028000-5910</td> </tr> <tr> <td>028000-6000</td> <td>028000-6360</td> <td>028000-6930</td> </tr> <tr> <td>028000-7000</td> <td>028000-7001</td> <td>028000-7190</td> </tr> </table> 1.0, 1.2, 1.4KW GEAR REDUCTION APPLICATIONS	ACURA CARRIER	ALLIS-CHALMERS CASE	CADILLAC CATERPILLAR	16248 16586	16600 16612	16650 16696	16730 16736	16737 16739	16761 16786	028000-4540	028000-5900	028000-5910	028000-6000	028000-6360	028000-6930	028000-7000	028000-7001	028000-7190	NIPPONDENSO  W485-65 NIPPONDENSO SOLENOID CONTACT <table> <tr> <td>CATERPILLAR</td> <td>HYSTER</td> <td>YALE</td> </tr> </table> 028099-5620 17119 028000-8390 028099-5620 10mm ID INDUSTRIAL, FOR 8mm ID VERSION USE W485-11L	CATERPILLAR	HYSTER	YALE																														
CHRYSLER	DODGE	PLYMOUTH																																																						
ACURA CARRIER	ALLIS-CHALMERS CASE	CADILLAC CATERPILLAR																																																						
16248 16586	16600 16612	16650 16696																																																						
16730 16736	16737 16739	16761 16786																																																						
028000-4540	028000-5900	028000-5910																																																						
028000-6000	028000-6360	028000-6930																																																						
028000-7000	028000-7001	028000-7190																																																						
CATERPILLAR	HYSTER	YALE																																																						
NIPPONDENSO  W485-55 NIPPONDENSO FIELD GROMMET <table> <tr> <td>ACURA CASE</td> <td>CADILLAC CATERPILLAR</td> <td>CARRIER CHEVROLET</td> </tr> </table> 14577 180-52022 71-82308 <table> <tr> <td>16600 16650</td> <td>16696 16737</td> <td>16790 16802</td> </tr> <tr> <td>16823 16829</td> <td>16834 16837</td> <td>16839 16884</td> </tr> <tr> <td>028000-7700</td> <td>028000-8620</td> <td>028000-9270</td> </tr> <tr> <td>028000-9320</td> <td>028000-9340</td> <td>028000-9380</td> </tr> <tr> <td>028000-9730</td> <td>028000-9800</td> <td>028000-9860</td> </tr> </table> 8mm ID, 69mm OAL 1.4KW GEAR REDUCTION STARTERS WITH CAST ALUMINUM FRAMES	ACURA CASE	CADILLAC CATERPILLAR	CARRIER CHEVROLET	16600 16650	16696 16737	16790 16802	16823 16829	16834 16837	16839 16884	028000-7700	028000-8620	028000-9270	028000-9320	028000-9340	028000-9380	028000-9730	028000-9800	028000-9860	NIPPONDENSO  W485-63 NIPPONDENSO SOLENOID PLUNGER <table> <tr> <td>ACURA CATERPILLAR</td> <td>CARRIER CHEVROLET</td> <td>CASE CHRYSLER</td> </tr> </table> 053660-7120 053660-7121 053660-7190 053660-7360 053660-7521 14558 <table> <tr> <td>16831 17020</td> <td>17098 17099</td> <td>17197 17202</td> </tr> <tr> <td>17204 17216</td> <td>17240 17242</td> <td>17256 17259</td> </tr> <tr> <td>053400-9710</td> <td>053400-9852</td> <td>053400-9922</td> </tr> <tr> <td>053400-9930</td> <td>128000-5350</td> <td>128000-7002</td> </tr> <tr> <td>128000-7010</td> <td>128000-7122</td> <td>128000-7140</td> </tr> </table> 96.5mm TOTAL LENGTH FOR LATE STYLE, SHORT SOLENOID CASE, SMALLER CONTACT DISK, FOR DISK ONLY W485-103, CAP W485-149	ACURA CATERPILLAR	CARRIER CHEVROLET	CASE CHRYSLER	16831 17020	17098 17099	17197 17202	17204 17216	17240 17242	17256 17259	053400-9710	053400-9852	053400-9922	053400-9930	128000-5350	128000-7002	128000-7010	128000-7122	128000-7140	NIPPONDENSO  W485-67 NIPPONDENSO TERMINAL BLOCK <table> <tr> <td>CHRYSLER</td> <td>DODGE</td> <td>PLYMOUTH</td> </tr> </table> 053480-7100 14554 4467177 463-52004 76-82558 17084 <table> <tr> <td>128000-4960</td> <td>128000-5270</td> <td>128000-5280</td> </tr> <tr> <td>128000-5670</td> <td>128000-6320</td> <td></td> </tr> </table> 8mm/4mm POSTS BATTERY AND IGNITION TERMINAL BLOCK, USED WITH W485-40 COVER, FOR 8mm/5mm POST STYLE SEE W485-117	CHRYSLER	DODGE	PLYMOUTH	128000-4960	128000-5270	128000-5280	128000-5670	128000-6320										
ACURA CASE	CADILLAC CATERPILLAR	CARRIER CHEVROLET																																																						
16600 16650	16696 16737	16790 16802																																																						
16823 16829	16834 16837	16839 16884																																																						
028000-7700	028000-8620	028000-9270																																																						
028000-9320	028000-9340	028000-9380																																																						
028000-9730	028000-9800	028000-9860																																																						
ACURA CATERPILLAR	CARRIER CHEVROLET	CASE CHRYSLER																																																						
16831 17020	17098 17099	17197 17202																																																						
17204 17216	17240 17242	17256 17259																																																						
053400-9710	053400-9852	053400-9922																																																						
053400-9930	128000-5350	128000-7002																																																						
128000-7010	128000-7122	128000-7140																																																						
CHRYSLER	DODGE	PLYMOUTH																																																						
128000-4960	128000-5270	128000-5280																																																						
128000-5670	128000-6320																																																							

NIPPONDENSO  W485-69 NIPPONDENSO TERMINAL BLOCK <table><tr><td>BARKO CASE</td><td>BLUE BIRD CHAMPION</td><td>BOBCAT CHEVROLET</td></tr></table><table><tr><td>053480-0110 76-82575</td><td>053480-0250</td><td>248-52034</td></tr></table><table><tr><td>16614 16656 16896 16990</td><td>16824 16830 17198 17199</td><td>16881 16882 17250 17286</td></tr></table><table><tr><td>028000-5300</td><td>028000-5530</td><td>028000-5560</td></tr><tr><td>028000-5570</td><td>028000-5660</td><td>028000-5690</td></tr><tr><td>028000-5860</td><td>028000-6060</td><td>028000-6200</td></tr></table> 5mm THREADED HOLE 2.5KW. FOR 8/32" THREADED HOLE USE W485-32, ALTERNATE W485-150	BARKO CASE	BLUE BIRD CHAMPION	BOBCAT CHEVROLET	053480-0110 76-82575	053480-0250	248-52034	16614 16656 16896 16990	16824 16830 17198 17199	16881 16882 17250 17286	028000-5300	028000-5530	028000-5560	028000-5570	028000-5660	028000-5690	028000-5860	028000-6060	028000-6200	NIPPONDENSO  W485-75 NIPPONDENSO FIELD TERMINAL COVER <table><tr><td>CHEVROLET GEO</td><td>DAIHATSU HONDA</td><td>FORD ISUZU</td></tr></table> 028033-0100 <table><tr><td>16218 16245 16843 16880</td><td>16468 16735 16883 16911</td><td>16766 16832 17278 17350</td></tr></table><table><tr><td>0-001-107-044</td><td>028000-5330</td><td>028000-6380</td></tr><tr><td>028000-6490</td><td>028000-6520</td><td>028000-6600</td></tr><tr><td>028000-6650</td><td>028000-6720</td><td>028000-6803</td></tr></table> PLASTIC, USED ON SOLENOIDS W455-29, W455-60	CHEVROLET GEO	DAIHATSU HONDA	FORD ISUZU	16218 16245 16843 16880	16468 16735 16883 16911	16766 16832 17278 17350	0-001-107-044	028000-5330	028000-6380	028000-6490	028000-6520	028000-6600	028000-6650	028000-6720	028000-6803	NIPPONDENSO  W485-80 NIPPONDENSO SOLENOID CONTACT KIT <table><tr><td>ALLIS-CHALMERS BOBCAT</td><td>BARKO CASE</td><td>BLUE BIRD CATERPILLAR</td></tr></table><table><tr><td>028099-2690 128099-5380</td><td>028099-3160</td><td>028099-5100</td></tr></table><table><tr><td>16651 16656 17198 17199</td><td>16658 16830 17215 17250</td><td>16882 16990 17292 17301</td></tr></table><table><tr><td>028000-5000</td><td>028000-5490</td><td>028000-5660</td></tr><tr><td>028000-5690</td><td>028000-5880</td><td>028000-6060</td></tr><tr><td>028000-6210</td><td>028000-6340</td><td>028000-6410</td></tr></table> 10mm POST MOTOR SIDE, FOR CONTACT W485-13 OR W485-100, CONTACT STUD W485-135, INSULATOR W485-48 & W485-49	ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR	028099-2690 128099-5380	028099-3160	028099-5100	16651 16656 17198 17199	16658 16830 17215 17250	16882 16990 17292 17301	028000-5000	028000-5490	028000-5660	028000-5690	028000-5880	028000-6060	028000-6210	028000-6340	028000-6410
BARKO CASE	BLUE BIRD CHAMPION	BOBCAT CHEVROLET																																																			
053480-0110 76-82575	053480-0250	248-52034																																																			
16614 16656 16896 16990	16824 16830 17198 17199	16881 16882 17250 17286																																																			
028000-5300	028000-5530	028000-5560																																																			
028000-5570	028000-5660	028000-5690																																																			
028000-5860	028000-6060	028000-6200																																																			
CHEVROLET GEO	DAIHATSU HONDA	FORD ISUZU																																																			
16218 16245 16843 16880	16468 16735 16883 16911	16766 16832 17278 17350																																																			
0-001-107-044	028000-5330	028000-6380																																																			
028000-6490	028000-6520	028000-6600																																																			
028000-6650	028000-6720	028000-6803																																																			
ALLIS-CHALMERS BOBCAT	BARKO CASE	BLUE BIRD CATERPILLAR																																																			
028099-2690 128099-5380	028099-3160	028099-5100																																																			
16651 16656 17198 17199	16658 16830 17215 17250	16882 16990 17292 17301																																																			
028000-5000	028000-5490	028000-5660																																																			
028000-5690	028000-5880	028000-6060																																																			
028000-6210	028000-6340	028000-6410																																																			
NIPPONDENSO  W485-70 NIPPONDENSO TERMINAL BLOCK <table><tr><td>CHRYSLER ISUZU</td><td>DODGE PLYMOUTH</td><td>EAGLE TOYOTA</td></tr></table><table><tr><td>053480-7220 248-52045</td><td>053480-7310 76-82565</td><td>14589 76-82569</td></tr></table><table><tr><td>16831 17197 17570 17571</td><td>17278 17460 17735 17893</td><td>17465 17562 18410 18515</td></tr></table><table><tr><td>053400-9710</td><td>053400-9930</td><td>128000-7140</td></tr><tr><td>128000-9380</td><td>128000-9730</td><td>128000-9740</td></tr><tr><td>153400-0380</td><td>153400-1910</td><td>228000-0360</td></tr></table> 1/4" SPADE SILVER BODY STARTERS	CHRYSLER ISUZU	DODGE PLYMOUTH	EAGLE TOYOTA	053480-7220 248-52045	053480-7310 76-82565	14589 76-82569	16831 17197 17570 17571	17278 17460 17735 17893	17465 17562 18410 18515	053400-9710	053400-9930	128000-7140	128000-9380	128000-9730	128000-9740	153400-0380	153400-1910	228000-0360	NIPPONDENSO  W485-78 NIPPONDENSO RUBBER DRAIN PLUG <table><tr><td>CARRIER CUMMINS</td><td>CATERPILLAR DODGE</td><td>CHRYSLER GEO</td></tr></table><table><tr><td>028062-0500 180-52006</td><td>028062-5150 71-82311</td><td>028062-5670</td></tr></table><table><tr><td>16650 16834 17084 17125</td><td>16881 16946 17202 17204</td><td>17002 17020 17215 17256</td></tr></table><table><tr><td>028000-9380</td><td>128000-0070</td><td>128000-0071</td></tr><tr><td>128000-0170</td><td>128000-0180</td><td>128000-0181</td></tr><tr><td>128000-0490</td><td>128000-1770</td><td>128000-2450</td></tr></table> FOR 12mm ID HOLE WITH 4mm WALL SIMILAR TO W485-16	CARRIER CUMMINS	CATERPILLAR DODGE	CHRYSLER GEO	028062-0500 180-52006	028062-5150 71-82311	028062-5670	16650 16834 17084 17125	16881 16946 17202 17204	17002 17020 17215 17256	028000-9380	128000-0070	128000-0071	128000-0170	128000-0180	128000-0181	128000-0490	128000-1770	128000-2450	NIPPONDENSO  W485-82 NIPPONDENSO SOLENOID INSULATOR PLATE TOYOTA 128000-0220 32.7mm x 55.6mm x 2.0mm THICK 1.0, 1.4KW GEAR REDUCTION STARTERS															
CHRYSLER ISUZU	DODGE PLYMOUTH	EAGLE TOYOTA																																																			
053480-7220 248-52045	053480-7310 76-82565	14589 76-82569																																																			
16831 17197 17570 17571	17278 17460 17735 17893	17465 17562 18410 18515																																																			
053400-9710	053400-9930	128000-7140																																																			
128000-9380	128000-9730	128000-9740																																																			
153400-0380	153400-1910	228000-0360																																																			
CARRIER CUMMINS	CATERPILLAR DODGE	CHRYSLER GEO																																																			
028062-0500 180-52006	028062-5150 71-82311	028062-5670																																																			
16650 16834 17084 17125	16881 16946 17202 17204	17002 17020 17215 17256																																																			
028000-9380	128000-0070	128000-0071																																																			
128000-0170	128000-0180	128000-0181																																																			
128000-0490	128000-1770	128000-2450																																																			
NIPPONDENSO  W485-74 NIPPONDENSO SOLENOID CONTACT <table><tr><td>HARLEY DAVIDSON</td><td>TELEDYNE</td></tr></table><table><tr><td>248-52024</td><td>66-82773</td></tr></table><table><tr><td>17617 17620</td><td></td></tr></table><table><tr><td>128000-5750</td><td>128000-6350</td></tr></table> 8mm ID REVERSE OF W485-11L, USED WITH W485-11S	HARLEY DAVIDSON	TELEDYNE	248-52024	66-82773	17617 17620		128000-5750	128000-6350	NIPPONDENSO  W485-79 NIPPONDENSO SOLENOID CONTACT KIT <table><tr><td>ALLIS-CHALMERS CASE</td><td>CADILLAC CHEVROLET</td><td>CARRIER CHRYSLER</td></tr></table><table><tr><td>028099-2680 028099-3031</td><td>028099-2820 028099-3040</td><td>028099-3030 028099-3760</td></tr></table><table><tr><td>16645 16647 16739 16878</td><td>16650 16656 16890 16946</td><td>16657 16696 17007 17014</td></tr></table><table><tr><td>028000-4201</td><td>028000-4730</td><td>028000-4990</td></tr><tr><td>028000-5060</td><td>028000-5390</td><td>028000-5730</td></tr><tr><td>028000-5800</td><td>028000-6140</td><td>028000-6250</td></tr></table> 8mm POST MOST COMMON 1.0, 1.3, 1.4, 1.6, 2.0KW STARTERS, HAS EXTRA CONTACT SURFACE, POSITIVE SIDE	ALLIS-CHALMERS CASE	CADILLAC CHEVROLET	CARRIER CHRYSLER	028099-2680 028099-3031	028099-2820 028099-3040	028099-3030 028099-3760	16645 16647 16739 16878	16650 16656 16890 16946	16657 16696 17007 17014	028000-4201	028000-4730	028000-4990	028000-5060	028000-5390	028000-5730	028000-5800	028000-6140	028000-6250	NIPPONDENSO  W485-83 NIPPONDENSO SOLENOID INSULATOR PLATE <table><tr><td>ACURA CHRYSLER</td><td>CASE DODGE</td><td>CATERPILLAR EAGLE</td></tr></table><table><tr><td>16831 17098 17204 17216</td><td>17099 17170 17240 17242</td><td>17197 17202 17256 17259</td></tr></table><table><tr><td>128000-5350</td><td>128000-7002</td><td>128000-7010</td></tr><tr><td>128000-7122</td><td>128000-7140</td><td>128000-7390</td></tr><tr><td>128000-7560</td><td>128000-7713</td><td>128000-7810</td></tr></table> 1.5mm THICK 1.0-2.0KW	ACURA CHRYSLER	CASE DODGE	CATERPILLAR EAGLE	16831 17098 17204 17216	17099 17170 17240 17242	17197 17202 17256 17259	128000-5350	128000-7002	128000-7010	128000-7122	128000-7140	128000-7390	128000-7560	128000-7713	128000-7810										
HARLEY DAVIDSON	TELEDYNE																																																				
248-52024	66-82773																																																				
17617 17620																																																					
128000-5750	128000-6350																																																				
ALLIS-CHALMERS CASE	CADILLAC CHEVROLET	CARRIER CHRYSLER																																																			
028099-2680 028099-3031	028099-2820 028099-3040	028099-3030 028099-3760																																																			
16645 16647 16739 16878	16650 16656 16890 16946	16657 16696 17007 17014																																																			
028000-4201	028000-4730	028000-4990																																																			
028000-5060	028000-5390	028000-5730																																																			
028000-5800	028000-6140	028000-6250																																																			
ACURA CHRYSLER	CASE DODGE	CATERPILLAR EAGLE																																																			
16831 17098 17204 17216	17099 17170 17240 17242	17197 17202 17256 17259																																																			
128000-5350	128000-7002	128000-7010																																																			
128000-7122	128000-7140	128000-7390																																																			
128000-7560	128000-7713	128000-7810																																																			

NIPPONDENSO  W485-84 NIPPONDENSO SOLENOID INSULATOR PLATE CHEVROLET SUBARU FORD TOYOTA ISHIKAWAJIMA 166121669616802168231682617366 028000-6000028000-9800028000-8050128000-9860028000-9730128000-0100 1.3mm THICK FIBERGLASS	NIPPONDENSO  W485-91 NIPPONDENSO HEAT SHIELD VIBRATION PLUG CHRYSLER DODGE PLYMOUTH 028064-004076-82808 1700717084 128000-2570128000-5280128000-2580128000-5270 5mm ID HOLE, 10mm OD BLUE USED ON HEAT SHIELDS	NIPPONDENSO  W485-96 NIPPONDENSO RUBBER DRAIN PLUG ACURA CATERPILLAR BOBCAT CHRYSLER CASE CLARK 028065-001019550168271683117251172591689517020172631737917197172041745917487 028000-6360128000-3670128000-8401128000-1440128000-5840128000-8784128000-2210128000-7500128000-9190 FOR 6mm HOLE WITH 2mm THICK WALL FITS MOST LATE GEAR REDUCTION, FOR AFTERMARKET ALL RUBBER VERSION USE W485-98
NIPPONDENSO  W485-85 NIPPONDENSO SOLENOID INSULATOR PLATE VOLKSWAGEN 0-001-107-070 2.1mm THICK FIBERGLASS	NIPPONDENSO  W485-93 NIPPONDENSO TERMINAL BLOCK CASE HONDA GEO ISEKI HARLEY DAVIDSON ISHIKAWAJIMA 053480-7240053480-732076-82565 170981748117240175241725617629172591763217263180191742318139 128000-7010128000-8210128000-8360128000-7390128000-8220128000-8401128000-7560128000-8350128000-8410 1/4" SPADE SILVER BODY STARTERS, SIMILAR TO W485-70 NOTICE SOLDER CONNECTION POINTED UP	NIPPONDENSO  W485-98 NIPPONDENSO RUBBER DRAIN PLUG ACURA BOBCAT BARKO BOMBARDIER BLUE BIRD CARRIER 028062-5710028065-0010168311699017202172031709817170172041721617197171991724017242 028000-7800128000-0930128000-5350028000-7801128000-2210128000-5680028000-8402128000-4100128000-5722 FOR 6mm HOLE WITH 2mm THICK WALL FITS MOST LATE GEAR REDUCTION STARTERS, ALTERNATE SNAP STYLE W485-96
NIPPONDENSO  W485-90 NIPPONDENSO HEAT SHIELD VIBRATION PLUG CHRYSLER PLYMOUTH DODGE TOYOTA HARLEY DAVIDSON 028062-544071-82313 1624816760170841762918199 028000-4240128000-5280028000-4250128000-8220128000-5270228000-2550 9mm HOLE, 16mm OD USED IN CE FRAME TO CUSHION HEAT SHIELD, ALSO CAN BE USED TO FILL UNWANTED BATTERY, MOTOR POSTS, "S", "R" HOLES, FROM 9mm TO 11.5mm ID IN	NIPPONDENSO  W485-94 NIPPONDENSO DRAIN PLUG CAP CHEVROLET SUBARU HARLEY DAVIDSON TOYOTA HONDA 028062-009171-82316 1624816761173521761716913171431717017254 028000-4540028000-7390128000-2690028000-7300128000-0280128000-5080028000-7321128000-2180128000-5700 FITS RECTANGULAR HOLE 6mm x 8mm FOR CE FRAME 1.0 - 1.2KW.	NIPPONDENSO  W485-99 NIPPONDENSO RUBBER DRAIN PLUG CHEVROLET DAIHATSU TOYOTA 028062-5411 1679017091172981742217579 028000-9270128000-4951128000-8200128000-1250128000-7210128000-4950128000-8111 FOR 9mm HOLE WITH 7mm THICK WALL CORNER MOUNT

NIPPONDENSO UNIVERSAL  WAS1.685 NIPPONDENSO DRIVE CAP BOBCAT GEO ISUZU KUBOTA TOYOTA YANMAR 17203 17252 17253 17679 17680 18414 18417 18418 19749 19791 128000-5680 128000-7400 128000-8530 128000-8531 128000-8890 128000-8891 228000-4020 228000-4030 228000-5400 42.8mm ID, 32.9mm HOLE, 14.0mm L (1.685", 1.295", 0.551") FITS W475-132, W475-133	BOSCH NIPPONDENSO UNIVERSAL  WAS28 STARTER DRIVE SPRING ALFA ROMEO PORSCHE VOLKSWAGEN 16339 16450 16551 0-001-211-001 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 W470-05 W470-06 W470-07 W470-08 4.19mm OD, 20.06mm L, (.165" x .790" L) FOR 5 ROLLER DRIVES, ALSO USED IN NIPPONDENSO DD DRIVES	NIPPONDENSO UNIVERSAL  WAS38 STARTER DRIVE SPRING ALLIS-CHALMERS BOBCAT CASE CATERPILLAR CLARK CUMMINS 54-82605 16614 16651 16656 16658 16824 16830 16881 16896 16967 16990 17283 17286 023800-5380 028000-5000 028000-5300 028000-5490 028000-5530 028000-5550 028000-5560 028000-5570 028000-5660 5.71mm OD, 21.72mm L, (.225" x .855" L) FOR 2.5KW GEAR REDUCTION DRIVE CLUTCHES, . SET 10 AND 10 WAS302-510 ROLLERS
NIPPONDENSO UNIVERSAL  WAS102 STARTER DRIVE SPRING ACURA CATERPILLAR CHEVROLET CHRYSLER DAIHATSU DODGE 54-82601 16248 16251 16578 16586 16600 16612 16650 16674 16676 16696 16730 16736 028000-4010 028000-4240 028000-4250 028000-4320 028000-4340 028000-4510 028000-4540 028000-4551 028000-4940 7.0mm x 12.2mm L, (.276" OD x .480" L) 1.1KW, 1.2Kw, 1.3Kw, 1.4Kw, 1.9Kw MOST COMMON GEAR REDUCTION DRIVE CLUTCHES, FOR ROLLER USE WAS302-510	MITSUBISHI NIPPONDENSO UNIVERSAL  WAS302-510 STARTER DRIVE ROLLER ACURA ALLIS-CHALMERS BARKO BLUE BIRD BOBCAT CASE 028306-0070 54-82500 16248 16251 16578 16586 16600 16612 16614 16650 16651 16656 16658 16674 023800-5380 028000-4010 028000-4240 028000-4250 028000-4320 028000-4340 028000-4510 028000-4540 028000-4551 7.67mm OD, 12.95mm L, (.302" x .510" L) 1.1KW, 1.2KW, 1.3KW, 1.4KW, 1.9KW, 2.5KW. MOST COMMON GEAR REDUCTION DRIVE CLUTCH, SPRINGS WAS102, WAS38, WAS40	HITACHI LUCAS MITSUBA NIPPONDENSO UNIVERSAL  WAS40 STARTER DRIVE SPRING BUICK CASE CATERPILLAR CLARK DODGE FORD 54-82607 16286 16287 16288 16606 16608 16660 16670 16733 16744 16799 16809 16815 028300-5381 028300-7802 228000-2291 228000-2292 228000-6471 26211M/T 26211U 26227R/V 26265J/M 4.5mm x 12.34mm x 14.5mm L, (.177" x .486" x .570" L) STRONGER TENSION THAN WAS70-4 SPRING, ALSO USED IN HITACHI, LUCAS, MITSUBISHI, NIPPONDENSO DRIVE CLUTCHES
HITACHI NIPPONDENSO UNIVERSAL  WAS276-470 STARTER DRIVE ROLLER ACURA ALLIS-CHALMERS CATERPILLAR CHEVROLET CHRYSLER DODGE 54-81501 16540 16584 16611 16694 16733 16739 16740 16803 16806 16807 16809 16811 028000-6280 028000-6350 028000-6400 028000-7000 028000-7640 028000-8130 028000-8251 028000-8371 028000-9670 7.01mm OD, 11.94mm L, (.276" x .470" L) USED ON SMALL INNER RACE STYLE CLUTCHES, SPRINGS WAS70-4, WAS40	MITSUBISHI NIPPONDENSO UNIVERSAL  WAS306-510 STARTER DRIVE ROLLER 7.77mm OD, 12.95mm L (.306" x .510" L) NIPPONDENSO OSGR STARTERS, FOR WORN DRIVE RACES AND A TIGHTER FIT THAN WAS302-510	HITACHI MITSUBA MITSUBISHI NIPPONDENSO UNIVERSAL  WAS70-4 STARTER DRIVE SPRING ACURA AUDI CHEVROLET CHRYSLER DODGE HONDA 54-81600 16540 16584 16611 16694 16720 16740 16780 16803 16806 16807 16811 16814 028301-0010 428000-0870 428000-1520 M1T50071 M1T50471 M2T50181 M2T52071 M2T52081 M2T52172 4.14mm x 11.33mm x 12.7mm L, (.163" x .446" x .500" L) GEAR REDUCTION DRIVE CLUTCHES, W475-74, W475- 90 USED FOR MANY GASOLINE APPLICATIONS WITH SMALL PINIONS

DELCO UNIVERSAL  WAS1.639 DELCO DRIVE CAP 41.7mm ID, 28.5mm HOLE, 15.5mm L, (1.639" ID, 1.12" HOLE, 0.6" L) DRIVE CAP	MITSUBISHI UNIVERSAL  WAS1.725B STARTER DRIVE CAP ONAN 17332 MEA10-7 W475-29 43.8mm ID, 40.1mm HOLE, 17.5mm L (1.725", 1.580", 0.687") USED ON W475-29 DRIVE	BOSCH MITSUBISHI UNIVERSAL  WAS1.815 STARTER DRIVE CAP ALFA ROMEO BMW FIAT MERCEDES MERCURY MITSUBISHI MOTOR 54-91700 16299 16353 16462 16531 16539 16550 16557 16593 16616 16619 16683 17236 0-001-108-054 0-001-108-065 0-001-108-115 0-001-108-145 0-001-208-211 0-001-208-405 0-001-211-207 0-001-211-242 0-001-311-100 46.0mm ID, 31.8mm HOLE, 18.8mm L (1.815", 1.250", 0.740") FOR COMMON 6 ROLLER DRIVES: W470-20, W470-30, W470-36
NIPPONDENSO UNIVERSAL  WAS1.685 NIPPONDENSO DRIVE CAP BOBCAT GEO ISUZU KUBOTA TOYOTA YANMAR 17203 17252 17253 17679 17680 18414 18417 18418 19749 19791 128000-5680 128000-7400 128000-8530 128000-8531 128000-8890 128000-8891 228000-4020 228000-4030 228000-5400 42.8mm ID, 32.9mm HOLE, 14.0mm L (1.685", 1.295", 0.551") FITS W475-132, W475-133	MITSUBISHI UNIVERSAL  WAS1.725C STARTER DRIVE CAP HYSTER MAZDA 54-83707 16795 16856 M3T10473 M3T10475 M3T10476 M3T36081 M3T36481 W475-18 W475-24 43.8mm ID, 36.1mm HOLE, 17.5mm L (1.725", 1.422", 0.687") FITS W475-18, W475-24 DRIVES	HITACHI UNIVERSAL  WAS1.855 STARTER DRIVE CAP NISSAN 16817 17146 17161 17196 17454 31338 S114-503A S114-516 S114-516A S114-517C S114-519A S114-520B S114-525 S114-525A S114-527 47.1mm ID, 30.6mm HOLE, 26.1mm L (1.855", 1.205", 1.027") FITS DRIVES W475-57, 16817, 17146, 17161, 17190, 17196, 17454
MITSUBISHI UNIVERSAL  WAS1.725 STARTER DRIVE CAP CHEVROLET DODGE EAGLE FORD GEO MAZDA 54-83703 16514 16527 16569 16579 16708 16728 16742 16859 16922 16938 16940 16966 M191T27571 M2T10071 M2T20181 M2T20182 M3T10172 M3T25781 M3T25782 M3T25783 M3T25882 43.8mm ID, 32.4mm HOLE, 17.5mm L (1.725", 1.275", 0.687") FITS W475-12, W475-31 DRIVES, FOR SPRINGS USE WAS10	DELCO UNIVERSAL  WAS1.747 DELCO STARTER DRIVE CAP HYUNDAI KIA 17989 8000169 44mm ID x 30mm HOLE, 17mm L (1.732" x 1.181" x .669" L) SPRINGS WAS70-5, ROLLERS WAS214-440	HITACHI MITSUBISHI UNIVERSAL  WAS10 STARTER DRIVE SPRING CHEVROLET DODGE EAGLE FORD GEO HYSTER 16194 16246 16514 16527 16569 16579 16708 16728 16742 16795 16856 16859 2114-55100 M0T206722C M191T27571 M2T10071 M2T20181 M2T20182 M3T10172 M3T10473 M3T10475 4.5 x 8.9 x 11.7mm L, (.178" x .354" x .460" L) FOR MOST COMMON SMALL MITSUBISHI DRIVES

NIPPONDENSO UNIVERSAL  WAS102 STARTER DRIVE SPRING ACURA CATERPILLAR CHEVROLET CHRYSLER DAIHATSU DODGE 54-82601 16248 16251 16578 16586 16600 16612 16650 16674 16676 16696 16730 16736 028000-4010 028000-4240 028000-4250 028000-4320 028000-4340 028000-4510 028000-4540 028000-4551 028000-4940 7.0mm x 12.2mm L, (.276" OD x .480" L) 1.1KW, 1.2Kw, 1.3Kw, 1.4Kw, 1.9Kw MOST COMMON GEAR REDUCTION DRIVE CLUTCHES, FOR ROLLER USE WAS302-510	mitsubishi UNIVERSAL  WAS2.125 STARTER DRIVE CAP AUDI CASE CATERPILLAR CHRYSLER CLARK DODGE 16584 16720 16780 16866 16875 16935 16947 17097 17110 17141 17172 17173 M191T70771 M191T70971 M1T50071 M1T50471 M2T50181 M2T50281 M2T50285 M2T50371 M2T50381 54.0mm ID, 21.3mm HOLE, 4.6mm L (2.125", 0.837", 0.180") FITS W475-74, W475-90 DRIVES, SPRINGS WAS40, WAS70-4, ROLLERS WAS238-540.	BOSCH UNIVERSAL  WAS2.300 BOSCH DRIVE CAP 58mm ID, 45mm HOLE, 27mm L, (2.300" ID, 1.75 HOLE, 1.10 L)
MITSUBISHI UNIVERSAL  WAS16815 STARTER DRIVE CAP FORD INFINITI MAZDA NISSAN 16815 17179 17471 17544 M2T25281 M2T25282 M2T25581 M2T25681 M3T26685 54.0mm ID, 50.7mm HOLE, 7.6mm L (2.125", 1.994", 0.300") FOR SPRINGS USE WAS40, ROLLERS WAS238-540 (5) EACH	BOSCH UNIVERSAL  WAS2.190 BOSCH DRIVE CAP 55.6mm ID, 39.9mm HOLE, 25.4mm L (2.190", 1.570", 1.000") BOSCH INDUSTRIAL	LUCAS UNIVERSAL  WAS2.350 STARTER DRIVE CAP CASE FORD IH (INTERNATIONAL INTERNATIONAL MASSEY FERGUSON NEW HOLLAND 16286 16287 16288 16606 16608 16660 16670 17071 17072 17639 17644 17645 26211M/T 26211U 26227R/V 26265J/M 26268A/H 26268J/L 26269A/F 26269H/L 26291A/D 59.7mm ID, 41.1mm HOLE, 21.5mm L (2.350", 1.619", 0.845") FITS W471-00, W471-01, W471-03, W471-19, W471-21
BOSCH UNIVERSAL  WAS2.055 STARTER DRIVE CAP AUDI MERCEDES VOLVO 16445 16949 0-001-362-047 0-001-362-069 0-001-362-070 0-001-362-077 0-001-362-083 W470-14 W470-15 W470-72 W470-73 52.2mm ID, 33.2mm HOLE, 19.1mm L (2.055", 1.306", 0.750") FITS W470-15 DRIVE	BOSCH UNIVERSAL  WAS2.200 STARTER DRIVE CAP BOMAG MERCEDES 16445 16957 16999 0-001-362-038 0-001-362-600 0-001-362-601 0-001-362-605 0-001-369-004 9-000-143-408 55.9mm ID, 39.8mm HOLE, 21.5mm L (2.200", 1.568", 0.845") FITS DRIVE 2-006-209-500	MITSUBISHI UNIVERSAL  WAS2.535L STARTER DRIVE CAP BUICK OLDSMOBILE 16868 M1T50371 64.4mm ID, 47.9mm HOLE, 4.4mm L (2.535", 1.885", 0.174")

MITSUBISHI UNIVERSAL  WAS2.535S STARTER DRIVE CAP CATERPILLAR FORD HYSTER MAZDA MITSUBISHI MOTOR ONAN 16744 16799 17008 18164 18171 18173 18174 19605 19716 M2T54271 M2T54371 M2T54372 M2T54571 M2T54572 M2T56071 M2T60071 M2T60072 M2T60073 64.4mm ID, 34.3mm HOLE, 4.4mm L (.2535", 1.350", 0.174") FITS DRIVE W475-79 16744	HITACHI UNIVERSAL  WAS237-356 STARTER DRIVE ROLLER WISCONSIN 18565 2114-55100 S114-680 6.02mm OD, 9.04mm L (.237" x .356")	HITACHI MITSUBISHI UNIVERSAL  WAS238-540 STARTER DRIVE ROLLER AUDI BUICK CASE CATERPILLAR CHRYSLER CLARK 16584 16720 16780 16815 16817 16866 16868 16875 16947 17097 17110 17141 M191T70771 M191T70971 M1T50071 M1T50371 M1T50471 M1T60381 M2T25281 M2T25282 M2T25581 6.05mm OD, 13.72mm L (.238" x .540" L) SPRINGS WAS70-4, WAS40
DELCO UNIVERSAL  WAS214-440 DELCO STARTER DRIVE ROLLER HYUNDAI KIA 17989 8000169 5.43mm x 11.0mm L (.214" x .435" L) SPRINGS WAS70-5, CAP WAS1747	BOSCH MITSUBISHI UNIVERSAL  WAS238-355 STARTER DRIVE ROLLER ALFA ROMEO CHEVROLET CLARK DODGE EAGLE FORD 16194 16246 16339 16450 16514 16527 16551 16569 16579 16708 16728 16742 0-001-211-001 0-001-211-004 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 M0T20672ZC M191T27571 M2T10071 6.05mm OD, 9.02mm L (.238" x .355" L) FITS DRIVES: W470-28, W475-12, W475-18	UNIVERSAL  WAS240-440 STARTER DRIVE ROLLER 6.10mm OD, 11.18mm L (.240 x .440" L)
BOSCH UNIVERSAL  WAS236-315 STARTER DRIVE ROLLER ALFA ROMEO AUDI BMW FIAT MERCEDES MERCURY 16299 16353 16445 16462 16531 16539 16550 16557 16593 16616 16619 16683 0-001-108-054 0-001-108-065 0-001-108-115 0-001-108-145 0-001-208-211 0-001-208-405 0-001-211-207 0-001-211-242 0-001-311-100 6.00mm OD, 8.00mm L (.236" x .315") FOR COMMON 6 ROLLER DRIVES, SPRINGS WAS402	HITACHI UNIVERSAL  WAS238-490 STARTER DRIVE ROLLER NISSAN 16584 S114-254 W475-110 W475-130 W475-136 W475-139 W475-86 W475-97 W475-98 6.05mm OD, 12.45mm L (.238" x .490" L) USED ON HITACHI OSGR LARGE DIAMETER INNER RACES, SPRINGS WAS70-4, WAS40	HITACHI NIPPONDENSO UNIVERSAL  WAS276-470 STARTER DRIVE ROLLER ACURA ALLIS-CHALMERS CATERPILLAR CHEVROLET CHRYSLER DODGE 54-81501 16540 16584 16611 16694 16733 16739 16740 16803 16806 16807 16809 16811 028000-6280 028000-6350 028000-6400 028000-7000 028000-7640 028000-8130 028000-8251 028000-8371 028000-9670 7.01mm OD, 11.94mm L (.276" x .470" L) USED ON SMALL INNER RACE STYLE CLUTCHES, SPRINGS WAS70-4, WAS40

BOSCH NIPPONDENSO UNIVERSAL  WAS28 STARTER DRIVE SPRING ALFA ROMEO PORSCHE VOLKSWAGEN 16339 16450 16551 0-001-211-001 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 W470-05 W470-06 W470-07 W470-08 4.19mm OD, 20.06mm L, (.165" x .790" L) FOR 5 ROLLER DRIVES, ALSO USED IN NIPPONDENSO DD DRIVES	MITSUBISHI NIPPONDENSO UNIVERSAL  WAS306-510 STARTER DRIVE ROLLER 7.77mm OD, 12.95mm L (.306" x .510" L) NIPPONDENSO OSGR STARTERS, FOR WORN DRIVE RACES AND A TIGHTER FIT THAN WAS302-510	BOSCH UNIVERSAL  WAS402 STARTER DRIVE SPRING ALFA ROMEO BMW FIAT MERCEDES MERCURY PEUGEOT 16299 16353 16462 16531 16539 16550 16557 16593 16616 16619 16683 17236 0-001-108-054 0-001-108-065 0-001-108-115 0-001-108-145 0-001-208-211 0-001-208-405 0-001-211-207 0-001-211-242 0-001-311-100 4.52mm x 12.5mm L, (.178" x .492" L) BOSCH 6 ROLLER VERSION, ROLLER WAS236-315
LUCAS UNIVERSAL  WAS296-510 STARTER DRIVE ROLLER CASE FORD IH (INTERNATIONAL INTERNATIONAL MASSEY FERGUSON NEW HOLLAND 16286 16287 16288 16606 16608 16660 16670 17071 17072 17639 17644 17645 26211M/T 26211U 26227R/V 26265J/M 26268A/H 26268J/L 26269A/F 26269H/L 26291A/D 7.52mm OD, 12.95mm L (.296" x .510" L) FITS DRIVES: W471-00, W471-01, W471-03, W471-15, W471-21, SPRINGS WAS40, WAS70-4	NIPPONDENSO UNIVERSAL  WAS38 STARTER DRIVE SPRING ALLIS-CHALMERS BOBCAT CASE CATERPILLAR CLARK CUMMINS 54-82605 16614 16651 16656 16658 16824 16830 16881 16896 16967 16990 17283 17286 023800-5380 028000-5000 028000-5300 028000-5490 028000-5530 028000-5550 028000-5560 028000-5570 028000-5660 5.71mm OD, 21.72mm L, (.225" x .855" L) FOR 2.5KW GEAR REDUCTION DRIVE CLUTCHES, . SET 10 AND 10 WAS302-510 ROLLERS	UNIVERSAL  WAS470 BOSCH STARTER DRIVE SPRING AUDI BOMAG MERCEDES VOLVO 16445 16949 16957 16999 0-001-362-038 0-001-362-047 0-001-362-069 0-001-362-070 0-001-362-077 0-001-362-083 0-001-362-600 0-001-362-601 0-001-362-605 5mm OD, 12mm OAL DRIVE SPRING-5 USED IN A SET
MITSUBISHI NIPPONDENSO UNIVERSAL  WAS302-510 STARTER DRIVE ROLLER ACURA ALLIS-CHALMERS BARKO BLUE BIRD BOBCAT CASE 028306-0070 54-82500 16248 16251 16578 16586 16600 16612 16614 16650 16651 16656 16658 16674 023800-5380 028000-4010 028000-4240 028000-4250 028000-4320 028000-4340 028000-4510 028000-4540 028000-4551 7.67mm OD, 12.95mm L, (.302" x .510" L) 1.1KW, 1.2KW, 1.3KW, 1.4KW, 1.9KW, 2.5KW. MOST COMMON GEAR REDUCTION DRIVE CLUTCH, SPRINGS WAS102, WAS38, WAS40	HITACHI LUCAS MITSUBA NIPPONDENSO UNIVERSAL  WAS40 STARTER DRIVE SPRING BUICK CASE CATERPILLAR CLARK DODGE FORD 54-82607 16286 16287 16288 16606 16608 16660 16670 16733 16744 16799 16809 16815 028300-5381 028300-7802 228000-2291 228000-2292 228000-6471 26211M/T 26211U 26227R/V 26265J/M 4.5mm x 12.34mm x 14.5mm L, (.177" x .486" x .570" L) STRONGER TENSION THAN WAS70-4 SPRING, ALSO USED IN HITACHI, LUCAS, MITSUBISHI, NIPPONDENSO DRIVE CLUTCHES	HITACHI MITSUBA MITSUBISHI NIPPONDENSO UNIVERSAL  WAS70-4 STARTER DRIVE SPRING ACURA AUDI CHEVROLET CHRYSLER DODGE HONDA 54-81600 16540 16584 16611 16694 16720 16740 16780 16803 16806 16807 16811 16814 028301-0010 428000-0870 428000-1520 M1T50071 M1T50471 M2T50181 M2T52071 M2T52081 M2T52172 4.14mm x 11.33mm x 12.7mm L, (.163" x .446" x .500" L) GEAR REDUCTION DRIVE CLUTCHES, W475-74, W475- 90 USED FOR MANY GASOLINE APPLICATIONS WITH SMALL PINIONS

DELCO UNIVERSAL  WAS70-5 DELCO STARTER DRIVE SPRING HYUNDAI KIA 17989 8000169 4 x 10.5 x 12mm L INTERNAL DRIVE SPRING	VALEO  096544 VALEO STARTER BRAKE KIT VOLVO HD 096544 14382 97405 16464 D11E167T 2 FIBER WASHERS, 2 THIN STEEL WASHERS, 2 THICK WASHERS, BOLT, PLATE, INSULATOR TUBING	VALEO  W482-03 PARIS RHONE SOLENOID MOBILE CONTACT PEUGEOT RENAULT 03902 16484 16488 16597 16755 16757 D10E79 D8E121 D8E152 D9E27 D9E34 W452-00 38mm CONTACT HEIGHT FITS SOLENOIDS: W452-00, W452-02, CED417, CED448.
BOSCH HITACHI UNIVERSAL  WAS81 STARTER DRIVE CAP ALFA ROMEO NISSAN PORSCHE VOLKSWAGEN VOLVO PENTA 16194 16246 16339 16450 16551 16954 0-001-211-001 0-001-211-004 0-001-211-012 0-001-211-013 0-001-211-014 0-001-211-016 2114-55100 S114-180 S114-182 47.4mm ID, 33.4mm HOLE, 20.0mm L (1.865", 1.314", 0.788") FOR COMMON 5 ROLLER DRIVES	VALEO  W482-01 PARIS RHONE SOLENOID CONTACT STUD CITROEN DELOREAN FAUN FIAT JEEP LOTUS 03935 16400 16462 16484 16488 16577 16587 16597 16755 16757 17005 17019 32059 D10E48 D10E54 D10E59 D10E64 D10E79 D11E163 D11E172 D11E173 D8E121 8mm x 29mm - NEGATIVE FITS SOLENOID: CED448, 504.	VALEO  W482-04 PARIS RHONE SOLENOID MOBILE CONTACT CITROEN FAUN FIAT JEEP PEUGEOT 03908 17005 32059 D11E163 D11E172 D11E173 W452-04 34mm CONTACT HEIGHT FITS W452-04, CED511, CED514, CED519.
DELCO UNIVERSAL  WAS83 STARTER DRIVE SPRING 4mm x 9mm x 12mm, (.157" x .354" x .472") STARTER DRIVE	VALEO  W482-02 PARIS RHONE SOLENOID CONTACT STUD CITROEN DELOREAN FAUN FIAT JEEP LOTUS 03934 16400 16462 16484 16488 16577 16587 16597 16755 16757 17005 17019 32059 D10E48 D10E54 D10E59 D10E64 D10E79 D11E163 D11E172 D11E173 D8E124 8mm X 31mm - POS FITS SOLENOIDS W452-00, W452-02, CED448, 504.	VALEO  W482-06 PARIS RHONE STARTER ALIGNMENT BUSHING RENAULT 14342 62-94403 16797 0-001-208-517 534029A 534031A 534042A 534043A D9E39 D9E771 D9E774 10.30 ID x 13.02mm OD x 9mm LONG STEEL, ALSO FITS DUCELLIER STARTERS

VALEO  W482-07 PARIS RHONE SOLENOID MOBILE CONTACT <table><tr><td>BUCH</td><td>BUKH</td><td colspan="2"></td><td>CITROEN</td><td></td></tr><tr><td>EAGLE</td><td>FIAT</td><td colspan="2"></td><td>JEEP</td><td></td></tr></table> 164001645816463164841653316619 17561679717034170351708517144 D10E88D10E89D9E102 D10E881D10E90D9E127 D10E882D10E921D9E38 14 x 34 x 2.5mm, 28mm CONTACT HEIGHT FITS SOLENOID W452-01, W452-03, W452-05, W452-06. W452-14, AND W452-15.	BUCH	BUKH			CITROEN		EAGLE	FIAT			JEEP		VALEO  W482-10 VALEO BRUSH HOLDER SEAL <table><tr><td>ACME</td><td>BERTOLINI</td><td colspan="2"></td><td>BMW</td><td></td></tr><tr><td>BMW MARINE</td><td>BMW MOTORCYCLE</td><td colspan="2"></td><td>BUCH</td><td></td></tr></table> 14349 71-94100 173151766717701177301790218045 180471835518356183571835818915 594019594132D6RA100 594023594150D6RA101 594129594535D6RA104 D6RA, RUBBER SEAL UNDER BRUSH HOLDER	ACME	BERTOLINI			BMW		BMW MARINE	BMW MOTORCYCLE			BUCH		VALEO  W482-13 VALEO GEAR TRACK <table><tr><td>ACME</td><td>BERTOLINI</td><td colspan="2"></td><td>BMW</td><td></td></tr><tr><td>BMW MARINE</td><td>BMW MOTORCYCLE</td><td colspan="2"></td><td>BUCH</td><td></td></tr></table> 14396188214 18151976-94809 185801 173151766717701177301804518047 183551835618357183581891519670 594019D6RA12D6RA1559TH 594023D6RA13D6RA16 D6RA10D6RA133D6RA162 D6RA	ACME	BERTOLINI			BMW		BMW MARINE	BMW MOTORCYCLE			BUCH	
BUCH	BUKH			CITROEN																																		
EAGLE	FIAT			JEEP																																		
ACME	BERTOLINI			BMW																																		
BMW MARINE	BMW MOTORCYCLE			BUCH																																		
ACME	BERTOLINI			BMW																																		
BMW MARINE	BMW MOTORCYCLE			BUCH																																		
VALEO  W482-08 PARIS RHONE PLASTIC CE COVER <table><tr><td>EAGLE</td><td colspan="2">RENAULT</td><td></td><td></td><td></td></tr></table> 14356 16463170191703417035 D10E85D10E89 D10E87D10E92 D10E88D10E921 "D10E" SERIES.	EAGLE	RENAULT					VALEO  W482-11 VALEO STARTER BRUSH BOOT <table><tr><td>ACME</td><td>BERTOLINI</td><td colspan="2"></td><td>BMW</td><td></td></tr><tr><td>BMW MARINE</td><td>BMW MOTORCYCLE</td><td colspan="2"></td><td>BUCH</td><td></td></tr></table> 185527 19304 71-94300 173151766717701177301790218045 180471835518356183571835818915 594019594132594535 594023594150D6RA10 594070594437D6RA100 POSITIVE BRUSH BOOT	ACME	BERTOLINI			BMW		BMW MARINE	BMW MOTORCYCLE			BUCH		VALEO  W482-14 VALEO GEAR TRACK <table><tr><td>BMW MOTORCYCLE</td><td>CITROEN</td><td colspan="2"></td><td>DAEWOO</td><td></td></tr><tr><td>DEUTZ-ALLIS</td><td>FIAT</td><td colspan="2"></td><td>LANCIA</td><td></td></tr></table> 14395 186283 76-94810 176671770117730180451804718355 183581891619670301733017730737 594150D6RA141D6RA16337TH 594552D6RA146D6RA168 594609D6RA161D6RA169 BLACK GEAR	BMW MOTORCYCLE	CITROEN			DAEWOO		DEUTZ-ALLIS	FIAT			LANCIA							
EAGLE	RENAULT																																					
ACME	BERTOLINI			BMW																																		
BMW MARINE	BMW MOTORCYCLE			BUCH																																		
BMW MOTORCYCLE	CITROEN			DAEWOO																																		
DEUTZ-ALLIS	FIAT			LANCIA																																		
VALEO  W482-09 PARIS RHONE BRUSH SPRING KIT <table><tr><td>BUKH</td><td>CITROEN</td><td colspan="2"></td><td>EAGLE</td><td></td></tr><tr><td>PEUGEOT</td><td>RENAULT</td><td colspan="2"></td><td>RUGGERINI</td><td></td></tr></table> 164841653316619167021675616797 170251714417157183531835430238 182065D9E131D9E238 D9E100D9E138D9E300 D9E104D9E140D9E31 USED WITH W502-00 BRUSH HOLDER, *CONTAINS 4 SPRINGS, 4 CAPS.	BUKH	CITROEN			EAGLE		PEUGEOT	RENAULT			RUGGERINI		VALEO  W482-12 VALEO BRUSH INSULATOR <table><tr><td>ACME</td><td>BERTOLINI</td><td colspan="2"></td><td>BMW</td><td></td></tr><tr><td>BMW MARINE</td><td>BMW MOTORCYCLE</td><td colspan="2"></td><td>BUCH</td><td></td></tr></table> 181030 19310 72-94100 173151766717701177301790218045 180471835518356183571835818915 594019594129594437 594023594132594535 594070594150D6RA10 FIBERGLASS INSULATOR BETWEEN THE BRUSH AND THE TENSION SPRING	ACME	BERTOLINI			BMW		BMW MARINE	BMW MOTORCYCLE			BUCH		BOSCH VALEO  W482-15 VALEO RETAINER RING CLIP <table><tr><td>ACME</td><td>ALFA ROMEO</td><td colspan="2"></td><td>AUDI</td><td></td></tr><tr><td>BERTOLINI</td><td>BMW</td><td colspan="2"></td><td>BMW MARINE</td><td></td></tr></table> 07329219312 1-004-601-01073292 1-004-601-01276-91820 162571629916320163321633416336 163391634616353163541636216412 0-001-107-0030-001-107-0040-001-107-007 0-001-107-0080-001-107-0100-001-107-020 0-001-107-0210-001-107-0220-001-107-023 FOR 12mm SHAFTS, 2mm WIRE DIAMETER, 15.5mm OD FOR STOP COLLAR W482-16, ALSO USED IN BOSCH APPLICATIONS, ALSO SEE D48-12	ACME	ALFA ROMEO			AUDI		BERTOLINI	BMW			BMW MARINE	
BUKH	CITROEN			EAGLE																																		
PEUGEOT	RENAULT			RUGGERINI																																		
ACME	BERTOLINI			BMW																																		
BMW MARINE	BMW MOTORCYCLE			BUCH																																		
ACME	ALFA ROMEO			AUDI																																		
BERTOLINI	BMW			BMW MARINE																																		

BOSCH VALEO  W482-16 VALEO RETAINER RING <table><tr><td>ACME</td><td>AIFO</td><td>ALFA ROMEO</td></tr><tr><td>AUDI</td><td>BERTOLINI</td><td>BMW</td></tr></table> <table><tr><td>1-000-202-003</td><td>186235</td><td>19311</td></tr><tr><td>2-000-202-022</td><td>2-000-202-030</td><td>76-91819</td></tr><tr><td>16257 16296</td><td>16299 16320</td><td>16332 16336</td></tr><tr><td>16339 16341</td><td>16343 16346</td><td>16350 16353</td></tr><tr><td>0-001-107-003</td><td>0-001-107-004</td><td>0-001-107-007</td></tr><tr><td>0-001-107-008</td><td>0-001-107-010</td><td>0-001-107-020</td></tr><tr><td>0-001-107-021</td><td>0-001-107-022</td><td>0-001-107-023</td></tr></table> 12mm ID DRIVE STOP, USED WITH CLIP W482-15, UNIVERSAL CAN ALSO BE USED IN BOSCH APPLICATIONS	ACME	AIFO	ALFA ROMEO	AUDI	BERTOLINI	BMW	1-000-202-003	186235	19311	2-000-202-022	2-000-202-030	76-91819	16257 16296	16299 16320	16332 16336	16339 16341	16343 16346	16350 16353	0-001-107-003	0-001-107-004	0-001-107-007	0-001-107-008	0-001-107-010	0-001-107-020	0-001-107-021	0-001-107-022	0-001-107-023	VALEO  W482-19 VALEO SHIFT LEVER KIT <table><tr><td>CITROEN</td><td>FAUN</td><td>FIAT</td></tr><tr><td>JEEP</td><td>PERKINS</td><td>PEUGEOT</td></tr></table> <table><tr><td>182109</td><td></td><td></td></tr><tr><td>17005 32059</td><td></td><td></td></tr><tr><td>D11E163</td><td>D11E164</td><td>D11E169</td></tr><tr><td>D11E172</td><td>D11E173</td><td>D11E176</td></tr><tr><td>D11E177</td><td>D11E178</td><td>D11E187</td></tr></table> 106mm OAL KIT	CITROEN	FAUN	FIAT	JEEP	PERKINS	PEUGEOT	182109			17005 32059			D11E163	D11E164	D11E169	D11E172	D11E173	D11E176	D11E177	D11E178	D11E187	VALEO  W482-21N VALEO STARTER BRUSH HOLDER KIT <table><tr><td>BMW</td><td>BMW MARINE</td><td>BMW MOTORCYCLE</td></tr><tr><td>CHEVROLET</td><td>CITROEN</td><td>DAEWOO</td></tr></table> <table><tr><td>182536</td><td>182635</td><td>182684</td></tr><tr><td>182687</td><td>182709</td><td>594132</td></tr><tr><td>17315 17667</td><td>17701 17708</td><td>17709 17730</td></tr><tr><td>17902 18045</td><td>18047 18355</td><td>18356 18915</td></tr><tr><td>594023</td><td>594150</td><td>D6RA100</td></tr><tr><td>D6RA101</td><td>D6RA104</td><td>D6RA107</td></tr><tr><td>D6RA108</td><td>D6RA109</td><td>D6RA11</td></tr></table> (8.5 x 8.5) x 11 x 18mm D6RA SERIES, KIT INCLUDES COVER, BRUSHES, BRUSH HOLDER, SPRING, RUBBER SEALS AND INSULATORS, FIT MOST COMMON D6RA SERIES	BMW	BMW MARINE	BMW MOTORCYCLE	CHEVROLET	CITROEN	DAEWOO	182536	182635	182684	182687	182709	594132	17315 17667	17701 17708	17709 17730	17902 18045	18047 18355	18356 18915	594023	594150	D6RA100	D6RA101	D6RA104	D6RA107	D6RA108	D6RA109	D6RA11
ACME	AIFO	ALFA ROMEO																																																																											
AUDI	BERTOLINI	BMW																																																																											
1-000-202-003	186235	19311																																																																											
2-000-202-022	2-000-202-030	76-91819																																																																											
16257 16296	16299 16320	16332 16336																																																																											
16339 16341	16343 16346	16350 16353																																																																											
0-001-107-003	0-001-107-004	0-001-107-007																																																																											
0-001-107-008	0-001-107-010	0-001-107-020																																																																											
0-001-107-021	0-001-107-022	0-001-107-023																																																																											
CITROEN	FAUN	FIAT																																																																											
JEEP	PERKINS	PEUGEOT																																																																											
182109																																																																													
17005 32059																																																																													
D11E163	D11E164	D11E169																																																																											
D11E172	D11E173	D11E176																																																																											
D11E177	D11E178	D11E187																																																																											
BMW	BMW MARINE	BMW MOTORCYCLE																																																																											
CHEVROLET	CITROEN	DAEWOO																																																																											
182536	182635	182684																																																																											
182687	182709	594132																																																																											
17315 17667	17701 17708	17709 17730																																																																											
17902 18045	18047 18355	18356 18915																																																																											
594023	594150	D6RA100																																																																											
D6RA101	D6RA104	D6RA107																																																																											
D6RA108	D6RA109	D6RA11																																																																											
VALEO  W482-17 VALEO GEAR TRAIN SATURN <table><tr><td>187733</td><td>19316</td></tr><tr><td>17667</td><td></td></tr><tr><td>D6RA185</td><td>D6RA85</td></tr></table> CW 106mm, 10SPL, 12/10mm SHAFT 3-15TH GEARS, USED WITH W482-14 GEAR	187733	19316	17667		D6RA185	D6RA85	VALEO  W482-20 VALEO SHIFT LEVER <table><tr><td>ACME</td><td>BERTOLINI</td><td>BMW</td></tr><tr><td>BMW MARINE</td><td>BMW MOTORCYCLE</td><td>BUCH</td></tr></table> <table><tr><td>181084</td><td>186709</td><td>355-40000</td></tr><tr><td>55-9400</td><td></td><td></td></tr><tr><td>17315 17701</td><td>18045 18047</td><td>18355 18356</td></tr><tr><td>18357 18358</td><td>18915 18916</td><td>19670 30176</td></tr><tr><td>D6RA10</td><td>D6RA11</td><td>D6RA12</td></tr><tr><td>D6RA13</td><td>D6RA15</td><td>D6RA16</td></tr><tr><td>D6RA17</td><td>D6RA18</td><td>D6RA19</td></tr></table> 75mm OAL, 25.5mm OPENING D6RA SERIES, ALTERNATE W482-20N	ACME	BERTOLINI	BMW	BMW MARINE	BMW MOTORCYCLE	BUCH	181084	186709	355-40000	55-9400			17315 17701	18045 18047	18355 18356	18357 18358	18915 18916	19670 30176	D6RA10	D6RA11	D6RA12	D6RA13	D6RA15	D6RA16	D6RA17	D6RA18	D6RA19	VALEO  W482-22N VALEO STARTER PLANETARY SHAFT ASSY <table><tr><td>IVECO</td><td>JOHN DEERE</td><td>R.V.I.</td></tr><tr><td>RENAULT</td><td></td><td></td></tr></table> <table><tr><td>182836</td><td>19319</td><td>557570</td></tr><tr><td>594307</td><td></td><td></td></tr><tr><td>17086 19794</td><td></td><td></td></tr><tr><td>D7R14</td><td>D7R39</td><td>D7R41</td></tr><tr><td>D7R61</td><td>D8R39</td><td></td></tr></table> 12mm SHAFT, 78mm L, 146mm OAL 3 GEAR	IVECO	JOHN DEERE	R.V.I.	RENAULT			182836	19319	557570	594307			17086 19794			D7R14	D7R39	D7R41	D7R61	D8R39																						
187733	19316																																																																												
17667																																																																													
D6RA185	D6RA85																																																																												
ACME	BERTOLINI	BMW																																																																											
BMW MARINE	BMW MOTORCYCLE	BUCH																																																																											
181084	186709	355-40000																																																																											
55-9400																																																																													
17315 17701	18045 18047	18355 18356																																																																											
18357 18358	18915 18916	19670 30176																																																																											
D6RA10	D6RA11	D6RA12																																																																											
D6RA13	D6RA15	D6RA16																																																																											
D6RA17	D6RA18	D6RA19																																																																											
IVECO	JOHN DEERE	R.V.I.																																																																											
RENAULT																																																																													
182836	19319	557570																																																																											
594307																																																																													
17086 19794																																																																													
D7R14	D7R39	D7R41																																																																											
D7R61	D8R39																																																																												
VALEO  W482-18 VALEO GEAR TRAIN <table><tr><td>FIAT</td><td>SATURN</td><td></td></tr></table> <table><tr><td>186920</td><td>19317</td><td>76-94811</td></tr><tr><td>17667</td><td></td><td></td></tr><tr><td>D6RA165</td><td>D6RA187</td><td>D6RA65</td></tr></table> CW 105.5mm, 10SPL, 12/10mm SHAFT 3-22TH GEARS, USED WITH W482-13.	FIAT	SATURN		186920	19317	76-94811	17667			D6RA165	D6RA187	D6RA65	VALEO  W482-20N VALEO SHIFT LEVER WITH PLUNGER <table><tr><td>ACME</td><td>BERTOLINI</td><td>BMW</td></tr><tr><td>BMW MARINE</td><td>BMW MOTORCYCLE</td><td>BUCH</td></tr></table> <table><tr><td>182402</td><td>594068</td><td></td></tr><tr><td>17315 17701</td><td>17902 18045</td><td>18047 18355</td></tr><tr><td>18356 18357</td><td>18358 18915</td><td>18916 19670</td></tr><tr><td>D6RA10</td><td>D6RA100</td><td>D6RA108</td></tr><tr><td>D6RA11</td><td>D6RA12</td><td>D6RA13</td></tr><tr><td>D6RA15</td><td>D6RA16</td><td>D6RA17</td></tr></table> 75mm OAL, 25mm OPENING PLASTIC, PIVOT IS FROM CENTER OF PIN TO END OF FORK, WITH PLUNGER, SPRING AND PIN, OEM	ACME	BERTOLINI	BMW	BMW MARINE	BMW MOTORCYCLE	BUCH	182402	594068		17315 17701	17902 18045	18047 18355	18356 18357	18358 18915	18916 19670	D6RA10	D6RA100	D6RA108	D6RA11	D6RA12	D6RA13	D6RA15	D6RA16	D6RA17	VALEO  W482-23N VALEO STARTER SMALL PARTS KIT JOHN DEERE <table><tr><td>19327</td><td>594310</td></tr><tr><td>17086</td><td></td></tr><tr><td>D7R14</td><td></td></tr></table> 77mm OD, 7x14x14 BRUSH, 12.1x15.1x12mm BUSHING D7R KIT, BRUSH HOLDER PARTS, BUSHING AND CLIPS	19327	594310	17086		D7R14																																		
FIAT	SATURN																																																																												
186920	19317	76-94811																																																																											
17667																																																																													
D6RA165	D6RA187	D6RA65																																																																											
ACME	BERTOLINI	BMW																																																																											
BMW MARINE	BMW MOTORCYCLE	BUCH																																																																											
182402	594068																																																																												
17315 17701	17902 18045	18047 18355																																																																											
18356 18357	18358 18915	18916 19670																																																																											
D6RA10	D6RA100	D6RA108																																																																											
D6RA11	D6RA12	D6RA13																																																																											
D6RA15	D6RA16	D6RA17																																																																											
19327	594310																																																																												
17086																																																																													
D7R14																																																																													

VALEO  W482-24N VALEO SHIFT LEVER WITH PLUNGER AUDI BUKH BEDFORD CITROEN BUCH EAGLE 182058 19314 16400164081653316547 1644316587D9E100D9E102D9E107 1645816619D9E101D9E104D9E109 1648416702 1653016756 91mm OAL, 52mm PIVOT, 25mm OPENING PLASTIC, PIVOT IS FROM CENTER OF PIN TO END OF FORK, WITH PLUNGER, SPRING AND PIN, OEM						VALEO  W482-27N VALEO SHIFT LEVER KIT BMW MOTORCYCLE OPEL FIAT PEUGEOT MERCEDES 200181 594645 1891730737 31205D6G2D6G33 33168D6G3D6G5 33252 73mm OAL, 44mm PIVOT, 22mm POENING D6GS					
VALEO  W482-25N VALEO SHIFT LEVER WITH PLUNGER EAGLE RENAULT 300838 1646317019 1703417035 D10E85D10E881D10E90 D10E87D10E882D10E92 D10E88D10E89D10E921 91mm OAL, 54mm PIVOT, 25mm OPENING PLASTIC, PIVOT IS FROM CENTER OF PIN TO END OF FORK, WITH PLUNGER, SPRING AND PIN, OEM						VALEO  W482-28N VALEO SHIFT LEVER-FS14 SERIES HYUNDAI 19363 19090 FS14N1 75mm OAL, 46mm PIVOT, 21.5mm OPENING PLASTIC					
VALEO  W482-26N VALEO D6G SERIES PARTS KIT BMW MOTORCYCLE OPEL FIAT PEUGEOT MERCEDES 200183 594647 1891730737 31205D6G2D6G33 33168D6G3D6G5 33252 12.05 x 15.04 x 10mm DE BUSHING AND DRIVE STOP RETAINER						MANDO MITSUBISHI VALEO  W485-139 MITSUBISHI SOLENOID STRIKER PLATE ALLIS-CHALMERS BLUE BIRD AMC BUICK AUDI CADILLAC 1651416671M1T50071M1T70281M1T70481 1652016717M1T50471M1T70283M1T70482 1652216720M1T60281M1T70381M1T71081 1652716728 1656916742 1658416744 30mm x 16mm x 11mm x 3mm THICK, 9.2mm ID COPPER, DESIGNED FOR THE COMMON NON-"R" TERMINAL CRIMP STYLE SOLENOIDS FOR MANDO, MITSUBISHI AND SOME VALEO, ALTERNATE W485-112					

Wagner Alternators and Supplies, Inc.

Corporate Office:

Mailing Address:

Telephone Numbers:

FAX Numbers:

E-mail:

13352 Elliot Avenue Chino, California 91710 USA

P.O. Box 2680 Chino Hills, California 91709 USA

Sales (800) 345-5927 Local (909) 465-1950

(909) 465-5032

sales@wagneralt.com

Web Site:

www.wagneralt.com

